

**12J900**

# Illustrated Parts List

## Model Series

# 12J900

TYPE NUMBERS  
0106.

### TABLE OF CONTENTS


Air Cleaner .....	4
Blower Housing/Shrouds .....	5
Camshaft .....	2
Carburetor .....	3
Controls .....	4
Crankshaft .....	2
Cylinder .....	2
Electrical .....	4
Engine Sump .....	2
Exhaust System .....	4
Flywheel .....	5
Flywheel Brake .....	4
Fuel Supply .....	3
Governor Spring .....	4
Ignition .....	4
Kits/Gaskets .....	2 & 3
Lubrication .....	2
Piston Group .....	2
Rewind Starter .....	5
Valves .....	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted,  
in any form or by any means, electronic or mechanical, including photocopying,  
recording or by any information storage and retrieval system, without permission  
in writing from Briggs & Stratton Corporation.


# 12J900

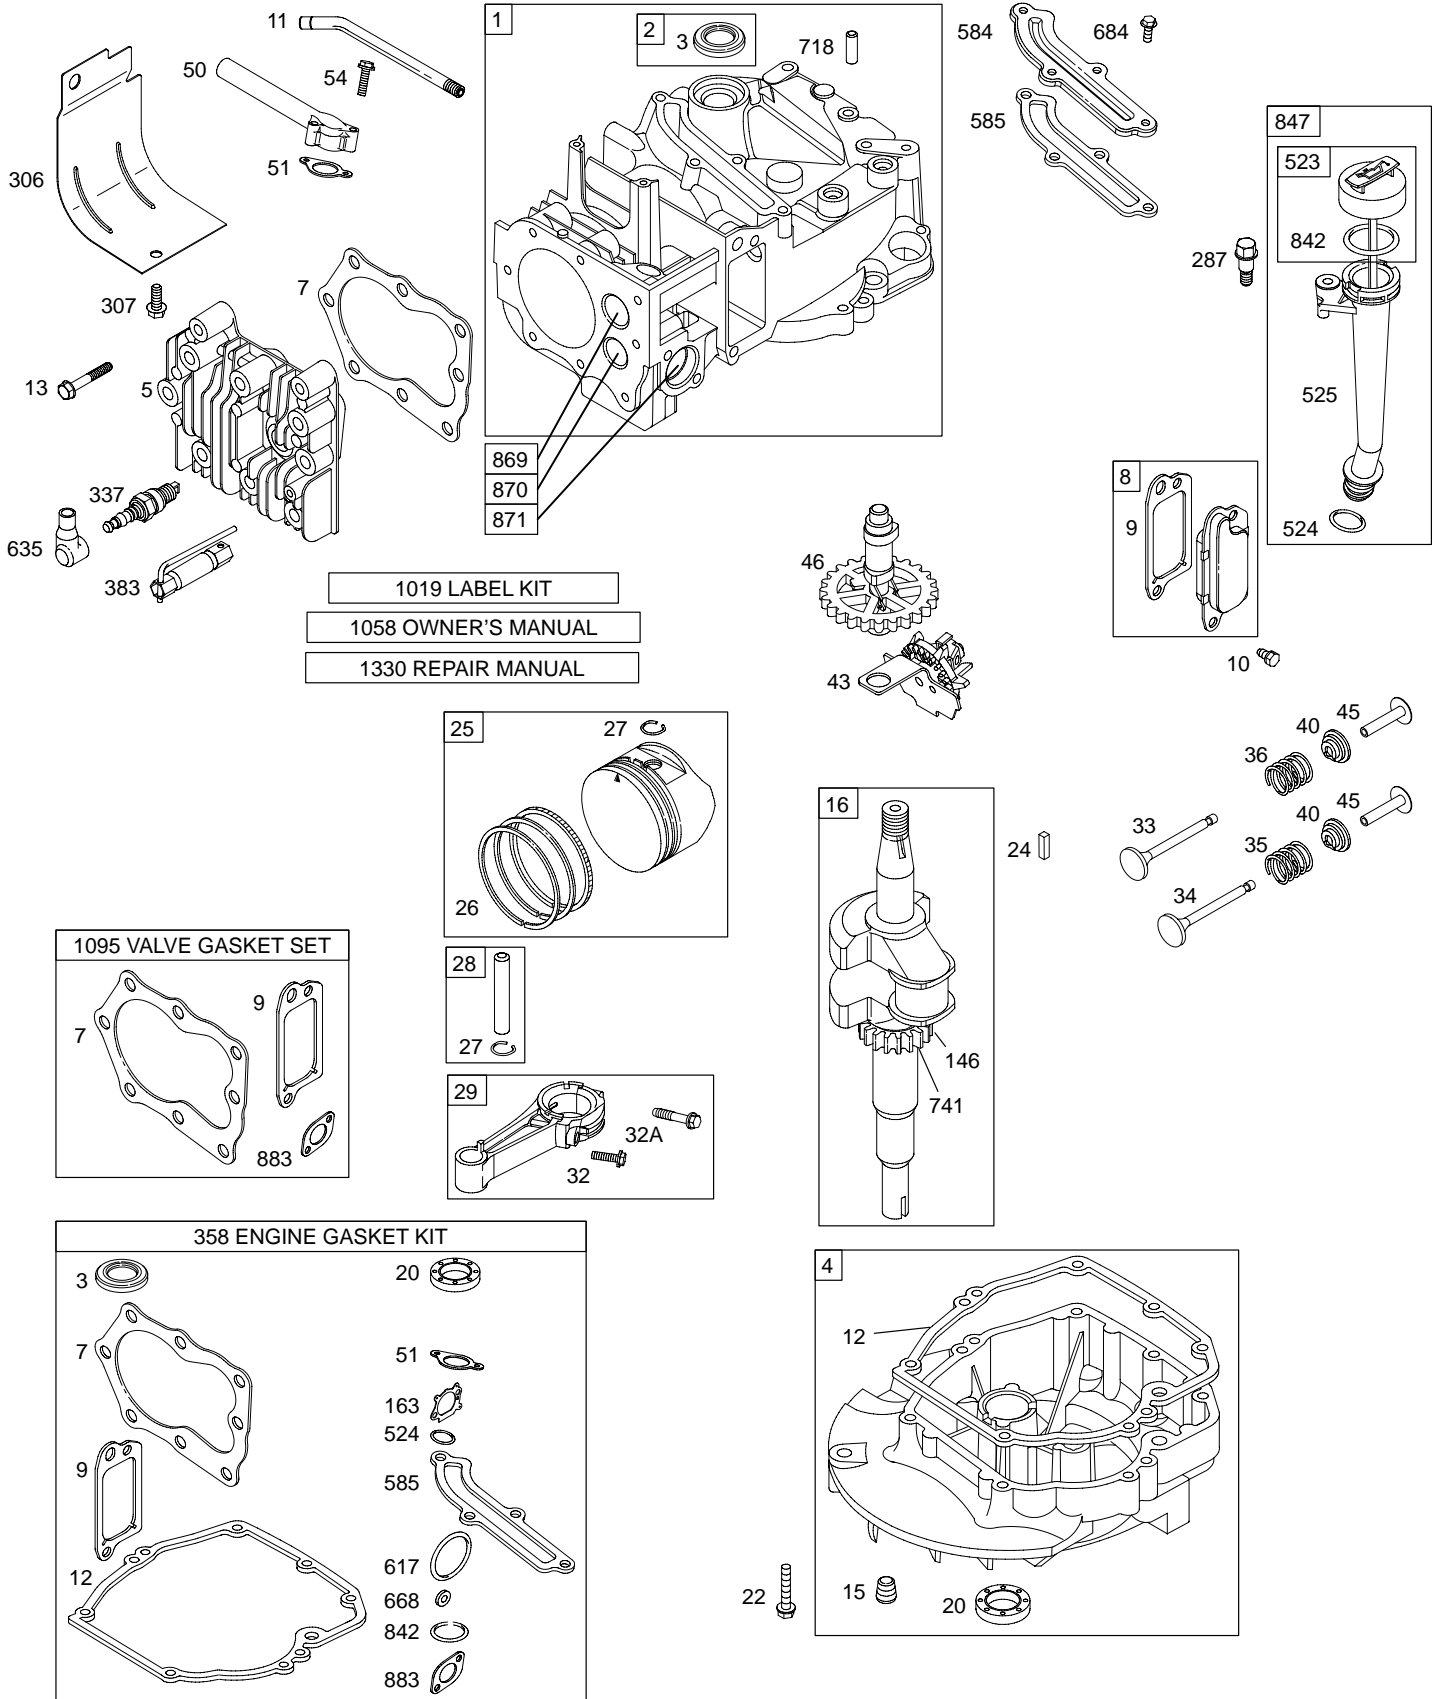




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5955-2 Assemblies include all parts shown in frames. 09/28/2004



# 12J900

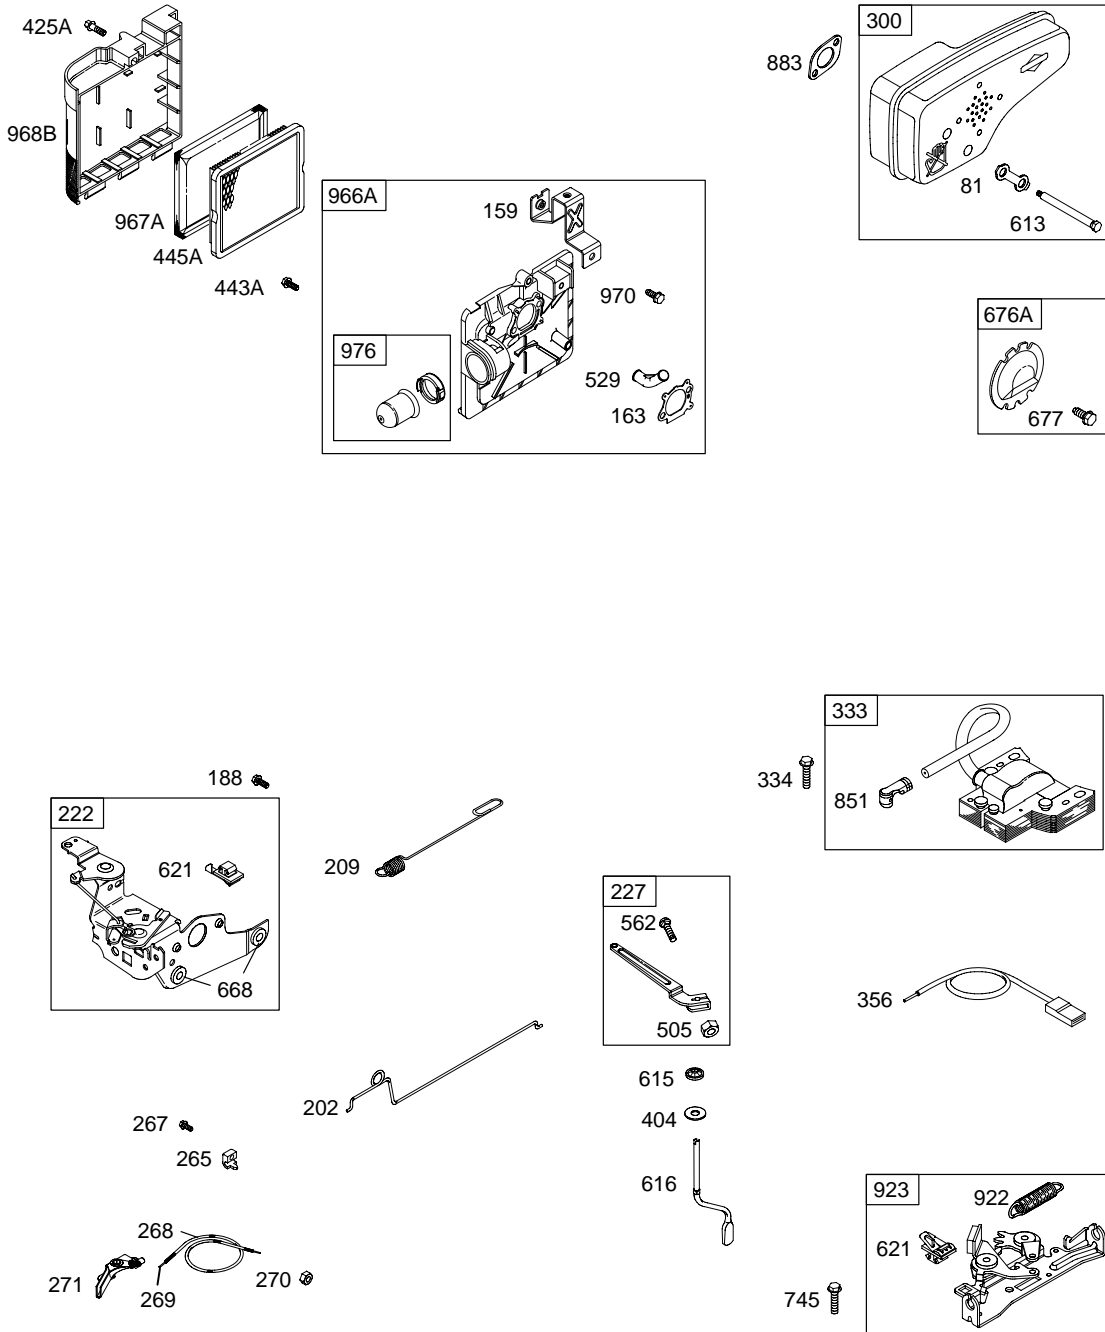

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
5955-4 Assemblies include all parts shown in frames. 09/28/2004

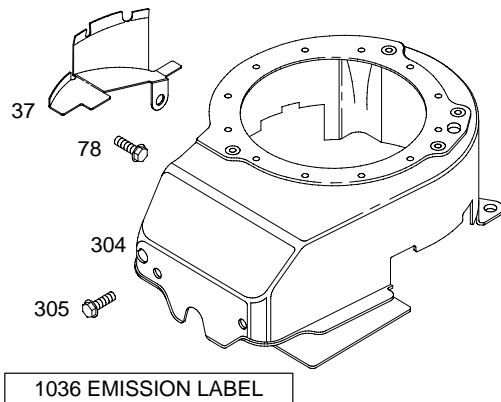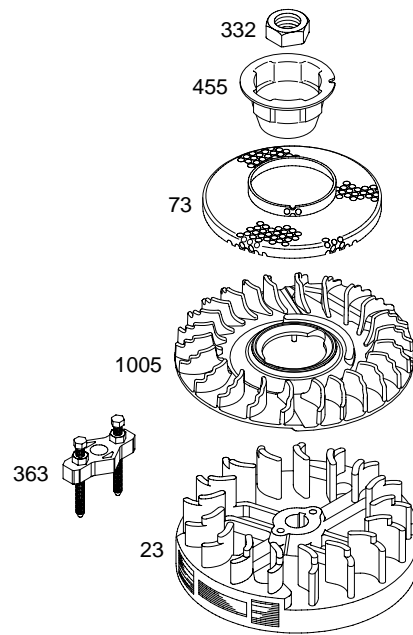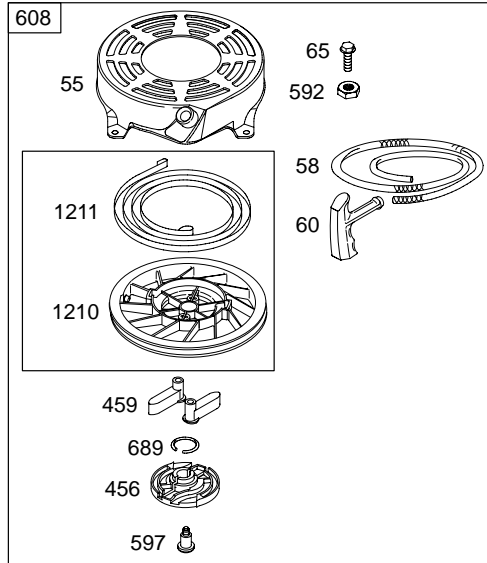

# 12J900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697324	Cylinder Assembly	26	790360	Ring Set (Standard) (Used After Code Date 04031400).	73	691221	Screen—Rotating
2	399269	Kit—Bushing/Seal (Magneto Side)				78	691108	Screw (Flywheel Guard)
3	★299819	Seal—Oil (Magneto Side)				81	691740	Lock—Muffler Screw
4	493279	Sump—Engine				95	691636	Screw (Throttle Valve)
5	691160	Head—Cylinder				97	493267	Shaft—Throttle (Metal)
7	★∅692249	Gasket—Cylinder Head						
8	495786	Breather Assembly						
9	★∅272481	Gasket—Breather						
10	94650	Screw (Breather Assembly)						
11	691781	Tube—Breather	27	691866	Lock—Piston Pin	104	●691242	Pin—Float Hinge
12	★692232	Gasket—Crankcase	28	499423	Pin—Piston	117	494870	Jet—Main (Standard)
13	690912	Screw (Cylinder Head)	29	499424	Rod—Connecting	118	497315	Jet—Main (High Altitude)
15	691680	Plug—Oil Drain (Square Socket)	32	691664	Screw (Connecting Rod)	121	498260	Kit—Carburetor Overhaul
16	691451	Crankshaft	32A	695759	Screw (Connecting Rod)	125	698444	Carburetor (Primer System)
20	★399781	Seal—Oil (PTO Side) (Auxiliary PTO)	33	262651	Valve—Exhaust	127	●694468	Plug—Welch (3/8" Diameter)
22	691092	Screw (Crankcase Cover/Sump)	34	262652	Valve—Intake	130	691203	Valve—Throttle
23	692315	Flywheel (Rewind Start)	35	691270	Spring—Valve (Intake)			
24	222698	Key—Flywheel	36	691270	Spring—Valve (Exhaust)			
25	790358	Piston Assembly (Standard) (Used After Code Date 04031400).	37	694086	Guard—Flywheel			
		<b>Note</b> ——— 499433 Piston Assembly (Standard) (Used Before Code Date 04031500). 499435 Piston Assembly (.020" Oversize)	40	692194	Retainer—Valve			
			43	691997	Slinger—Governor/Oil			
			45	690548	Tappet—Valve	133	398187	Float—Carburetor
			46	691449	Camshaft	134	●398188	Kit—Needle/Seat
			50	497465	Manifold—Intake	137	◆693981	Gasket—Float Bowl
			51	★272199	Gasket—Intake	146	690979	Key—Timing
			54	691650	Screw (Intake Manifold)	159	691753	Bracket—Air Cleaner Primer
			55	691421	Housing—Rewind Starter	163	★◆272653	Gasket—Air Cleaner
			58	280399	Rope—Starter (Cut To Required Length)	187	691050	Line—Fuel (Cut to Required Length)
			60	281434	Grip—Starter Rope	188	690877	Screw (Control Bracket)
			65	690837	Screw (Rewind Starter)	190	690940	Screw (Fuel Tank)

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

∅ Included in Valve Gasket Set—Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
202	691829	Link—Mechanical Governor	383	89838	Wrench—Spark Plug	633	◆691321	Seal—Choke/Throttle Shaft
209	691291	Spring—Governor	404	690272	Washer (Governor Crank)	635	66538	Boot—Spark Plug
222	692031	Bracket—Control (Remote/Manual Friction)(Primer)	425A	690670	Screw (Air Cleaner Cover)	668	★493823	Spacer
227	690783	Lever—Governor Control	443A	692523	Screw (Air Cleaner Primer Base)	670	692294	Spacer—Fuel Tank
265	690798	Clamp—Casing	445A	491588	Filter—Air Cleaner Cartridge	676A	393756	Deflector—Muffler
267	691044	Screw (Casing Clamp)	455	695161	Cup—Flywheel	677	690661	Screw (Muffler Deflector)
268	691025	Casing—Control Wire (Cut To Required Length)	456	692299	Plate—Pawl Friction	684	690345	Screw (Breather Passage Cover)
269	691026	Wire—Control (Cut To Required Length)	459	281505	Pawl—Ratchet	689	691855	Spring—Friction
270	691027	Nut (Control Wire Casing)	505	691251	Nut (Governor Control Lever)	718	690959	Pin—Locating
271	691028	Lever—Control	523	495264	Dipstick	741	790345	Gear—Timing (Use Without Woodruff Key)
276	◆271716	Washer—Sealing	524	★692296	Seal—Dipstick Tube	————— <b>Note</b> —————		
287	690940	Screw (Dipstick Tube)	525	495265	Tube—Dipstick	691830		Gear—Timing (Uses Woodruff Key)
300	692038	Muffler	529	691923	Grommet	745	691648	Screw (Brake)
304	695892	Housing—Blower	562	92613	Bolt (Governor Control Lever)	842	★691031	Seal—O Ring (Dipstick Tube)
305	691108	Screw (Blower Housing)	584	697734	Cover—Breather Passage	847	692017	Dipstick/Tube Assembly
306	690450	Shield—Cylinder	585	★691879	Gasket—Breather Passage	851	493880	Terminal—Spark Plug
307	690345	Screw (Cylinder Shield)	592	690800	Nut (Rewind Starter)	869	691155	Seat—Valve (Intake)
332	690662	Nut (Flywheel)	597	691696	Screw (Pawl Friction Plate)	870	690380	Seat—Valve (Exhaust)
333	802574	Armature—Magneto	601	95162	Clamp—Hose	871	262001	Bushing—Valve Guide (Exhaust)
334	691061	Screw (Magneto Armature)	608	497680	Starter—Rewind	————— <b>Note</b> —————		
337	802592	Plug—Spark	613	691340	Screw (Muffler)	63709		Bushing—Valve Guide (Intake)
356	692390	Wire—Stop	615	690340	Retainer—Governor Shaft	883	★∅691881	Gasket—Exhaust
358	497316	Gasket Set—Engine	616	698801	Crank—Governor	922	692135	Spring—Brake
363	19069	Flywheel Puller	617	★◆270344	Seal—O Ring (Intake Manifold)	923	695891	Brake
365	692524	Screw (Carburetor)	621	692310	Switch—Stop	930	691919	Guard—Rewind

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

∅ Included in Valve Gasket Set—Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

# 12J900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
957	397974	Cap–Fuel Tank (Plastic)	976	694395	Primer–Carburetor	1058	275177	Manual–Owner’s
966A	496116	Base–Air Cleaner Primer	977	498261	Gasket Set–Carburetor	1059	692311	Kit–Screw/Washer
967A	493537	Filter–Pre Cleaner	1005	691346	Fan–Flywheel	1095	498528	Gasket Set–Valve
968B	692298	Cover–Air Cleaner	1019	494256	Kit–Label	1210	498144	Pulley/Spring Assembly (Pulley)
970	691669	Screw (Air Cleaner Primer Bracket)	1036	790412	Label–Emission (Used After Code Date 04063000).	1211	498144	Pulley/Spring Assembly (Spring)
972	695887	Tank–Fuel (Plastic)			<b>Note</b>	1330	270962	Manual–Repair
975	493640	Bowl–Float			695111 Label–Emission (Used Before Code Date 04070100).			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

5955–8

Assemblies include all parts shown in frames.

09/28/2004