



Illustrated Parts List

Model Series

12Q800

TYPE NUMBERS
0120 through 0282.

TABLE OF CONTENTS


Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electrical	4
Engine Sump	2
Flywheel	5
Flywheel Brake	4
Exhaust System	4
Fuel Supply	4
Governor Spring	4
Ignition	4
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2







PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.















12Q800

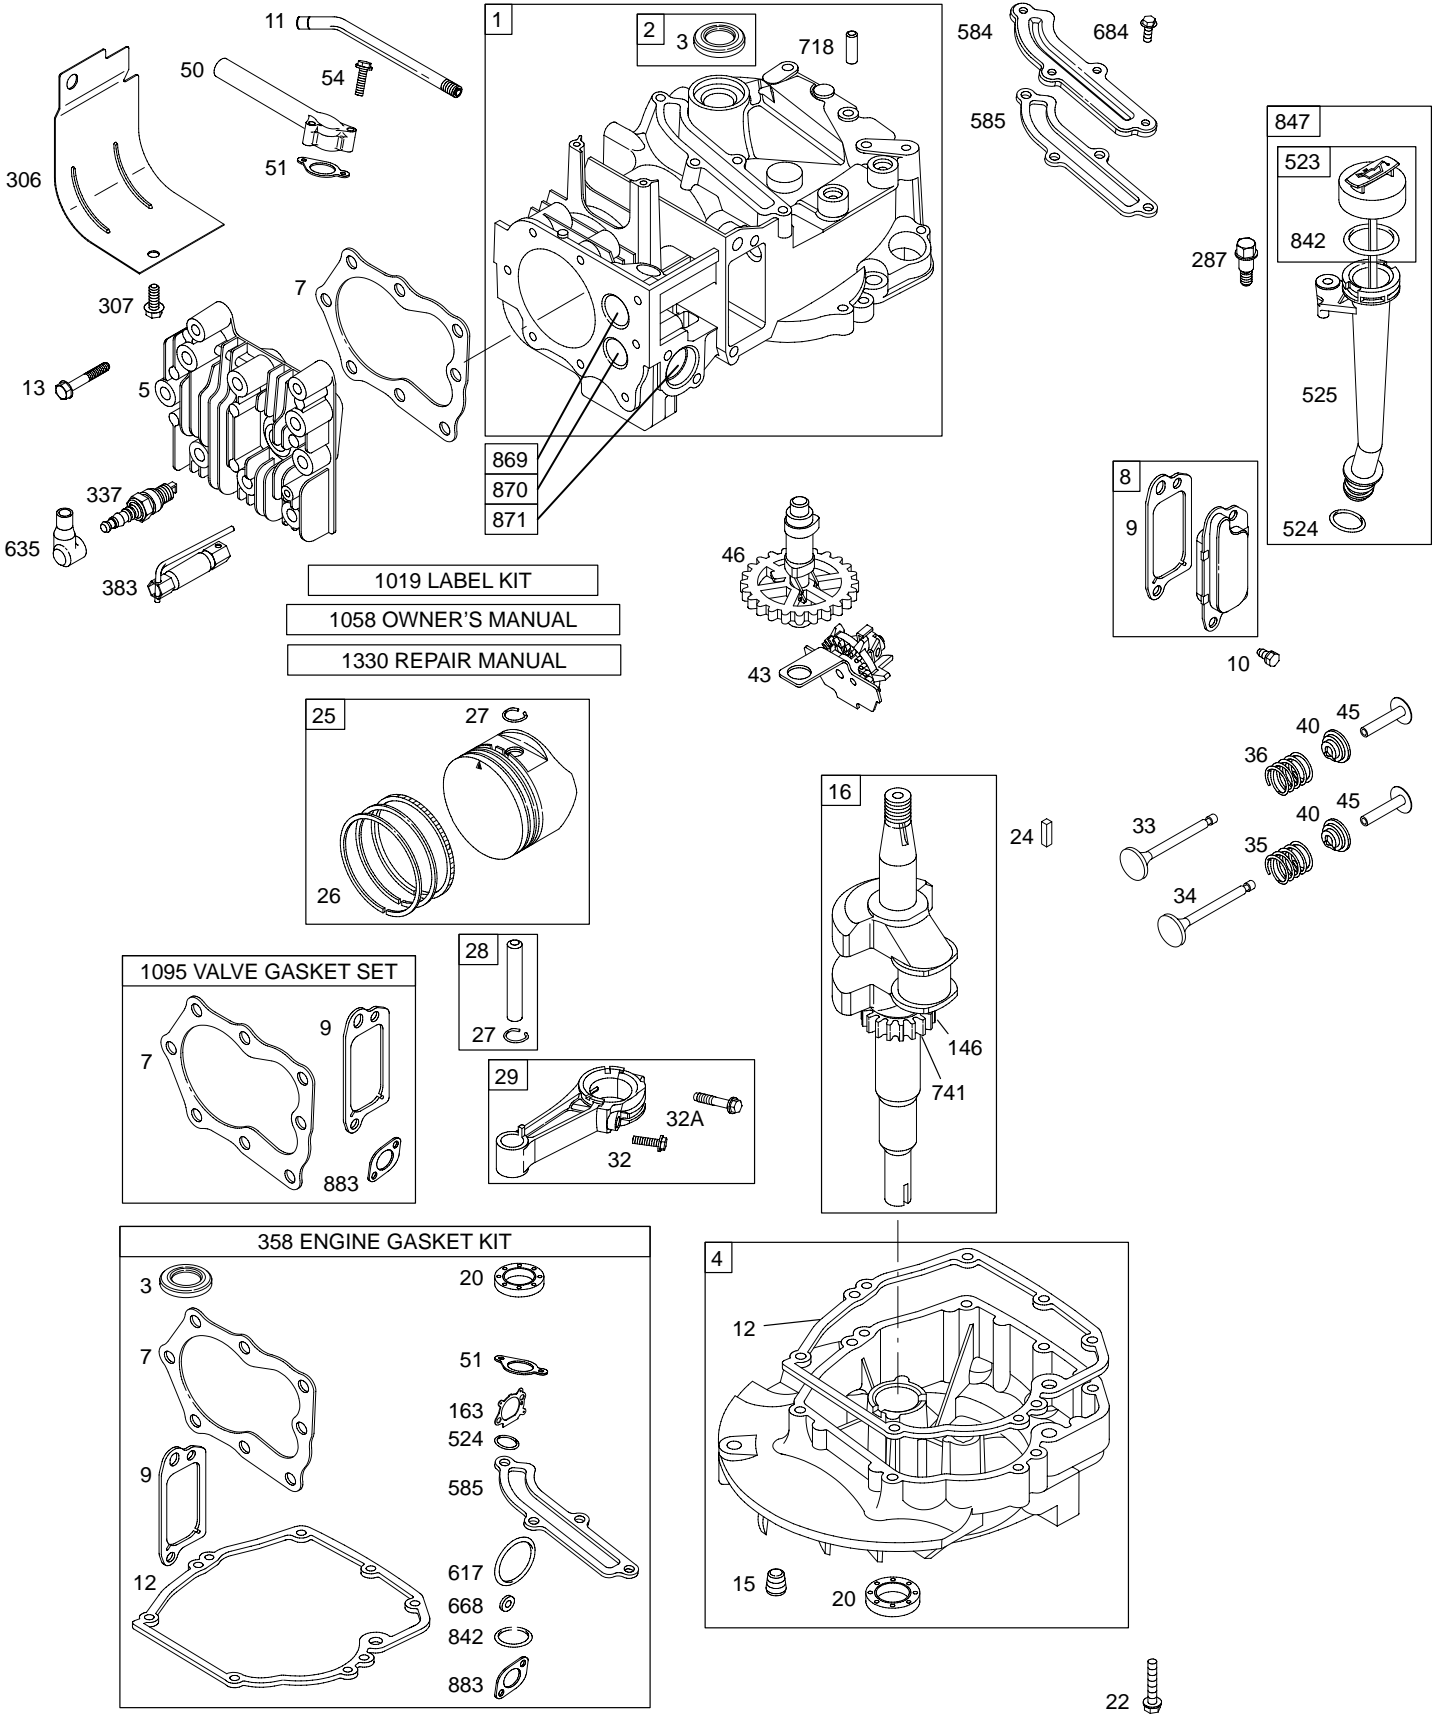





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5119-2 Assemblies include all parts shown in frames. 09/28/2004

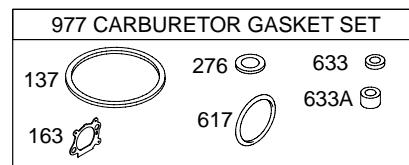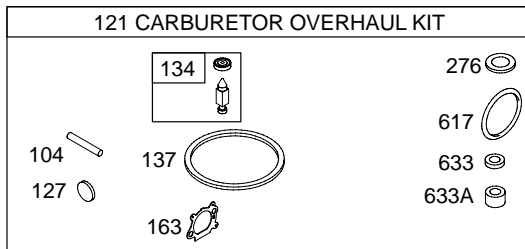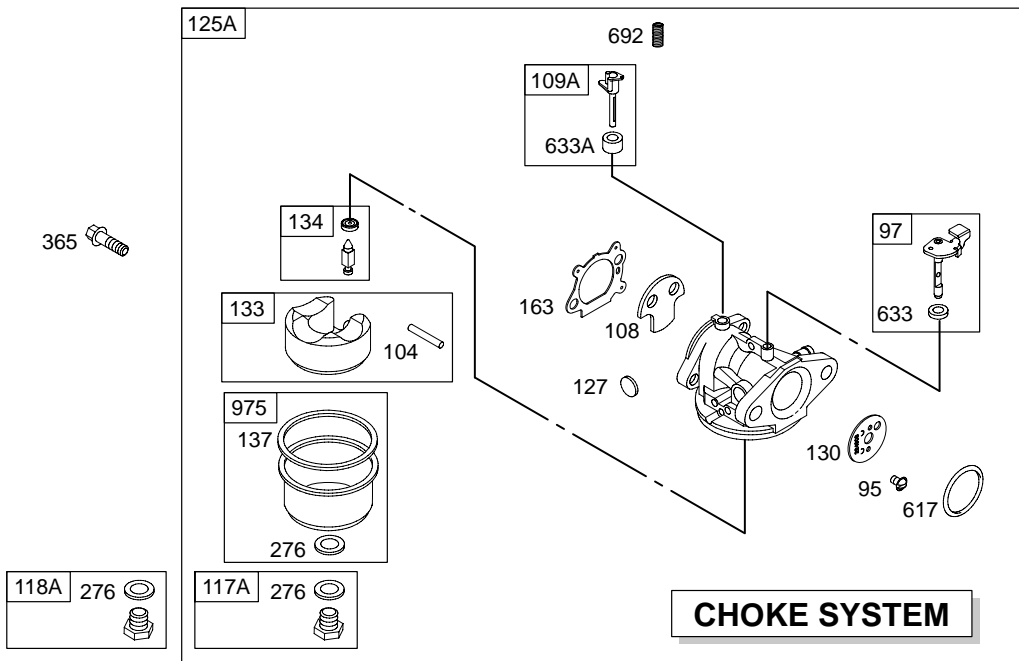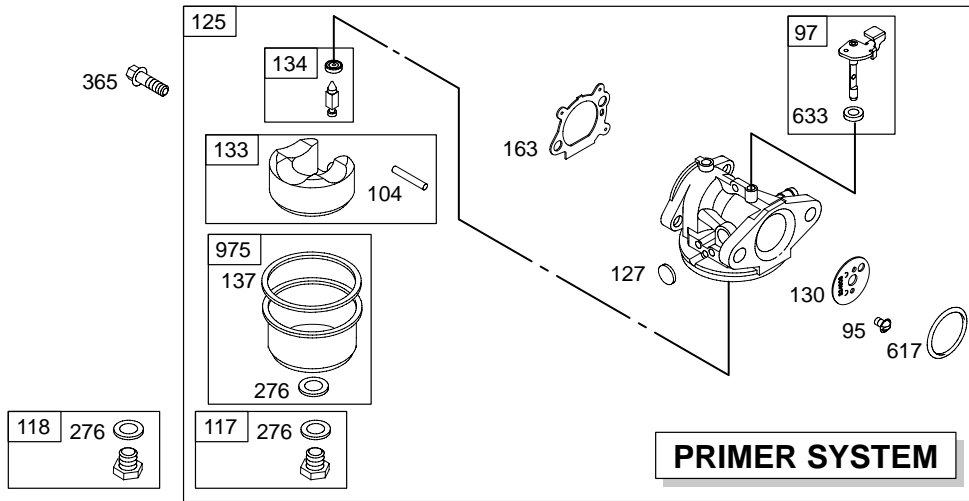



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5119-3 Assemblies include all parts shown in frames. 09/28/2004

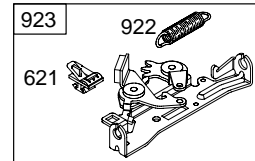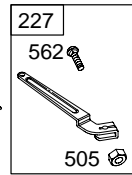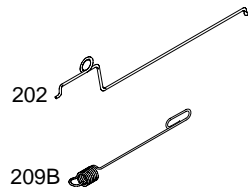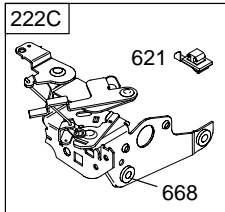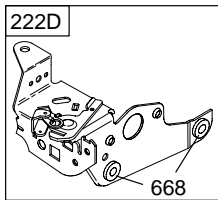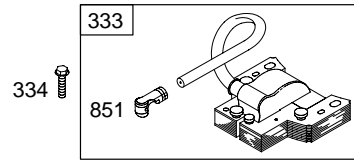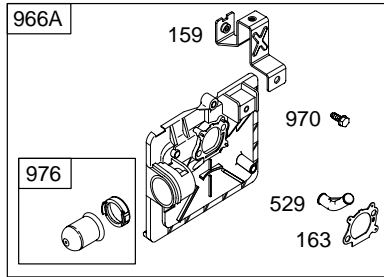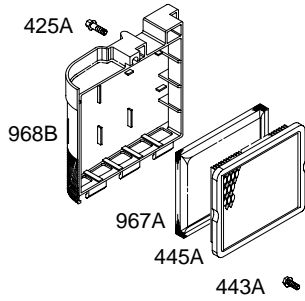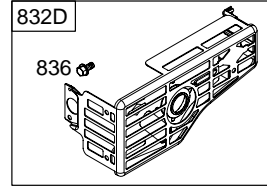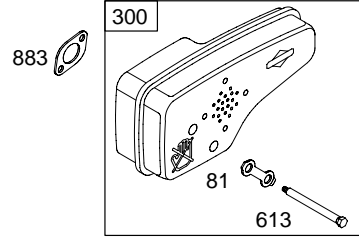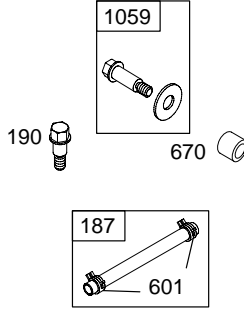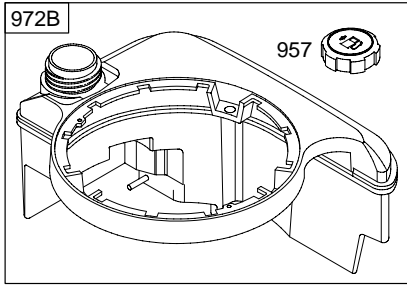

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5119-4 Assemblies include all parts shown in frames. 09/28/2004

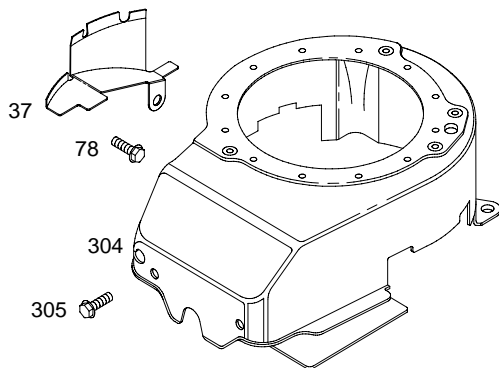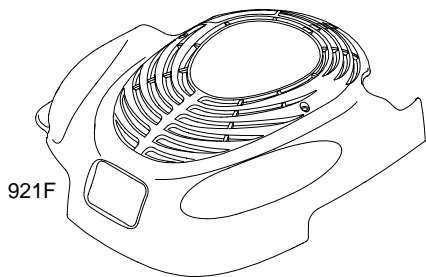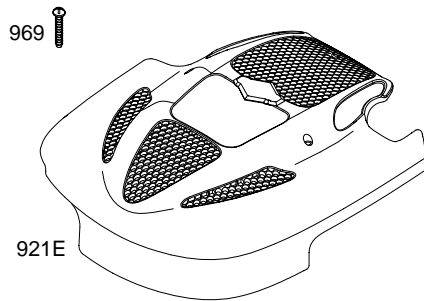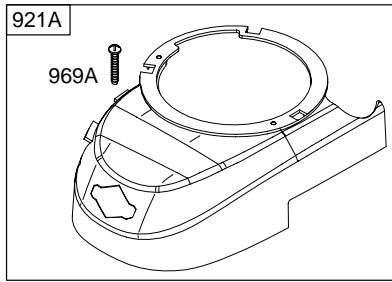

1036 EMISSION LABEL

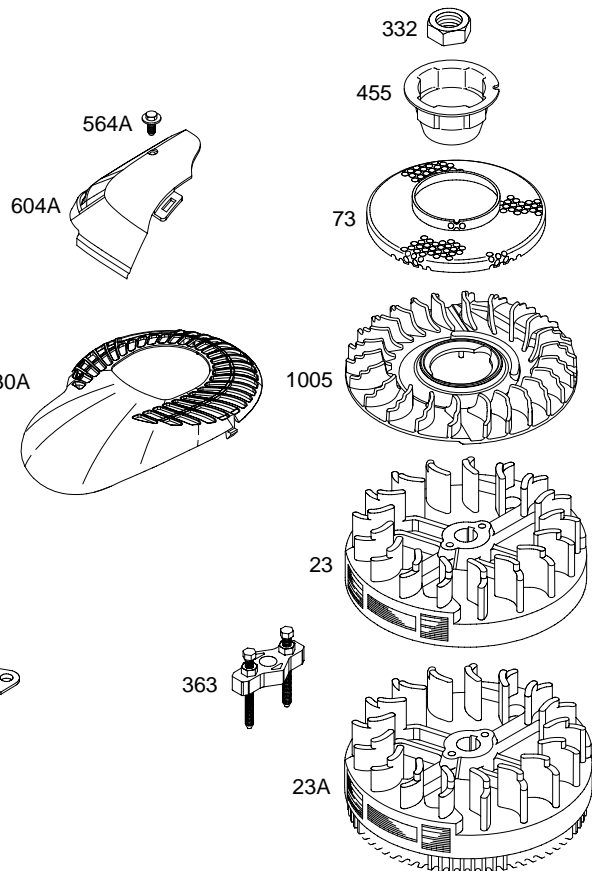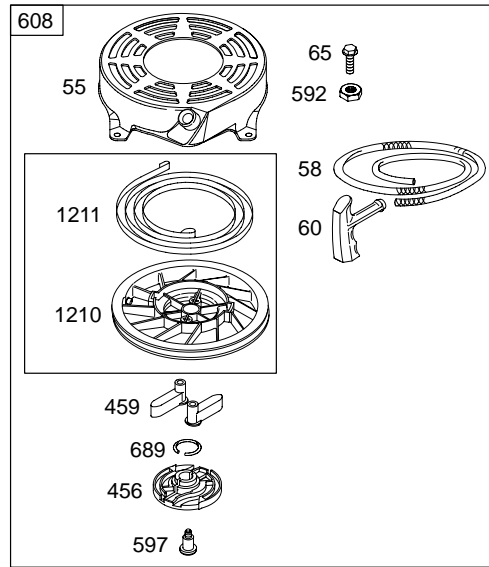

12Q800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	25	790359	Piston Assembly (Standard) (Used After Code Date 04031400).	29	499424	Rod-Connecting (Standard)
2	399269	Kit-Bushing/Seal (Magneto Side)				32	691664	Screw (Connecting Rod)
3	★299819	Seal-Oil (Magneto Side)			————— Note —————	32A	695759	Screw (Connecting Rod)
4	493279	Sump-Engine			499429 Piston Assembly (Standard) (Used Before Code Date 04031500).	33	262651	Valve-Exhaust
5	691160	Head-Cylinder			499430 Piston Assembly (.010" Oversize)	34	262652	Valve-Intake
7	★Ø692249	Gasket-Cylinder Head			499431 Piston Assembly (.020" Oversize)	35	691270	Spring-Valve (Intake)
8	695250	Breather Assembly			499432 Piston Assembly (.030" Oversize)	36	691270	Spring-Valve (Exhaust)
9	★Ø272481	Gasket-Breather			————— Note —————	37	694086	Guard-Flywheel
10	691125	Screw (Breather Assembly)	26	790360	Ring Set (Standard) (Used After Code Date 04031400).	40	692194	Retainer-Valve
11	691781	Tube-Breather			499425 Ring Set (Standard) (Used Before Code Date 04031500).	43	691997	Slinger-Governor/Oil
12	★692232	Gasket-Crankcase			499426 Ring Set (.010" Oversize)	45	690548	Tappet-Valve
13	690912	Screw (Cylinder Head)			499427 Ring Set (.020" Oversize)	46	691449	Camshaft
15	691680	Plug-Oil Drain (Square Socket)			499428 Ring Set (.030" Oversize)	50	497465	Manifold-Intake
16	691451	Crankshaft			————— Note —————	51	★272199	Gasket-Intake
		————— Note —————			691450 Crankshaft Used on Type No(s). 0272.	54	691650	Screw (Intake Manifold)
		694849 Crankshaft Used on Type No(s). 0120.			691451 Crankshaft Used on Type No(s). 0272.	55	691421	Housing-Rewind Starter
20	★399781	Seal-Oil (PTO Side)			691452 Crankshaft Used on Type No(s). 0120.	58	697316	Rope-Starter (Cut To Required Length)
22	691092	Screw (Crankcase Cover/Sump)			691453 Crankshaft Used on Type No(s). 0120.	60	281434	Grip-Starter Rope
23	692315	Flywheel (Rewind Starter)			691454 Crankshaft Used on Type No(s). 0120.	65	690837	Screw (Rewind Starter)
23A	691992	Flywheel (Electric Starter)	27	691866	Lock-Piston Pin	73	691222	Screen-Rotating
24	222698	Key-Flywheel	28	499423	Pin-Piston (Standard)	78	691108	Screw (Flywheel Guard)
						81	691740	Lock-Muffler Screw
						95	691636	Screw (Throttle Valve)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
97	696565	Shaft–Throttle (Plastic) Note ——— 493267 Shaft–Throttle (Metal)	190	690940	Screw (Fuel Tank)	306	690450	Shield–Cylinder
104	●691242	Pin–Float Hinge	202	691829	Link–Mechanical Governor	307	690345	Screw (Cylinder Shield)
108	691182	Valve–Choke	209B	699056	Spring–Governor Note ——— 691290 Spring– Governor	332	690662	Nut (Flywheel)
109A	498593	Shaft–Choke			Used on Type No(s). 0120.	333	802574	Armature–Magneto
117	498978	Jet–Main (Standard)	222C	692150	Bracket–Control (Remote/Manual Friction)(Variable Speed and 5 Position Manual Choke)	334	691061	Screw (Magneto Armature)
117A	498978	Jet–Main (Standard) Used on Type No(s). 0120.	222D	692467	Bracket–Control (Fixed Speed)	337	802592	Plug–Spark
118	497466	Jet–Main (High Altitude)	227	690783	Lever–Governor Control	356	692390	Wire–Stop
118A	498975	Jet–Main (High Altitude) Used on Type No(s). 0120.	265	690798	Clamp–Casing	358	497316	Gasket Set–Engine
121	498260	Kit–Carburetor Overhaul	267	691044	Screw (Casing Clamp)	363	19069	Puller–Flywheel
125	498170	Carburetor	268	691025	Casing–Control Wire (Cut to Required Length)	365	692524	Screw (Carburetor)
125A	499059	Carburetor	269	691026	Wire–Control (Cut to Required Length)	383	89838	Wrench–Spark Plug
127	●694468	Plug–Welch (3/8" Diameter)	270	691027	Nut (Control Wire Casing)	404	690272	Washer (Governor Crank)
130	696564	Valve–Throttle (Used With Plastic Throttle Shaft) Note ——— 691203 Valve–Throttle	271	691028	Lever–Control	425A	690670	Screw (Air Cleaner Cover)
133	398187	Float–Carburetor	276	◆271716	Washer–Sealing	443A	692523	Screw (Air Cleaner Primer Base)
134	●398188	Kit–Needle/Seat	287	690940	Screw (Dipstick Tube)	445A	491588	Filter–Air Cleaner Cartridge
137	◆693981	Gasket–Float Bowl	300	692038	Muffler (Tuned)	455	695161	Cup–Flywheel
146	690979	Key–Timing	304	695892	Housing–Blower Note ——— 493294 Housing– Blower	456	692299	Plate–Pawl Friction
159	691753	Bracket–Air Cleaner Primer			Used on Type No(s). 0120.	459	281505	Plate–Ratchet
163★◆	272653	Gasket–Air Cleaner	305	691108	Screw (Blower Housing)	505	691251	Nut (Governor Control Lever)
187	691050	Line–Fuel (Cut to Required Length)				523	495264	Dipstick
188	690877	Screw (Control Bracket)				524	★692296	Seal–Dipstick Tube
						525	495265	Tube–Dipstick
						529	691923	Grommet
						562	92613	Bolt (Governor Control Lever)
						564A	691142	Screw (Control Cover)
						584	697734	Cover–Breather Passage
						585	★691879	Gasket–Breather Passage

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

12Q800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
592	690800	Nut (Rewind Starter)	842	★691031	Seal-O Ring (Dipstick Tube)	972B	693377	Tank-Fuel (Plastic)		
597	691696	Screw (Pawl Friction Plate)	843	691884	Sleeve-Lever (Control Bracket)	975	493640	Bowl-Float		
601	95162	Clamp-Hose (Green)	843A	691895	Sleeve-Lever (Choke)	976	694395	Primer-Carburetor		
604A	691344	Cover-Control Starter-Rewind	847	692017	Dipstick/Tube Assembly	977	498261	Gasket Set-Carburetor		
608	497680	Screw (Muffler)	851	493880	Terminal-Spark Plug	1005	691346	Fan-Flywheel		
613	691340	Retainer-Governor Shaft	869	691155	Seat-Valve (Intake)	1019	696438	Kit-Label		
615	690340	Crank-Governor	870	690380	Seat-Valve (Exhaust)	1036	790412	Label-Emission (Used After Code Date 04063000).		
616	698801	Seal-O Ring (Intake Manifold)	871	262001	Bushing-Valve Guide (Exhaust)	———— Note ————				
617★◆	270344	Switch-Stop			63709	Bushing-Valve- Guide (Intake)	695111	Label- Emission (Used Before Code Date 04070100).		
621	692310	Seal-Choke/Throttle Shaft			883 ★∅	691881	Gasket-Exhaust	790413	Label- Emission (Used On Engines With D1 Trim) (Used After Code Date 04063000).	
633	◆691321	Seal-Choke/Throttle Shaft	921A	695886	Cover-Blower Housing			697378	Label- Emission (Used On Engines With D1 Trim) (Used Before Code Date 04070100).	
633A	◆693867	Spacer (Includes 2)	921E	696262	Cover-Blower Housing			1058	275177	Owner's Manual
635	66538	Spacer-Fuel Tank	921F	697343	Cover-Blower Housing			1059	692311	Kit-Screw/Washer
668	★493823	Screw (Breather Passage Cover)	922	692135	Spring-Brake			1095	498528	Gasket Set-Valve
670	692294	Screw	923	695891	Brake			1210	498144	Pulley/Spring Assembly (Pulley)
684	690345	Spring-Friction	930A	691345	Guard-Rewind (Tear Drop)			1211	498144	Pulley/Spring Assembly (Spring)
689	691855	Spring-Detent	957	397974	Cap-Fuel Tank (Plastic)			1330	270962	+Manual-Repair
692	690572	Pin-Locating	966A	496116	Base-Air Cleaner Primer					
718	690959	Gear-Timing (Use Without Woodruff Key)	967A	493537	Filter-Pre Cleaner					
741	790345			968B	692298	Cover-Air Cleaner				
		———— Note ————			969	690700	Screw (Blower Housing Cover)			
		691830	Gear-Timing (Uses Woodruff Key)			969A	691138	Screw (Blower Housing Cover)		
745	691648	Screw (Brake)			970	691681	Screw (Air Cleaner Primer Bracket)			
832D	499034	Guard-Muffler								
836	690664	Screw (Muffler Guard)								

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.