

12Y800

Illustrated Parts List

Model Series

12Y800

TYPE NUMBERS
0100 through 0112.

TABLE OF CONTENTS


Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electrical	4
Engine Sump	2
Exhaust System	4
Flywheel	5
Flywheel Brake	8
Fuel Supply	3
Governor Spring	4
Ignition	4
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2








PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

12Y800



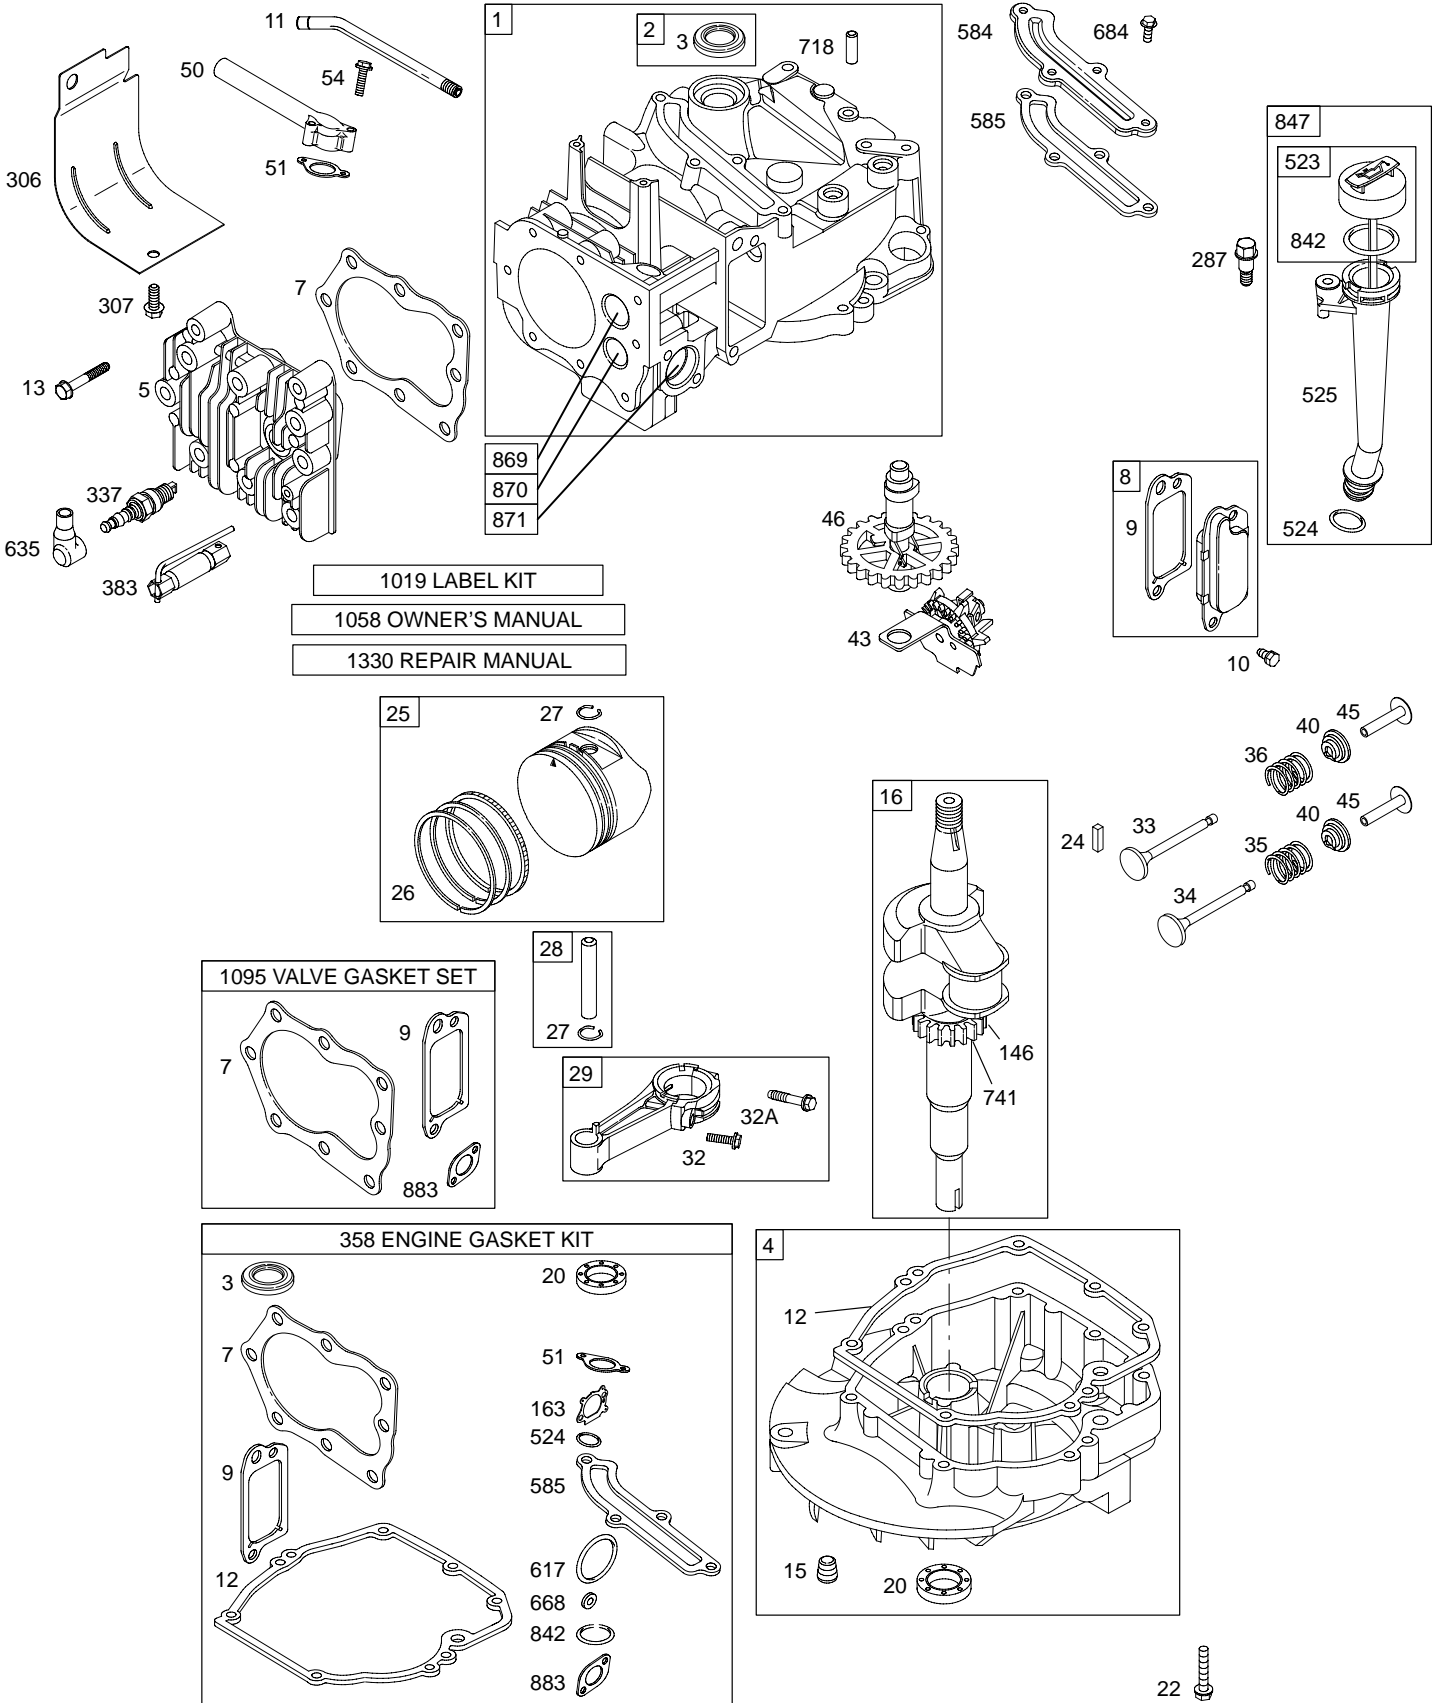


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5773-2 Assemblies include all parts shown in frames. **09/28/2004**

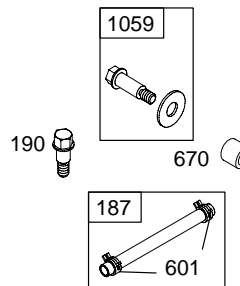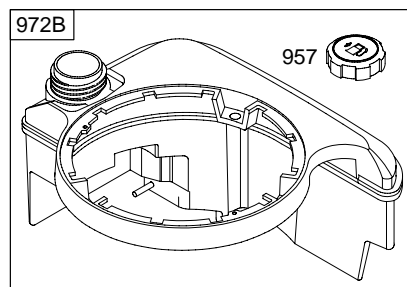
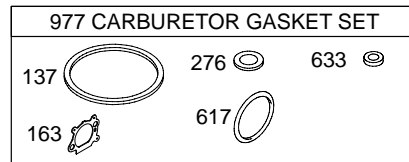
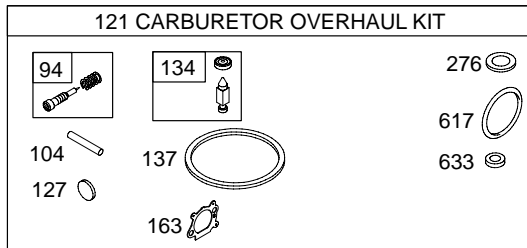
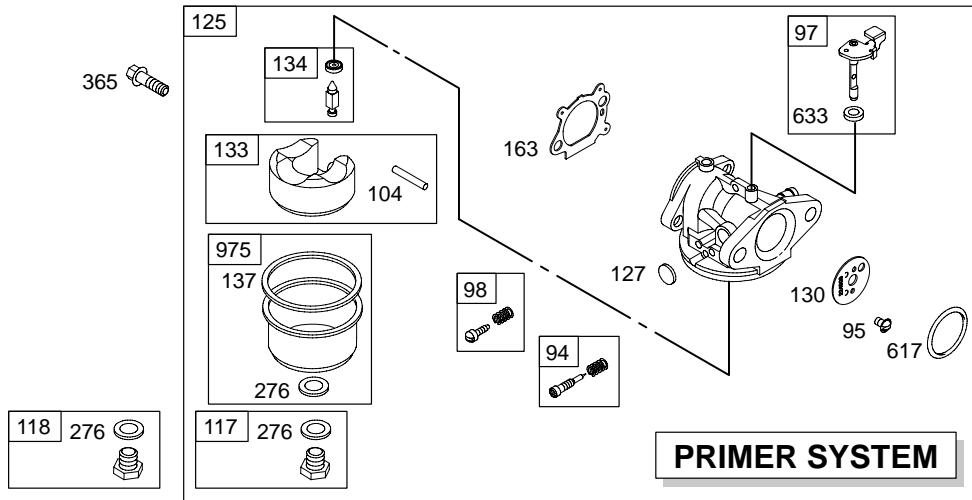


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5773-3 Assemblies include all parts shown in frames. 09/28/2004

12Y800

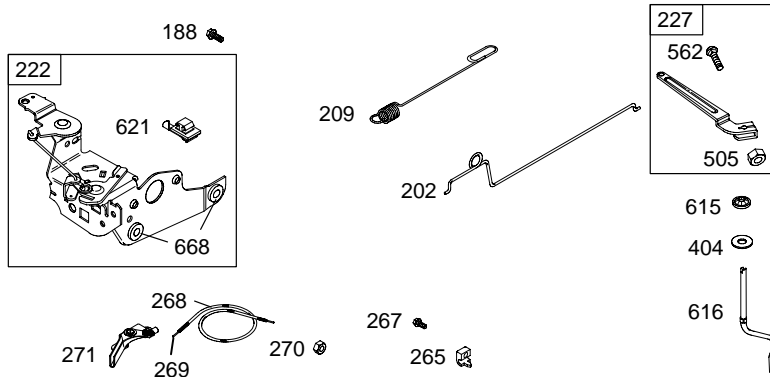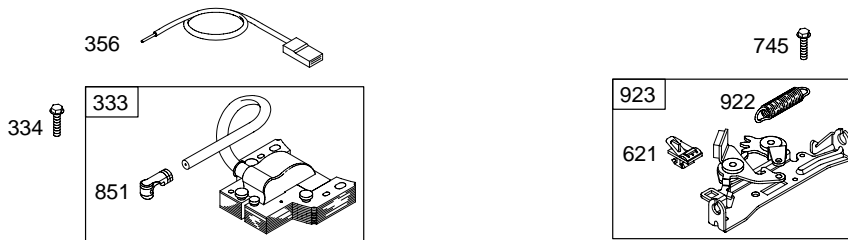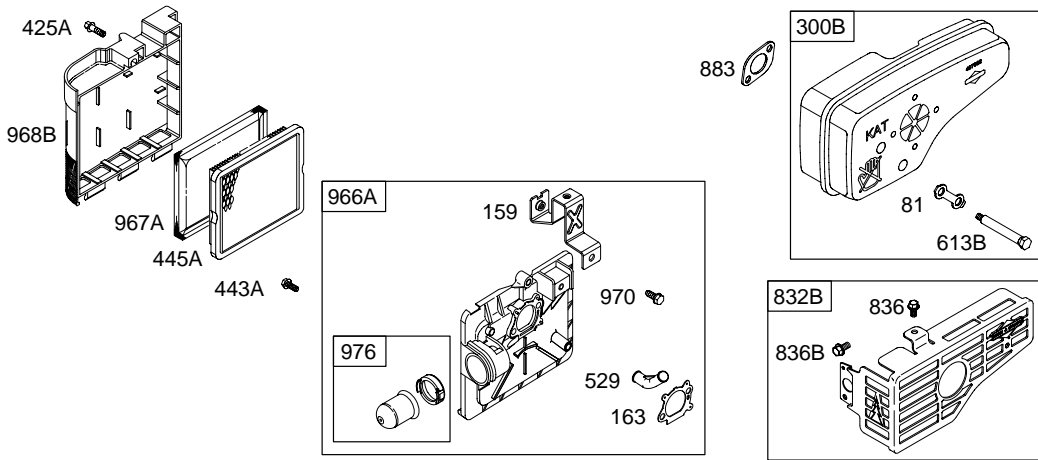

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5773-4 Assemblies include all parts shown in frames. 09/28/2004

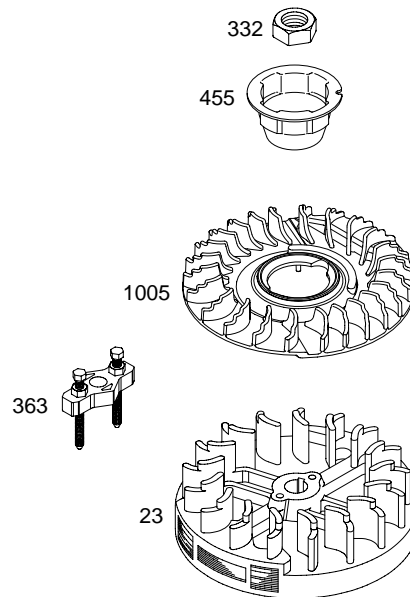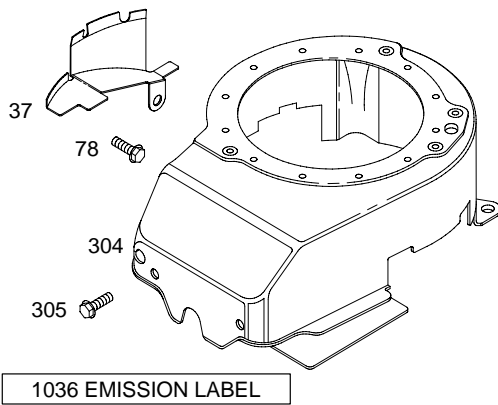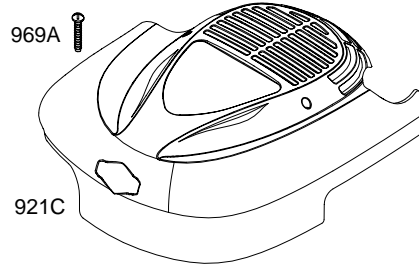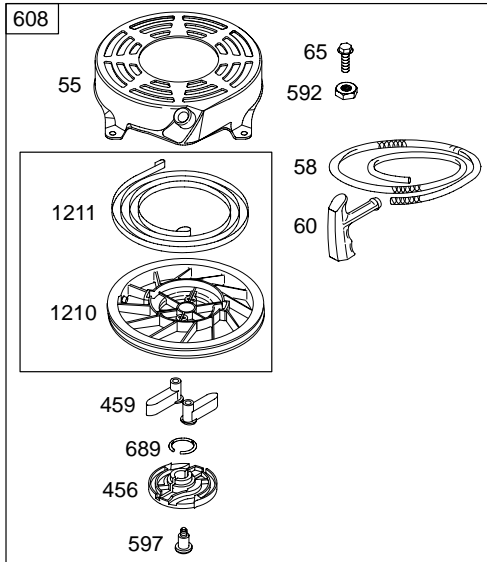

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5773-5 Assemblies include all parts shown in frames. 09/28/2004

12Y800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	26	790360	Ring Set (Standard) (Used After Code Date 04031400).	95	691636	Screw (Throttle Valve)
2	399269	Kit-Bushing/Seal (Magneto Side)				97	493267	Shaft-Throttle
3	★299819	Seal-Oil (Magneto Side)				98	398185	Kit-Idle Speed
4	493279	Sump-Engine				104	●691242	Pin-Float Hinge
5	691160	Head-Cylinder				117	494870	Jet-Main (Standard)
7	★∅692249	Gasket-Cylinder Head				118	497315	Jet-Main (High Altitude)
8	695250	Breather Assembly				121	498260	Kit-Carburetor Overhaul
9	★∅272481	Gasket-Breather				125	694882	Carburetor (Primer System)
10	691125	Screw (Breather Assembly)				127	●694468	Plug-Welch
11	691781	Tube-Breather				130	691203	Valve-Throttle
12	★692232	Gasket-Crankcase				133	398187	Float-Carburetor
13	690912	Screw (Cylinder Head)	27	691866	Lock-Piston Pin	134	●398188	Kit-Needle/Seat
15	691680	Plug-Oil Drain	28	499423	Pin-Piston	137	◆●693981	Gasket-Float Bowl
16	691450	Crankshaft	29	499424	Rod-Connecting	146	690979	Key-Timing
		Note	32	691664	Screw (Connecting Rod)	159	691753	Bracket-Air Cleaner Primer
		691452 Crankshaft Used on Type No(s). 0100.	32A	695759	Screw (Connecting Rod)	163	★◆●272653	Gasket-Air Cleaner
20	★399781	Seal-Oil (PTO Side)	33	262651	Valve-Exhaust	187	691050	Line-Fuel (Cut to Required Length)
22	691092	Screw (Crankcase Cover/Sump)	34	262652	Valve-Intake	188	690877	Screw (Control Bracket)
23	692315	Flywheel	35	691270	Spring-Valve (Intake)	190	690940	Screw (Fuel Tank)
24	222698	Key-Flywheel	36	691270	Spring-Valve (Exhaust)	202	691829	Link-Mechanical Governor
25	790359	Piston Assembly (Standard) (Used After Code Date 04031400).	37	694086	Guard-Flywheel	209	691851	Spring-Governor
		Note	40	692194	Retainer-Valve			Note
		499429 Piston Assembly (Standard) (Used Before Code Date 04031500).	43	691997	Slinger-Governor/Oil			691292 Spring-Governor Used on Type No(s). 0100.
		499430 Piston Assembly (.010" Oversize)	45	690548	Tappet-Valve	222	692031	Bracket-Control (Remote/Manual Friction)(Primer)
		499431 Piston Assembly (.020" Oversize)	46	691449	Camshaft	227	690783	Lever-Governor Control
		499432 Piston Assembly (.030" Oversize)	50	497465	Manifold-Intake	265	690798	Clamp-Casing
			51	★272199	Gasket-Intake	267	691044	Screw (Casing Clamp)
			54	691650	Screw (Intake Manifold)	268	691025	Casing-Control Wire (Cut to Required Length)
			55	691421	Housing-Rewind Starter			
			58	280399	Rope-Starter (Cut To Required-Length)			
			60	281434	Grip-Starter Rope			
			65	690837	Screw (Rewind Starter)			
			78	691108	Screw (Flywheel Guard)			
			81	691740	Lock-Muffler Screw			
			94	●493765	Kit-Idle Mixture			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
269	691026	Wire—Control (Cut to Required Length)	584	697734	Cover—Breather Passage	870	690380	Seat—Valve (Exhaust)
270	691027	Nut (Control Wire Casing)	585	★691879	Gasket—Breather Passage	871	262001	Bushing—Valve Guide (Exhaust)
271	691028	Lever—Control	592	690800	Nut (Rewind Starter)	————— Note —————		
276	◆271716	Washer—Sealing	597	691696	Screw (Pawl Friction Plate)	63709		Bushing—Valve Guide (Intake)
287	690940	Screw (Dipstick Tube)	601	95162	Clamp—Hose	883	★Ø691881	Gasket—Exhaust
300B	694048	Muffler	608	497680	Starter—Rewind	921C	695889	Cover—Blower Housing
304	694879	Housing—Blower	613B	691114	Screw (Muffler)	922	691831	Spring—Brake
305	691108	Screw (Blower Housing)	615	690340	Retainer—Governor Shaft	923	691994	Brake
306	690450	Shield—Cylinder	616	698801	Crank—Governor	957	397974	Cap—Fuel Tank (Plastic)
307	690345	Screw (Cylinder Shield)	617	◆●270344	Seal—O Ring (Intake Manifold)	966A	496116	Base—Air Cleaner Primer
332	690662	Nut (Flywheel)	621	692310	Switch—Stop	967A	493537	Filter—Pre Cleaner
333	802574	Armature—Magneto	633	◆●691321	Seal—Choke/Throttle Shaft	968B	692298	Cover—Air Cleaner
334	691061	Screw (Magneto Armature)	635	66538	Boot—Spark Plug	969A	691138	Screw (Blower Housing Cover)
337	802592	Plug—Spark	668	★493823	Spacer	970	691681	Screw (Air Cleaner Primer Bracket)
356	692390	Wire—Stop	670	692294	Spacer—Fuel Tank	972B	693377	Tank—Fuel (Plastic)
358	497316	Gasket Set—Engine	684	690345	Screw (Breather Passage Cover)	975	493640	Bowl—Float
363	19069	Flywheel Puller	689	691855	Spring—Friction	976	694395	Primer—Carburetor
365	692524	Screw (Carburetor)	718	690959	Pin—Locating	977	498261	Gasket Set—Carburetor
383	89838	Wrench—Spark Plug	741	790345	Gear—Timing (Use Without Woodruff Key)	1005	691346	Fan—Flywheel
404	690272	Washer (Governor Crank)	————— Note —————		1019	494256	Kit—Label	
425A	690670	Screw (Air Cleaner Cover)	691830		1036	790412	Label—Emission (Used After Code Date 04063000).	
443A	692523	Screw (Air Cleaner Primer Base)	745	691648	Screw (Brake)	————— Note —————		
445A	491588	Filter—Air Cleaner Cartridge	832B	497683	Guard—Muffler	695111		Label—Emission (Used Before Code Date 04070100).
455	695161	Cup—Flywheel	836	690664	Screw (Muffler Guard)	1058	275177	Manual—Owner's
456	692299	Plate—Pawl Friction	836B	691147	Screw (Muffler Guard)	1059	692311	Kit—Screw/Washer
459	281505	Pawl—Ratchet	842	★691031	Seal—O Ring (Dipstick Tube)	1095	498528	Gasket Set—Valve
505	691251	Nut (Governor Control Lever)	847	692017	Dipstick/Tube Assembly	1210	498144	Pulley/Spring Assembly (Pulley)
523	495264	Dipstick	851	493880	Terminal—Spark Plug	1211	498144	Pulley/Spring Assembly (Spring)
524	★692296	Seal—Dipstick Tube	869	691155	Seat—Valve (Intake)	1330	270962	Manual—Repair
525	495265	Tube—Dipstick						
529	691923	Grommet						
562	92613	Bolt (Governor Control Lever)						

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

Ø Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5773-7

Assemblies include all parts shown in frames.

09/28/2004