

Illustrated Parts List

Model Series

217900

TYPE NUMBER
0112 through 0116.


TABLE OF CONTENTS

Air Cleaner/Blower Housing	6
Alternator	9
Camshaft	3
Carburetor	5
Controls	8
Crankcase Sump	2
Crankshaft	3
Cylinder	2
Cylinder Head	4
Electric Starter	7
Exhaust System	6
Flywheel	7
Fuel System	8
Ignition	8
Kit/Gasket Sets - Carburetor	5
Kit/Gasket Sets - Engine	4
Kit/Gasket Sets - Valve	4
Lubrication	3
Piston	3
Rewind Starter	7



PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

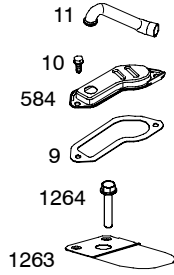





1019 LABEL KIT

1058 OWNER'S MANUAL




1330 REPAIR MANUAL

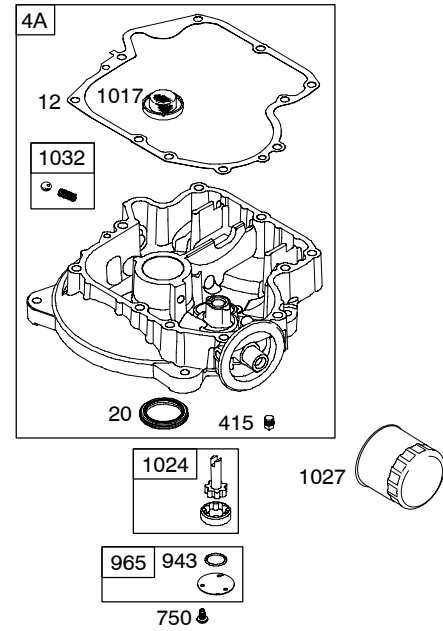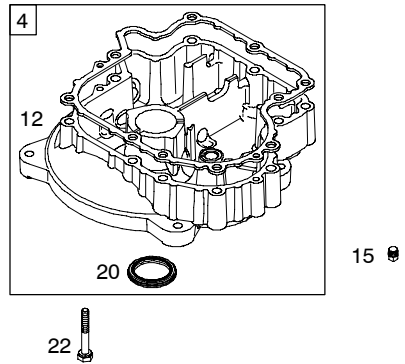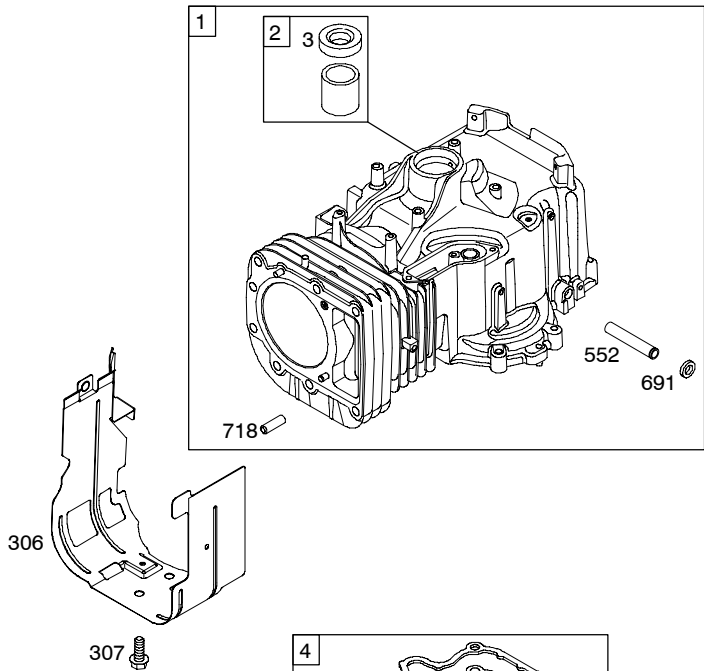




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

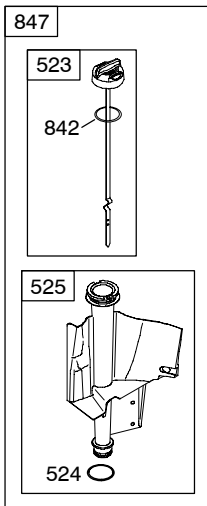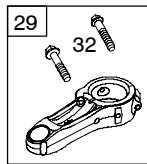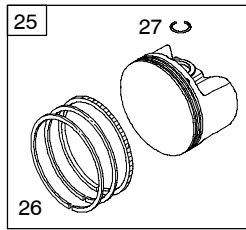







24

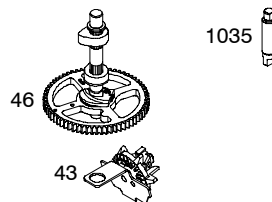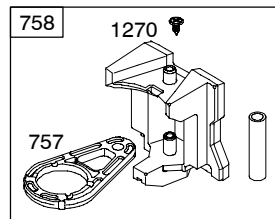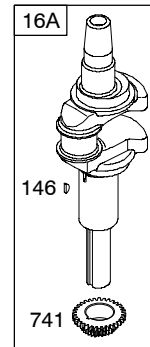








Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5708-3 Assemblies include all parts shown in frames. 09/29/2004

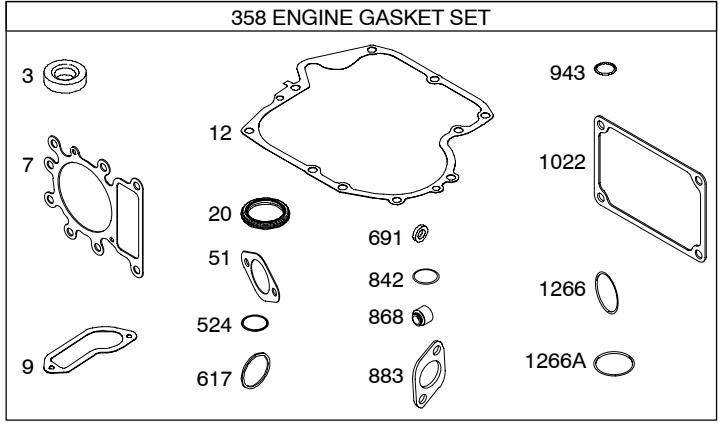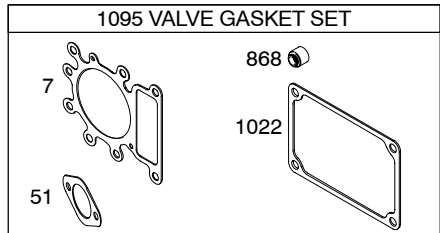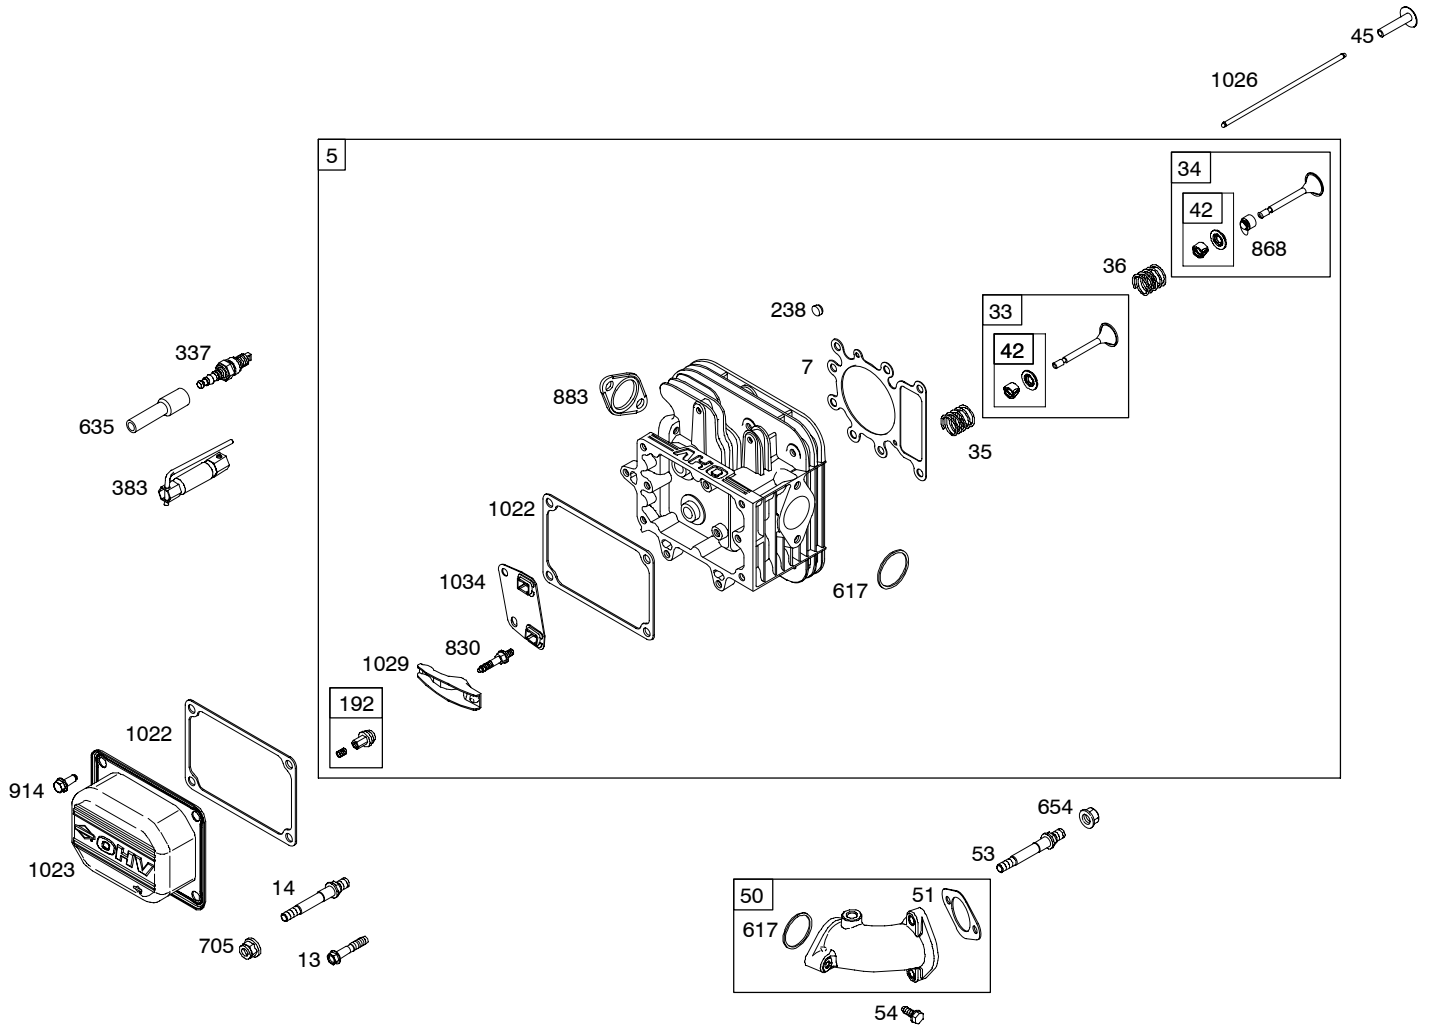




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5708-4 Assemblies include all parts shown in frames. 09/29/2004

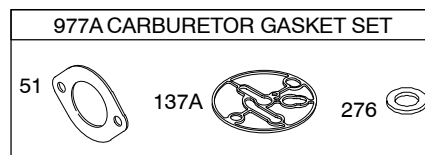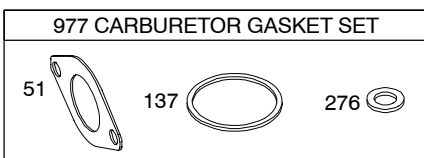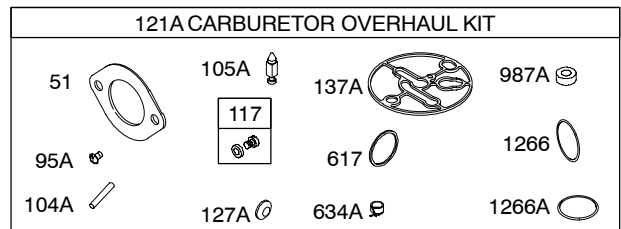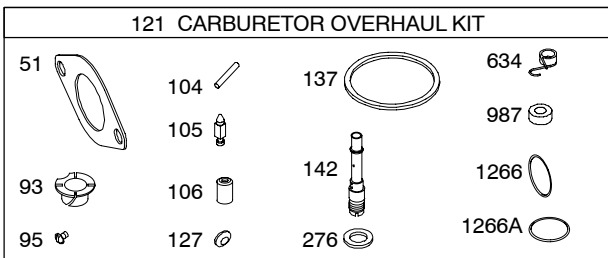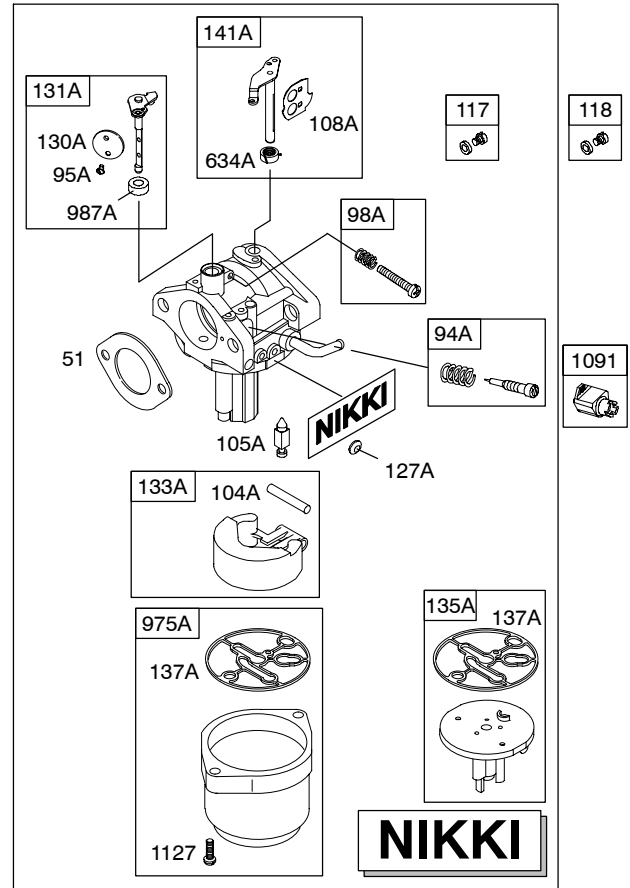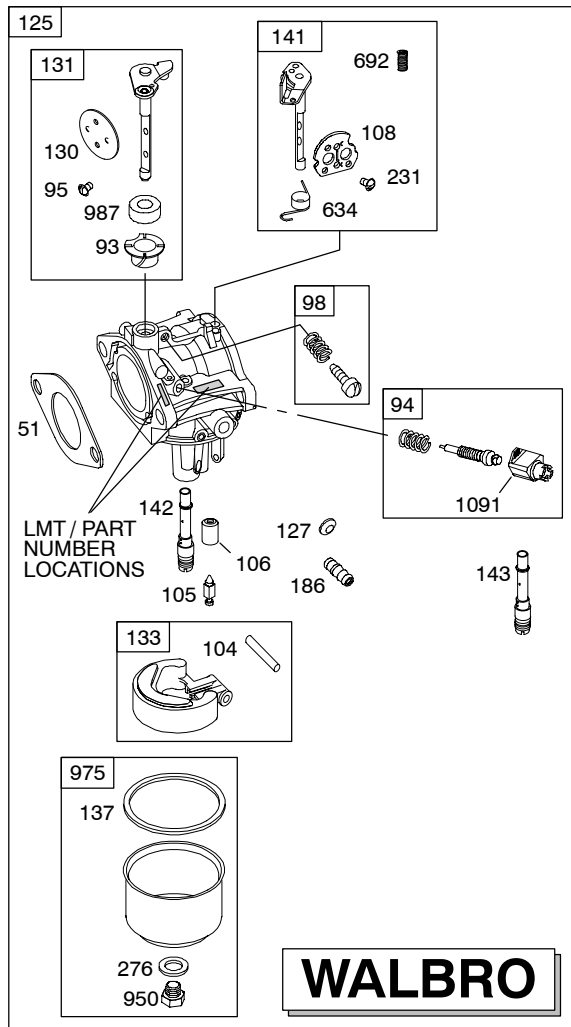

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

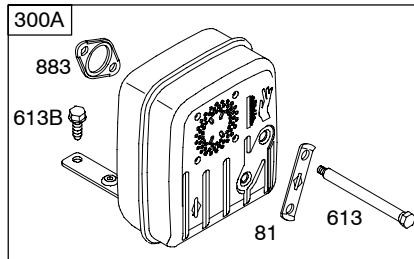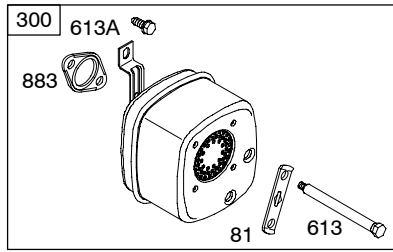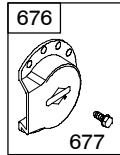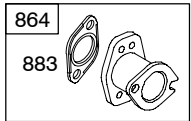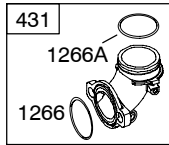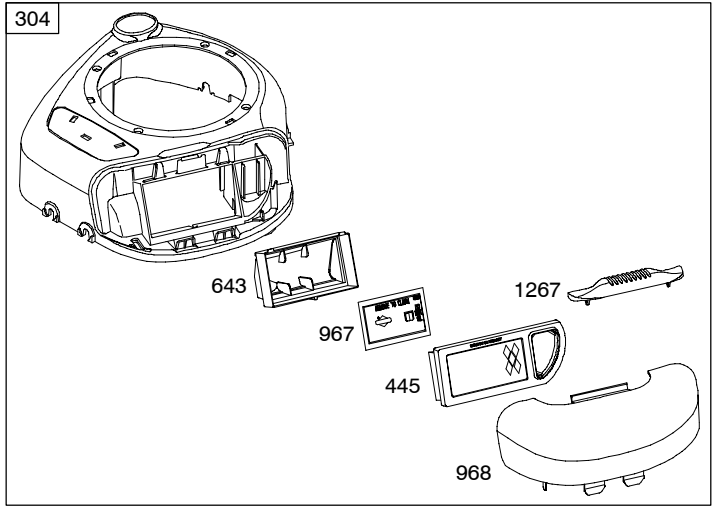


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5708-6 Assemblies include all parts shown in frames.

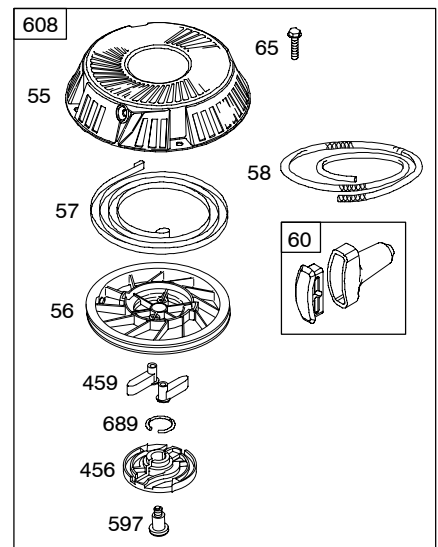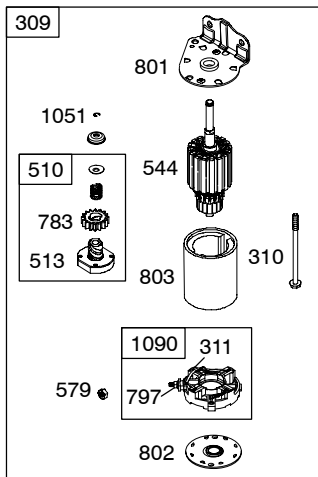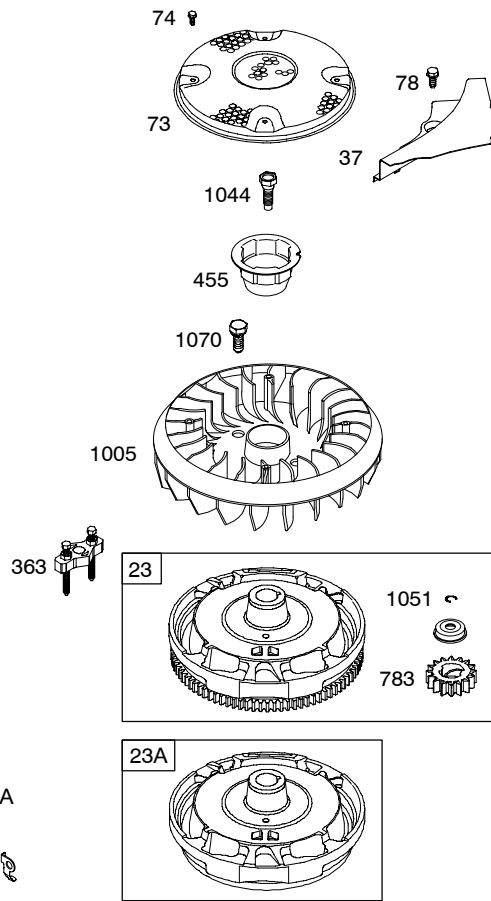



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

217900

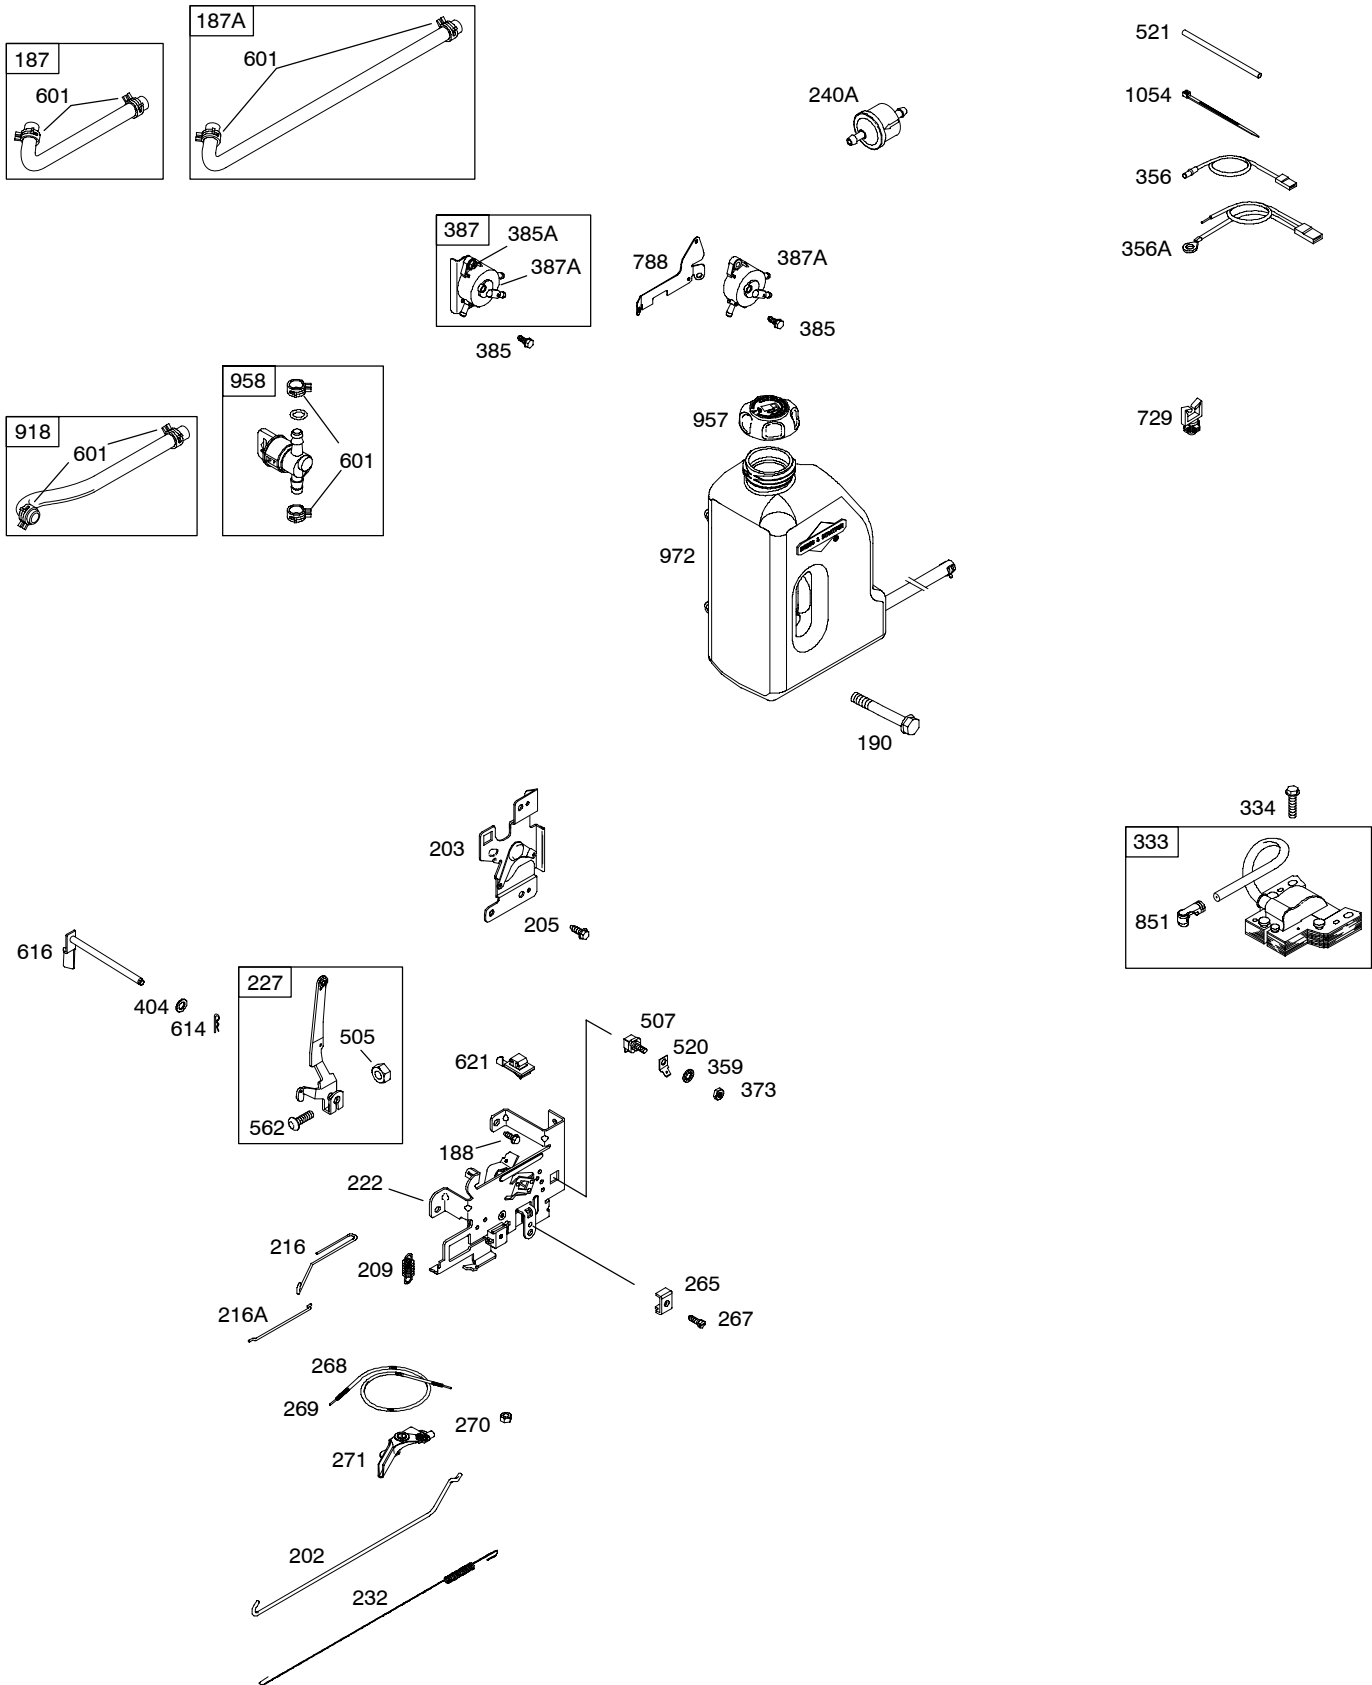

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

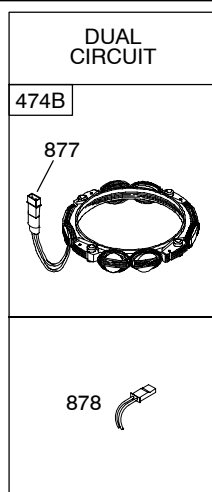

NOTE: All stators use a No. 1119 mounting screw. 

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

217900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697377	Cylinder Assembly	26	698375	Ring Set (Standard)	55	695130	Housing-Rewind Starter
2	399265	Kit-Bushing/Seal (Magneto Side)			----- Note -----	56	695129	Pulley-Starter
3	★391086	Seal-Oil (Magneto Side)			698376 Ring Set (.010" Oversize)	57	695131	Spring-Rewind Starter
4	697106	Sump-Engine			698377 Ring Set (.020" Oversize)	58	695132	Rope-Starter
4A	697188	Sump-Engine Used on Type No(s). 0112.			698378 Ring Set (.030" Oversize)			----- Note ----- 790415 Rope-Starter (99" Long)(Cut to Required Length) Used on Type No(s). 0117.
5	697396	Head-Cylinder	27	698469	Lock-Piston Pin (Pink)			
7	★Δ273280	Gasket-Cylinder Head	28	697099	Pin-Piston	60	494212	Grip-Starter Rope
9	697109	Gasket-Breather	29	697364	Rod-Connecting (Standard)	65	697725	Screw (Rewind Starter)
10	697157	Screw (Breather Assembly)			----- Note -----	73	697133	Screen-Rotating (Used After Code Date 03031600)
11	697113	Tube-Breather			697262 Rod- Connecting (.020" Undersize)			----- Note ----- 697384 Screen- Rotating (Used Before Code Date 03031700)
12	★697110	Gasket-Crankcase (.015" Thick) (Standard)	32	692852	Screw (Connecting Rod)	74	697897	Screw (Rotating Screen)
13	690360	Screw (Cylinder Head)	33	695760	Valve-Exhaust	78	691003	Screw (Flywheel Guard)
14	790560	Stud (Cylinder Head)	34	695761	Valve-Intake	78A	690364	Screw (Flywheel Guard)(Electric Start) Used on Type No(s). 0117.
15	690946	Plug-Oil Drain (3/8" Standard)	35	691279	Spring-Valve (Intake)			
16A	697390	Crankshaft	36	691279	Spring-Valve (Exhaust)	81	691178	Lock-Muffler Screw
20	★690947	Seal-Oil (PTO Side)	37	697352	Guard-Flywheel	93	●690602	Bushing-Throttle Shaft
22	692125	Screw (Crankcase Cover/Sump)	37A	697626	Guard-Flywheel (Electric Start) Used on Type No(s). 0117.	94	498030	Kit-Idle Mixture (Walbro)
23	698281	Flywheel			42 499586 Keeper-Valve	94A	695425	Kit-Idle Mixture (Nikki)
23A	698283	Flywheel (Rewind Starter) Used on Type No(s). 0117.	43	691968	Slinger-Governor/Oil	95	●691636	Screw (Throttle Valve)
24	222698	Key-Flywheel	45	690564	Tappet-Valve			
25	698371	Piston Assembly (Standard)	46	790392	Camshaft			
		----- Note ----- 698372 Piston Assembly (.010" Oversize) 698373 Piston Assembly (.020" Oversize) 698374 Piston Assembly (.030" Oversize)	50	697361	Manifold-Intake			
			51★*Δ◆692137	Gasket-Intake				
			53	690227	Stud (Carburetor)			
			54	691148	Screw (Intake Manifold)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
95A	●690718	Screw (Throttle Valve)(Nikki)	133A	694914	Float-Carburetor (Nikki)	209	691798	Spring-Governor (Brown)
98	495800	Kit-Idle Speed (Walbro)	135A	698780	Tube-Fuel Transfer (Nikki)			Used on Type No(s). 0112, 0117.
98A	695408	Kit-Idle Speed (Nikki)			Used on Type No(s). 0118.			----- Note -----
104	●690525	Pin-Float Hinge (Walbro)			----- Note -----			690480 Spring-Governor (Red)
104A	●694918	Pin-Float Hinge (Nikki)			790030 Tube-Fuel Transfer (Nikki)			Used on Type No(s). 0116.
105	●231855	Valve-Float Needle (Walbro)	137	★△281165	Gasket-Float Bowl (Walbro)	216	691840	Link-Choke
105A	●696136	Valve-Float Needle (Nikki)	137A	★△698781	Gasket-Float Bowl (Nikki)	216A	691281	Link-Choke Used on Type No(s). 0116, 0117.
106	●691780	Seat-Inlet (Pump Feed)	141	699027	Kit-Choke Shaft (Walbro)	222	694042	Bracket-Control
		----- Note -----	141A	698778	Kit-Choke Shaft (Nikki)	227	691374	Lever-Governor Control
		690577 Seat-Inlet Used on Type No(s). 0118.	142	●790025	Nozzle-Carburetor (Standard)(Walbro)	231	691636	Screw (Choke Valve)
108	691227	Valve-Choke (Walbro)	143	●790028	Nozzle-Carburetor (High Altitude)(Walbro)	232	691842	Spring-Governor Link
108A	698773	Valve-Choke (Nikki)	146	691639	Key-Timing	238	691843	Cap-Valve
117	699897	Jet-Main (Standard)	186	698174	Connector-Hose (Straight)	240A	691035	Filter-Fuel (Clear, 40 Microns) Used on Type No(s). 0112, 0116, 0117.
118	699898	Jet-Main (High Altitude)	187	699331	Line-Fuel (Formed)(Cut To Required Length) Used on Type No(s). 0112, 0116, 0117.	265	691024	Clamp-Casing
121	790031	Kit-Carburetor Overhaul (Walbro)	187A	699332	Line-Fuel (Formed)(Cut To Required Length) Used on Type No(s). 0116, 0117.	267	690804	Screw (Casing Clamp)
121A	698787	Kit-Carburetor Overhaul (Nikki)				268	691025	Casing-Control Wire (Cut To Required Length)
125	790020	Carburetor (Walbro)(Pump Feed) Used on Type No(s). 0112, 0116, 0117.	188	691693	Screw (Control Bracket)	269	691026	Wire-Control (Cut To Required Length)
		----- Note -----	190	790931	Screw (Fuel Tank)	270	691027	Nut (Control Wire Casing)
		790019 Carburetor Used on Type No(s). 0118.	192	691986	Adjuster-Rocker Arm	271	691028	Lever-Control
127	●694524	Plug-Welch (Walbro)	202	691841	Link-Mechanical Governor	276	●692255	Washer-Sealing
127A	●690727	Plug-Welch (Nikki)	203	691381	Crank-Bell Used on Type No(s). 0116, 0117.	300	697048	Muffler (Lo Tone) Used on Type No(s). 0112.
130	790024	Valve-Throttle (Walbro)	205	691693	Screw (Bell Crank) Used on Type No(s). 0117.	300A	697349	Muffler (Lo Tone) Used on Type No(s). 0116, 0117.
130A	698774	Valve-Throttle (Nikki)						
131	697542	Kit-Throttle Shaft (Walbro)						
131A	698776	Kit-Throttle Shaft (Nikki)						
133	494381	Float-Carburetor (Walbro)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

217900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	699085	Housing-Blower (Red) Used on Type No(s). 0112, 0116, 0117.	358	697151	Gasket Set-Engine	505	691251	Nut (Governor Control Lever)
305	697102	Screw (Blower Housing)	359	691077	Washer (Ground Terminal) Used on Type No(s). 0116, 0117.	507	691972	Insulator Used on Type No(s). 0116, 0117.
305A	697103	Screw (Blower Housing)	363	19203	Puller-Flywheel	510	693699	Drive-Starter
306	697359	Shield-Cylinder	373	691612	Nut (Ground Terminal) Used on Type No(s). 0116, 0117.	513	692024	Clutch-Drive
307	691003	Screw (Cylinder Shield)	383	89838	Wrench-Spark Plug	520	691084	Terminal-Ground Used on Type No(s). 0116, 0117.
309	693551	Motor-Starter Used on Type No(s). 0112, 0116.	385	694476	Screw (Fuel Pump)	521	690581	Shield-Cable Used on Type No(s). 0112.
310	690323	Screw (Starter Motor)	385A	690297	Screw (Fuel Pump) Used on Type No(s). 0116, 0117.	523	699908	Dipstick
311	497608	Brush Set	387	697090	Pump-Fuel (Includes Mounting Bracket) Used on Type No(s). 0112.	524	★691032	Seal-Dipstick Tube
333	492341	Armature-Magneto	387A	808656	Pump-Fuel Used on Type No(s). 0116, 0117.	525	697085	Tube-Dipstick (Used On Engines With Fuel Pump) Used on Type No(s). 0112, 0116, 0117.
334	691061	Screw (Magneto Armature)	404	691691	Washer (Governor Crank)	544	692034	Armature-Starter
337	691043	Plug-Spark Used on Type No(s). 0112, 0116, 0117.	415	690283	Plug (Sump) Used on Type No(s). 0112.	552	697144	Bushing-Governor Crank
356	697397	Wire-Stop (1 Wire, 20" Long)(Snap Connect Insulated Female Blade Terminal, AndSnap Connect Insulated Pin Socke Used on Type No(s). 0112.	431	697122	Elbow-Intake	562	691119	Bolt (Governor Control Lever)
356A	398808	Wire-Stop (2 Wires, 15" And 15-11/16" Long) (Snap Connect Insulated Female BladeTerminal, Ring Terminal, And Ba Used on Type No(s). 0116, 0117.	445	698413	Filter-Air Cleaner Cartridge (Non Washable)	579	691029	Nut (Starter Cable)
			455	695113	Cup-Flywheel Used on Type No(s). 0116, 0117.	584	697112	Cover-Breather Passage
			456	695128	Plate-Pawl Friction	597	691696	Screw (Pawl Friction Plate)
			459	281505	Pawl-Ratchet	601	95162	Clamp-Hose (Zinc Plate)(Spring Wire) ----- Note ----- 691038 Clamp-Hose (Black)(Spring Steel) Used on Type No(s). 0112.
			474B	696459	Alternator (Dual Circuit) Used on Type No(s). 0112, 0116.			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
608	695058	Starter–Rewind Used on Type No(s). 0116. ----- Note ----- 790416 Starter–Rewind Used on Type No(s). 0117.	691	★692407	Seal–Governor Shaft	864	697346	Adapter–Muffler Used on Type No(s). 0112, 0116, 0117.
613	691416	Screw (Muffler)	692	691301	Spring–Detent Used on Type No(s). 0112, 0116, 0117.	868	★△690968	Seal–Valve
613A	691678	Screw (Muffler)	697	690372	Screw (Drive Cap)	877	393456	Wire/Connector–Alternator (Dual Circuit) Used on Type No(s). 0112, 0116.
613B	690297	Screw (Muffler) Used on Type No(s). 0116, 0117.	705	790561	Nut (Fuel Tank)	878	691237	Harness–Alternator (2 Wires, 48–1/2", And 48–1/2" Long) (Snap Connect Female Pin Terminal, And 2 Bare Wire Ends) Used on Type No(s). 0112, 0116.
614	691620	Pin–Cotter	718	690959	Pin–Locating			
616	692012	Crank–Governor	729	691335	Clip–Wire (Wire Retainer)			
617	★692138	Seal–O Ring (Intake Manifold)	729A	691224	Clip–Wire (Starter Motor)			
621	692310	Switch–Stop Used on Type No(s). 0116, 0117.	741	697128	Gear–Timing			
634	●690802	Spring/Seal Assembly (Walbro)	750	691033	Screw (Oil Pump Cover)			
634A	●698779	Spring/Seal Assembly (Nikki)	757	697607	Link–Counterweight			
635	691909	Boot–Spark Plug	758	697391	Counterweight	883	★692236	Gasket–Exhaust
643	697155	Retainer–Air Filter	783	693713	Gear–Pinion	914	691108	Screw (Rocker Cover)
654	690958	Nut (Carburetor)	788	699347	Bracket–Fuel Pump Used on Type No(s). 0116, 0117.	918	697091	Hose–Vacuum (Molded) Used on Type No(s). 0112.
676	393761	Deflector–Muffler (Side Out) Used on Type No(s). 0116, 0117.	797	693167	Nut (Brush Retainer)	943	★690589	Seal–O Ring (Oil Pump Cover)
676A	396903	Deflector–Muffler (Direct Out) Used on Type No(s). 0112.	801	691283	Cap–Drive	950	691657	Screw–Float Bowl (Bottom Of Bowl)
677	690661	Screw (Muffler Deflector)	802	691286	Cap–End	957	694261	Cap–Fuel Tank (Plastic) Used on Type No(s). 0116, 0117.
689	691855	Spring–Friction	803	693757	Housing–Starter	958	698183	Valve–Fuel Shut Off (Plastic) Used on Type No(s). 0112.
			823	698941	Screw (Muffler Adapter)	965	499613	Cover–Oil Pump
			830	691095	Stud–Rocker Arm	967	697292	Filter–Pre Cleaner
			842	★691031	Seal–O Ring (Dipstick Tube)	968	697420	Cover–Air Cleaner (Black) Used on Type No(s). 0112, 0116, 0117.
			847	790443	Dipstick/Tube Assembly (Used On Engines With Fuel Pump) Used on Type No(s). 0112, 0116, 0117.			
			851	692424	Terminal–Spark Plug			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

217900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
972	699710	Tank-Fuel (Plastic) Used on Type No(s). 0116, 0117.	1027	492932	Filter-Oil	1051	691265	Ring-Retaining
975	495933	Bowl-Float (Walbro)	1029	691751	Arm-Rocker	1054	280275	Tie-Cable
975A	698783	Bowl-Float (Nikki)	1032	491710	Ball-Oil Pump	1058	275935	Operator's Manual
977	690192	Gasket Set-Carburetor (Walbro)	1034	690822	Guide-Push Rod	1070	690372	Screw (Flywheel Fan)
977A	790032	Gasket Set-Carburetor (Nikki)	1035	693784	Shaft-Pump	1090	691293	Retainer-Brush
987	●691326	Seal-Throttle Shaft (Walbro)	1036	790465	Label-Emissions (Used After Code Date 04063000)	1091	691333	Cap-Limiter
987A	●698777	Seal-Throttle Shaft (Nikki)			----- Note ----- 790186 Label- Emissions (Used After Code Date 03123100 and Before Code Date 04070100).	1095	691581	Gasket Set-Valve
1005	699044	Fan-Flywheel (Used After Code Date 03031600) ----- Note ----- 697360 Fan-Flywheel (Used Before Code Date 03031700)	1040	698368	Plate-Trim (Exhaust) Used on Type No(s). 0112.	1119	691183	Screw (Alternator)
1017	690770	Screen-Oil Pump	1044	698139	Screw (Flywheel)	1127	695407	Screw (Float Bowl) (Nikki)
1019	699196	Kit-Label			697221 Label- Emissions (Used Before Code Date 04010100)	1263	697124	Reed-Breather
1022	★△272475	Gasket-Rocker Cover				1264	697104	Screw (Breather Reed)
1023	692492	Cover-Rocker				1266	●691917	Seal-O Ring (Intake Elbow)
1024	499054	Pump-Oil				1266A	●697123	Seal-O Ring (Intake Elbow)
1026	697395	Rod-Push (Exhaust) ----- Note ----- 697394 Rod-Push (Intake)				1267	697419	Latch-Blower Housing (Black) Used on Type No(s). 0112, 0116, 0117.
						1270	697156	Plug-AVS Counterweight
						1330	272147	Repair Manual

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.