

12J900

Illustrated Parts List

Model Series

12J900

TYPE NUMBERS
0106.





TABLE OF CONTENTS

Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electrical	4
Engine Sump	2
Exhaust System	4
Flywheel	5
Flywheel Brake	4
Fuel Supply	3
Governor Spring	4
Ignition	4
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.


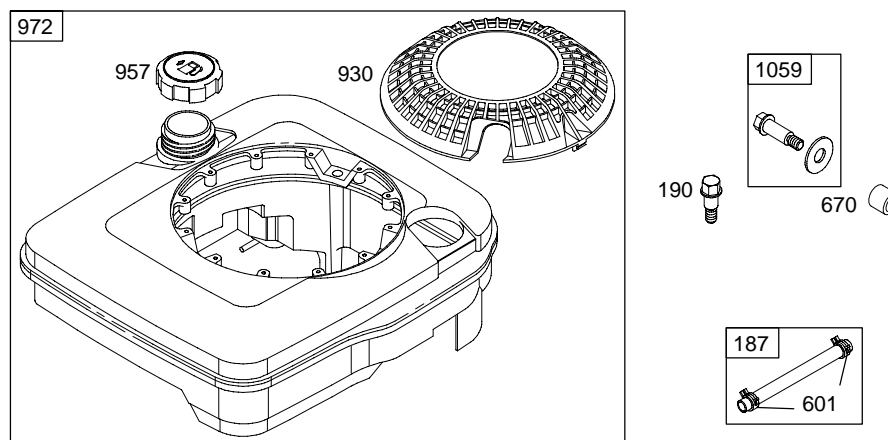
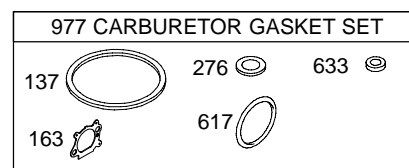
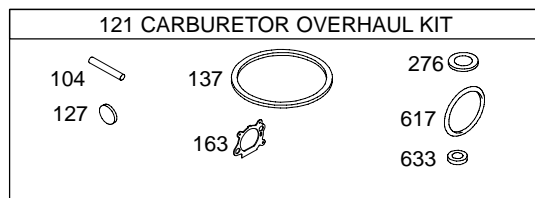
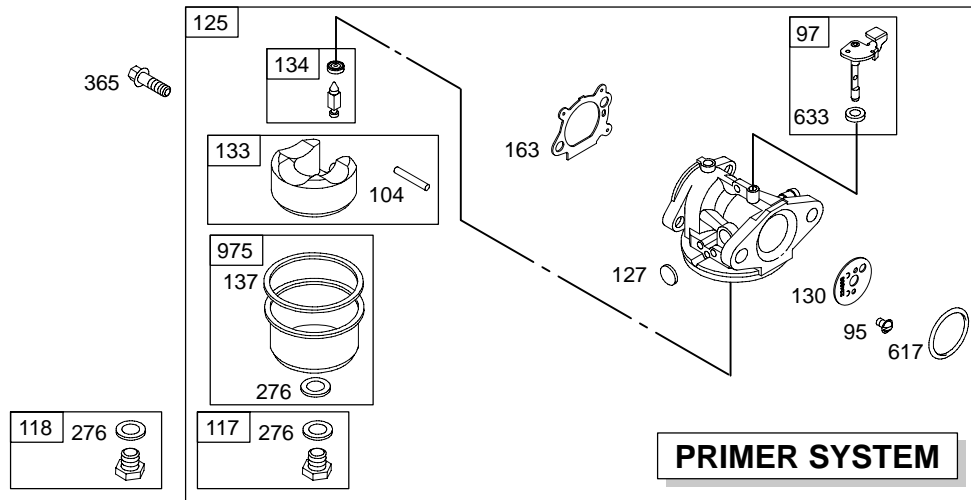


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5955-3 Assemblies include all parts shown in frames. 06/22/2004

12J900

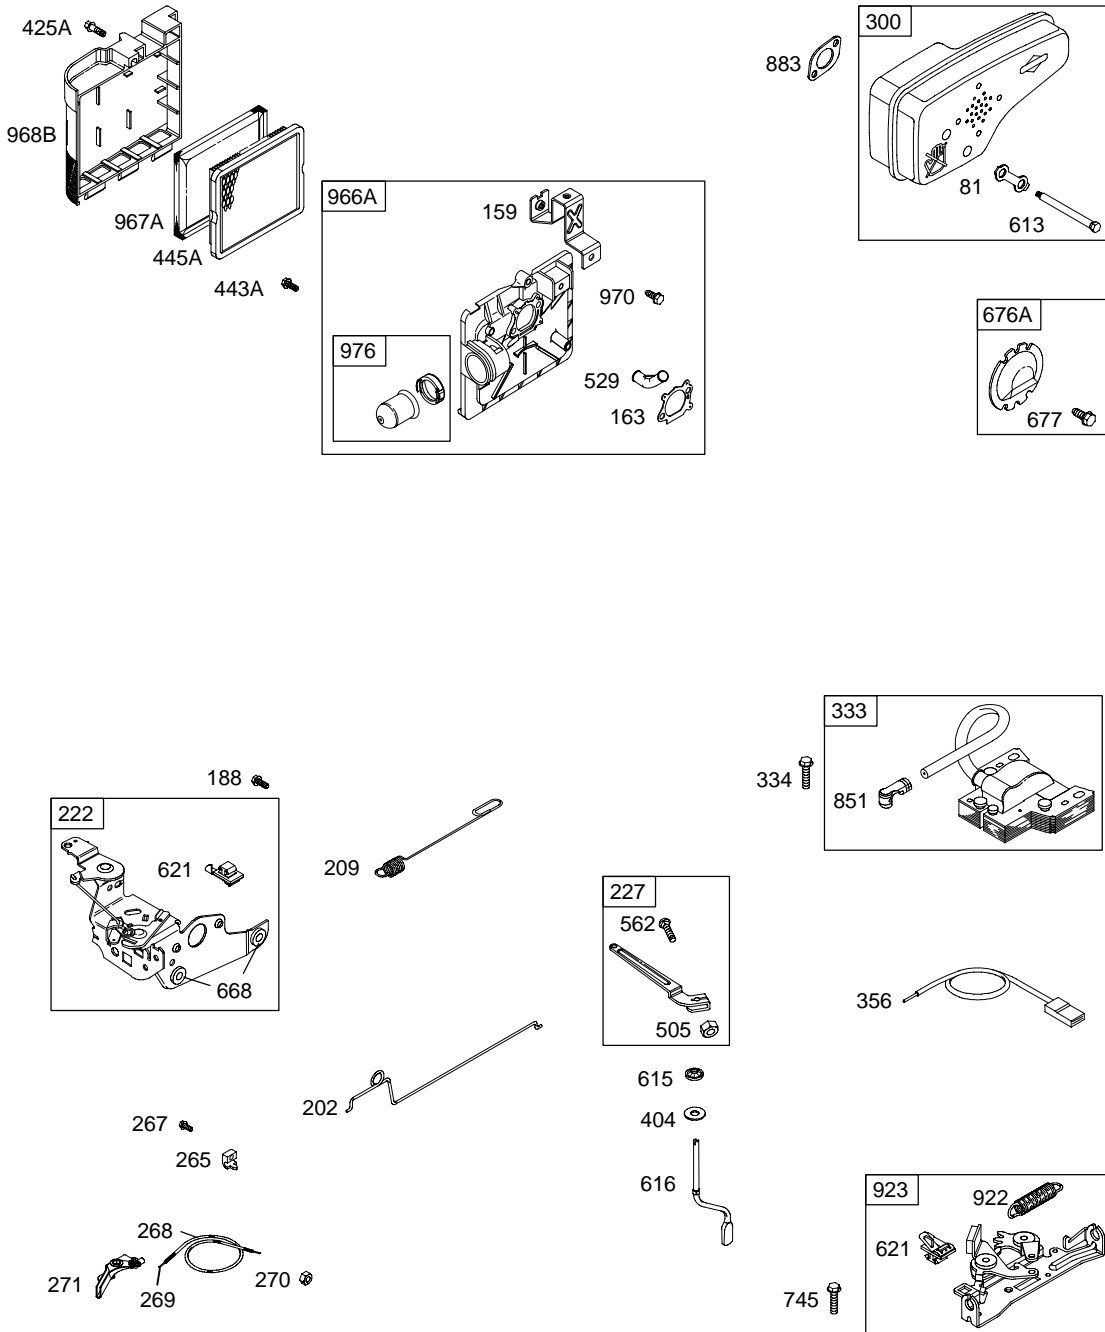

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5955-4 Assemblies include all parts shown in frames. **06/22/2004**

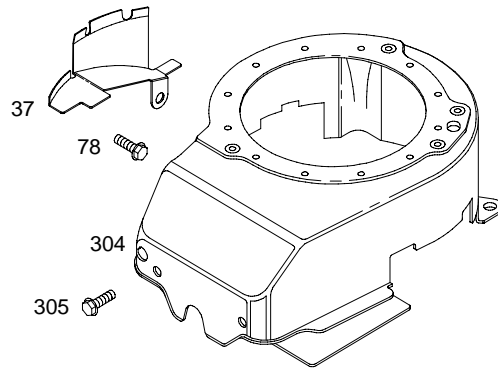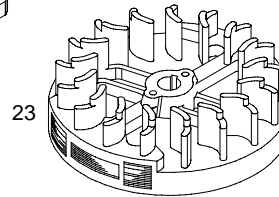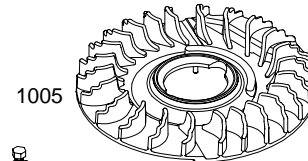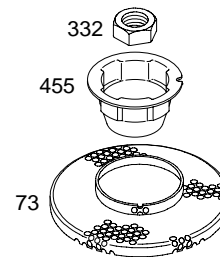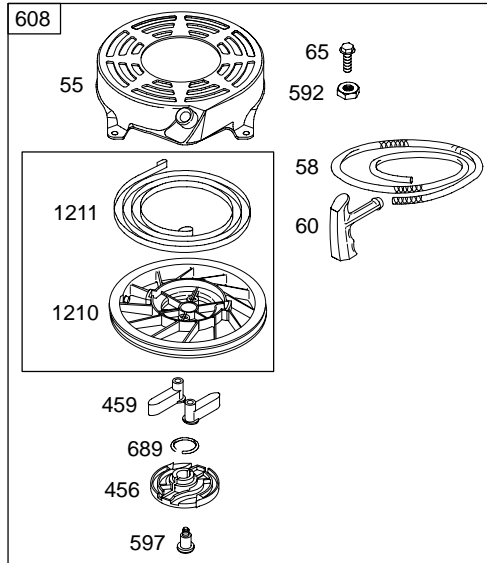

1036 EMISSION LABEL

12J900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697324	Cylinder Assembly	26	790360	Ring Set (Standard) (Used After Code Date 04031400).	73	691221	Screen—Rotating
2	399269	Kit—Bushing/Seal (Magneto Side)				78	691108	Screw (Flywheel Guard)
3	★299819	Seal—Oil (Magneto Side)				81	691740	Lock—Muffler Screw
4	493279	Sump—Engine				95	691636	Screw (Throttle Valve)
5	691160	Head—Cylinder				97	493267	Shaft—Throttle (Metal)
7	★∅692249	Gasket—Cylinder Head						———— Note ————
8	495786	Breather Assembly						696565 Shaft—Throttle (Plastic)
9	★∅272481	Gasket—Breather						
10	94650	Screw (Breather Assembly)	27	691866	Lock—Piston Pin	104	●691242	Pin—Float Hinge
11	691781	Tube—Breather	28	499423	Pin—Piston	117	494870	Jet—Main (Standard)
12	★692232	Gasket—Crankcase	29	499424	Rod—Connecting	118	497315	Jet—Main (High Altitude)
13	690912	Screw (Cylinder Head)	32	691664	Screw (Connecting Rod)	121	498260	Kit—Carburetor Overhaul
15	691680	Plug—Oil Drain (Square Socket)	32A	695759	Screw (Connecting Rod)	125	698444	Carburetor (Primer System)
16	691451	Crankshaft	33	262651	Valve—Exhaust	127	●694468	Plug—Welch (3/8" Diameter)
20	★399781	Seal—Oil (PTO Side) (Auxiliary PTO)	34	262652	Valve—Intake	130	691203	Valve—Throttle ———— Note ————
22	691092	Screw (Crankcase Cover/ Sump)	35	691270	Spring—Valve (Intake)			696564 Valve—Throttle (Used With Plastic Throttle Shaft)
23	692315	Flywheel (Rewind Start)	36	691270	Spring—Valve (Exhaust)	133	398187	Float—Carburetor
24	222698	Key—Flywheel	37	694086	Guard—Flywheel	134	●398188	Kit—Needle/Seat
25	790358	Piston Assembly (Standard) (Used After Code Date 04031400).	40	692194	Retainer—Valve	137	◆693981	Gasket—Float Bowl
		———— Note ————	43	691997	Slinger—Governor/Oil	146	690979	Key—Timing
		499433 Piston Assembly (Standard) (Used Before Code Date 04031500).	45	690548	Tappet—Valve	159	691753	Bracket—Air Cleaner Primer
		499435 Piston Assembly (.020" Oversize)	46	691449	Camshaft	163	★◆272653	Gasket—Air Cleaner
			50	497465	Manifold—Intake	187	691050	Line—Fuel (Cut to Required Length)
			51	★272199	Gasket—Intake	188	690877	Screw (Control Bracket)
			54	691650	Screw (Intake Manifold)	190	690940	Screw (Fuel Tank)
			55	691421	Housing—Rewind Starter			
			58	280399	Rope—Starter (Cut To Required Length)			
			60	281434	Grip—Starter Rope			
			65	690837	Screw (Rewind Starter)			

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

∅ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5955-6

Assemblies include all parts shown in frames.

06/22/2004

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
202	691829	Link—Mechanical Governor	404	690272	Washer (Governor Crank)	633	◆691321	Seal—Choke/Throttle Shaft
209	691291	Spring—Governor	425A	690670	Screw (Air Cleaner Cover)	635	66538	Boot—Spark Plug
222	692031	Bracket—Control (Remote/Manual Friction)(Primer)	443A	692523	Screw (Air Cleaner Primer Base)	668	★493823	Spacer (Includes 2)
227	690783	Lever—Governor Control	445A	491588	Filter—Air Cleaner Cartridge	670	692294	Spacer—Fuel Tank
265	690798	Clamp—Casing	455	695161	Cup—Flywheel	676A	393756	Deflector—Muffler
267	691044	Screw (Casing Clamp)	456	692299	Plate—Pawl Friction	677	690661	Screw (Muffler Deflector)
268	691025	Casing—Control Wire (Cut To Required Length)	459	281505	Pawl—Ratchet	684	690345	Screw (Breather Passage Cover)
269	691026	Wire—Control (Cut To Required Length)	505	691251	Nut (Governor Control Lever)	689	691855	Spring—Friction
270	691027	Nut (Control Wire Casing)	523	495264	Dipstick	718	690959	Pin—Locating
271	691028	Lever—Control	524	★692296	Seal—Dipstick Tube	741	790345	Gear—Timing (Use Without Woodruff Key)
276	◆271716	Washer—Sealing	525	495265	Tube—Dipstick	————— Note —————		
287	690940	Screw (Dipstick Tube)	529	691923	Grommet			691830 Gear—Timing (Uses Woodruff Key)
300	692038	Muffler	562	92613	Bolt (Governor Control Lever)	745	691648	Screw (Brake)
304	695892	Housing—Blower	584	697734	Cover—Breather Passage	842	★691031	Seal—O Ring (Dipstick Tube)
305	691108	Screw (Blower Housing)	585	★691879	Gasket—Breather Passage	847	692017	Dipstick/Tube Assembly
306	690450	Shield—Cylinder	592	690800	Nut (Rewind Starter)	851	493880	Terminal—Spark Plug
307	690345	Screw (Cylinder Shield)	597	691696	Screw (Pawl Friction Plate)	869	691155	Seat—Valve (Intake)
332	690662	Nut (Flywheel)	601	95162	Clamp—Hose	870	690380	Seat—Valve (Exhaust)
333	802574	Armature—Magneto	608	497680	Starter—Rewind	871	262001	Bushing—Valve Guide (Exhaust)
334	691061	Screw (Magneto Armature)	613	691340	Screw (Muffler)	————— Note —————		
337	802592	Plug—Spark	615	690340	Retainer—Governor Shaft			63709 Bushing—Valve Guide (Intake)
356	692390	Wire—Stop	616	698801	Crank—Governor	883	★∅691881	Gasket—Exhaust
358	497316	Gasket Set—Engine	617	★◆270344	Seal—O Ring (Intake Manifold)	922	692135	Spring—Brake
363	19069	Flywheel Puller	621	692310	Switch—Stop	923	695891	Brake
365	692524	Screw (Carburetor)				930	691919	Guard—Rewind
383	89838	Wrench—Spark Plug						

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

∅ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

12J900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
957	397974	Cap-Fuel Tank (Plastic)	976	694395	Primer-Carburetor	1058	275177	Manual-Owner's
966A	496116	Base-Air Cleaner Primer	977	498261	Gasket Set-Carburetor	1059	692311	Kit-Screw/Washer
967A	493537	Filter-Pre Cleaner	1005	691346	Fan-Flywheel	1095	498528	Gasket Set-Valve
968B	692298	Cover-Air Cleaner	1019	494256	Kit-Label	1210	498144	Pulley/Spring Assembly (Pulley)
970	691669	Screw (Air Cleaner Primer Bracket)	1036	790412	Label-Emission (Used After Code Date 04063000).	1211	498144	Pulley/Spring Assembly (Spring)
972	695887	Tank-Fuel (Plastic)			Note	1330	270962	Manual-Repair
975	493640	Bowl-Float			695111 Label-Emission (Used Before Code Date 04070100).			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5955-8

Assemblies include all parts shown in frames.

06/22/2004