

280H00

Illustrated Parts List

Model Series

280H00

TYPE NUMBERS
0005 THROUGH 0385.



TABLE OF CONTENTS

Air Cleaner	5
Alternator	7
Blower Housing	5
Camshaft	2
Carburetor	4
Controls	7
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Exhaust System	5
Flywheel	6
Fuel Supply	4
Gasket Set – Engine	2
Gasket Set – Valve	3
Governor Spring	7
Ignition	7
Kit – Carburetor Overhaul	4
Lubrication	3
Piston, Rings, Connecting Rod	2
Rewind Starter	6
Valves	3

PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

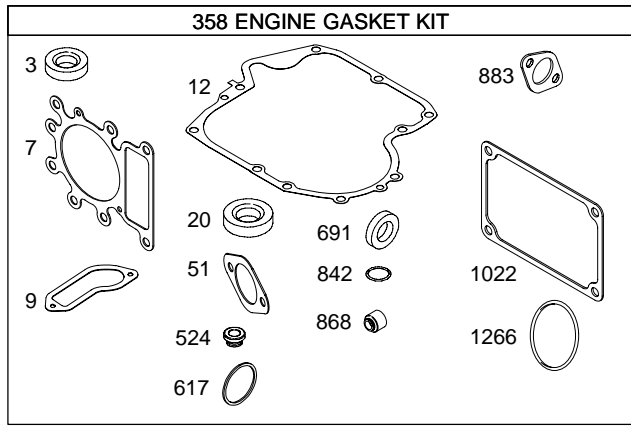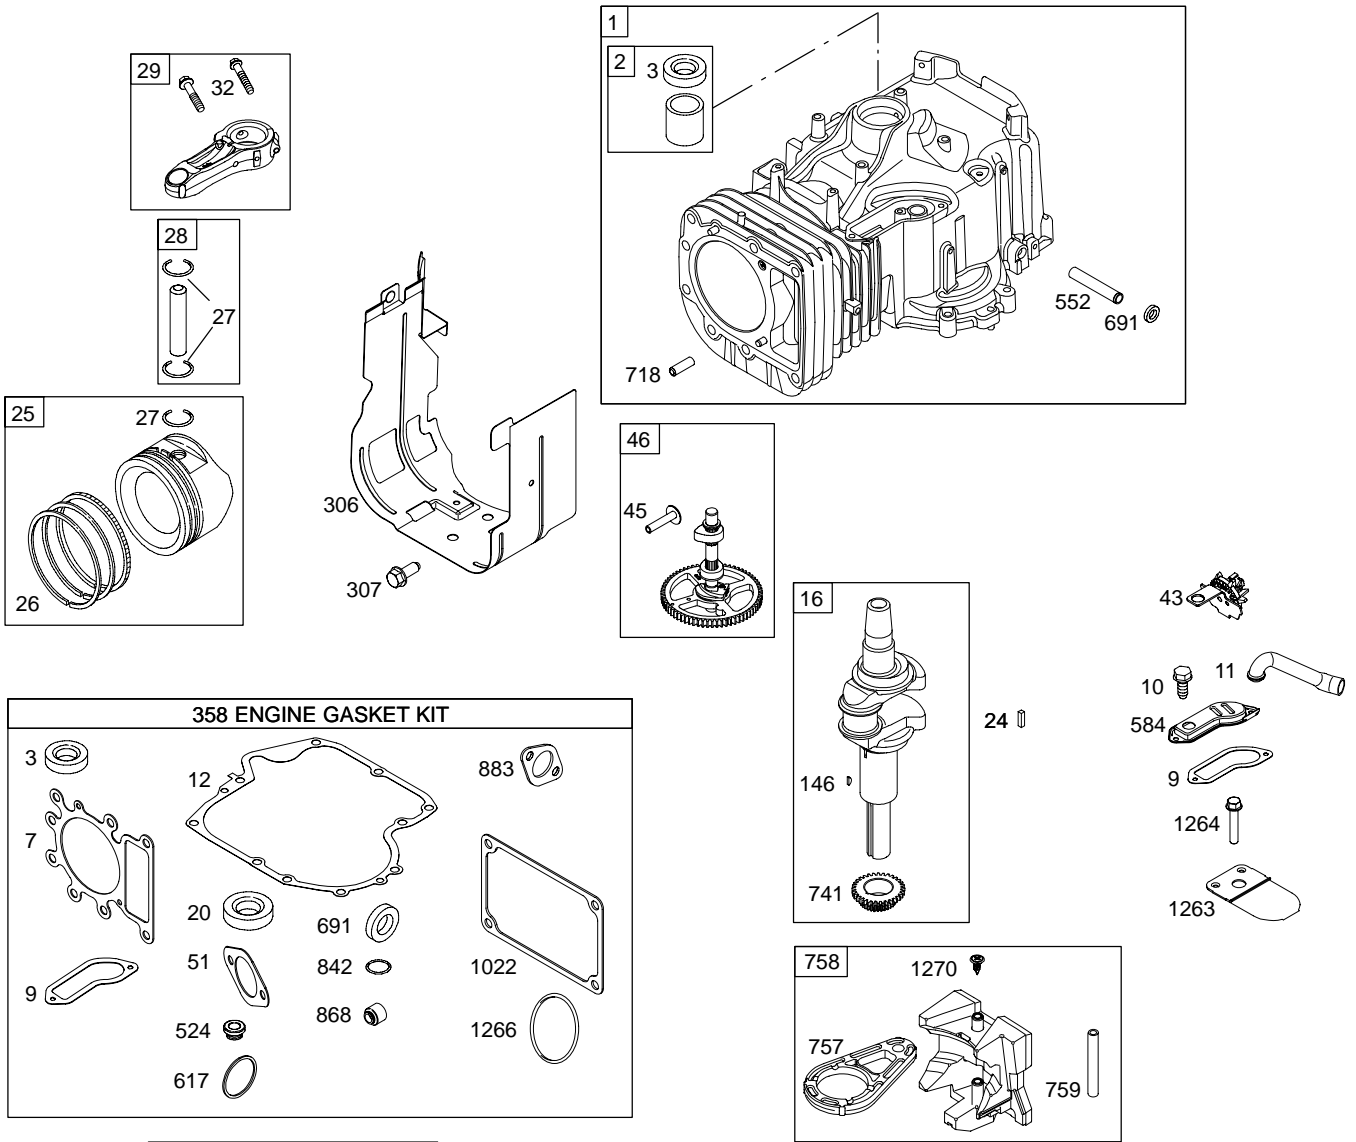




1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL













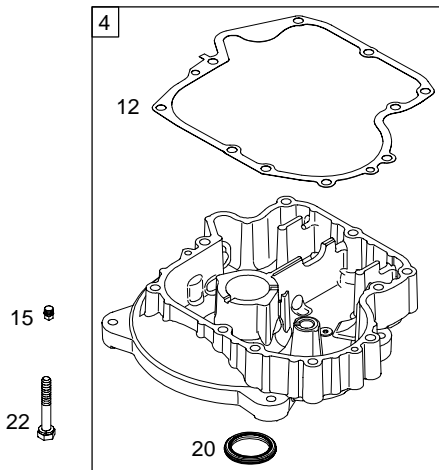


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

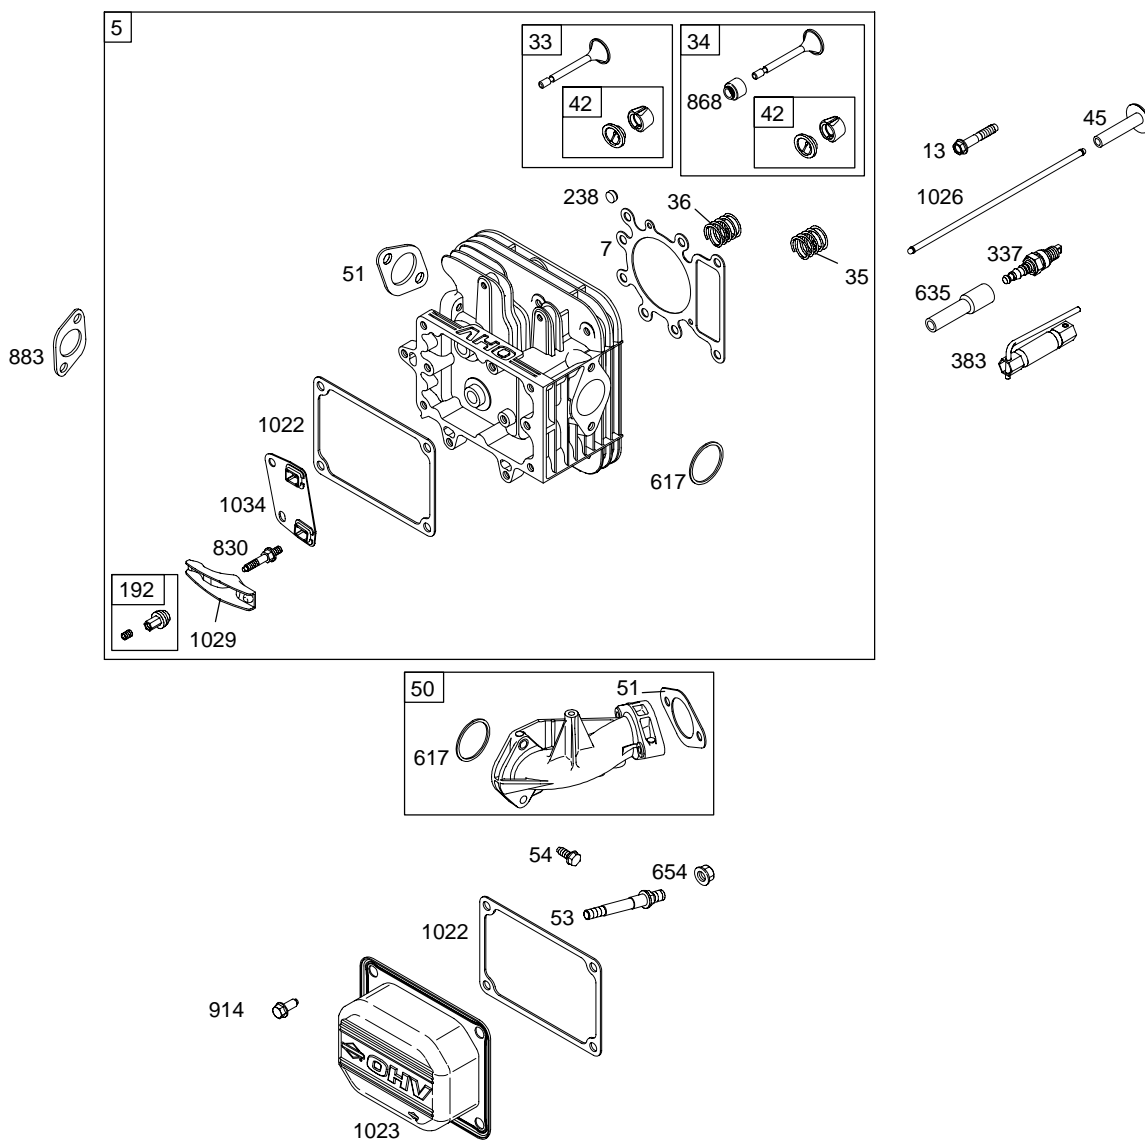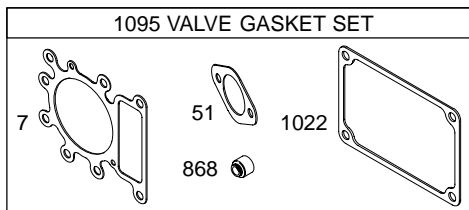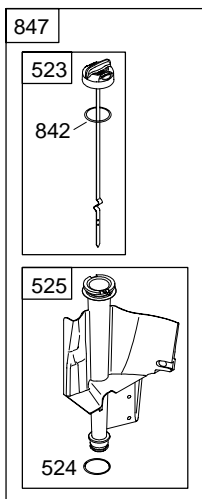






Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5446-3 Assemblies include all parts shown in frames.

280H00

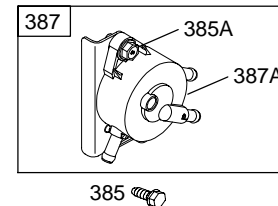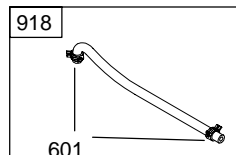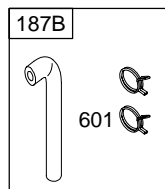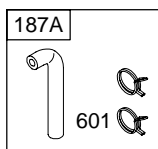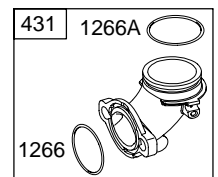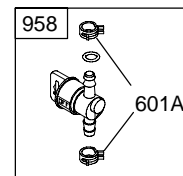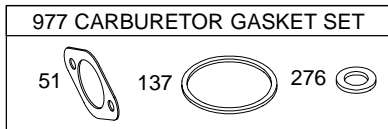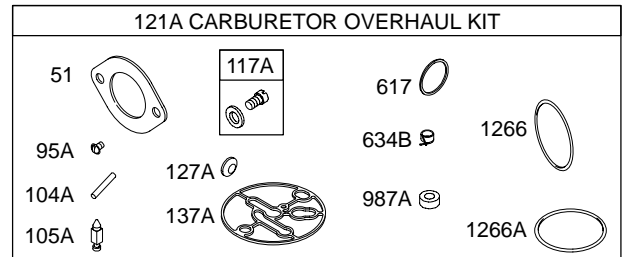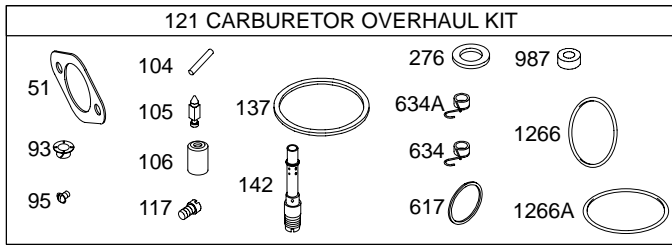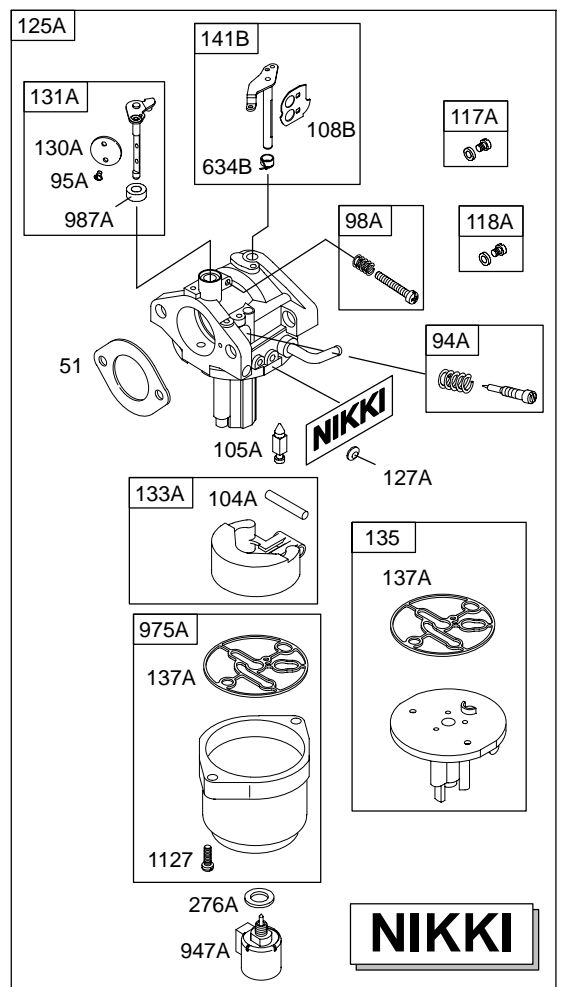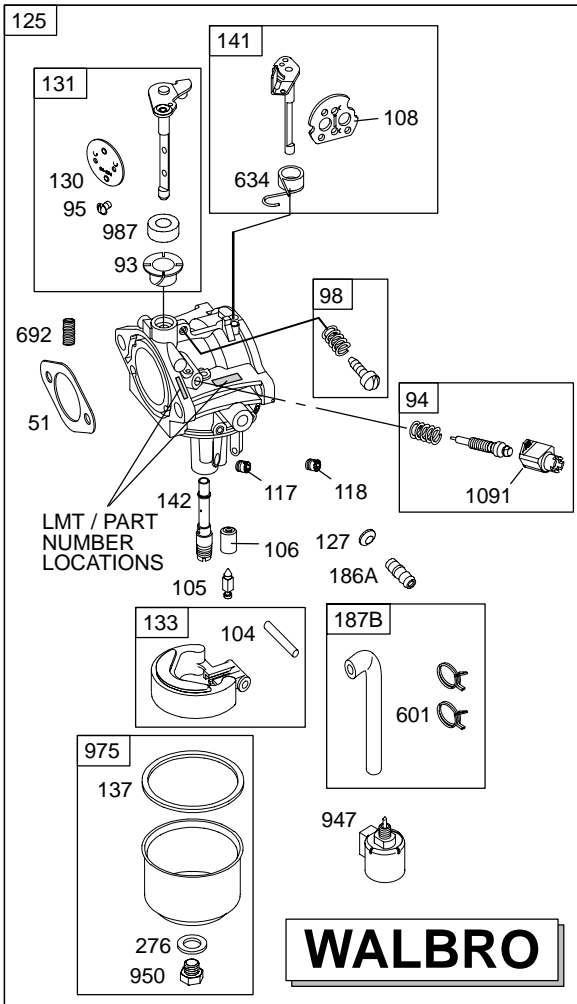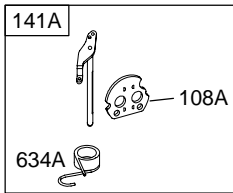


344


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

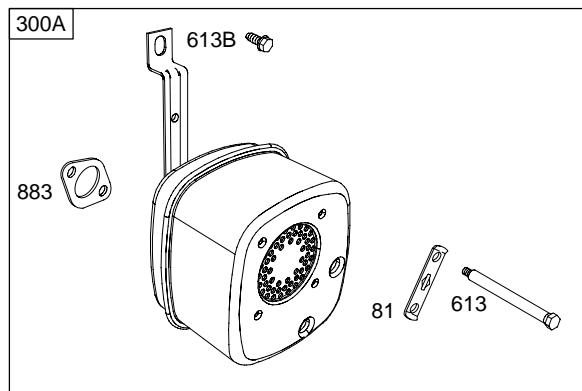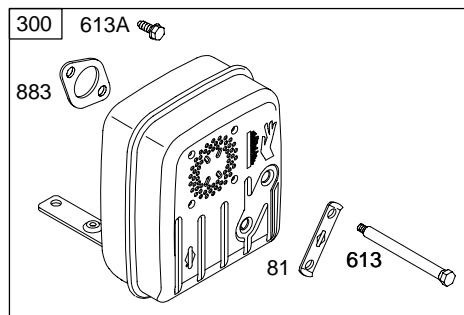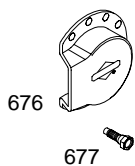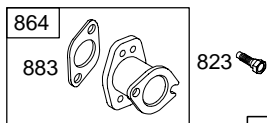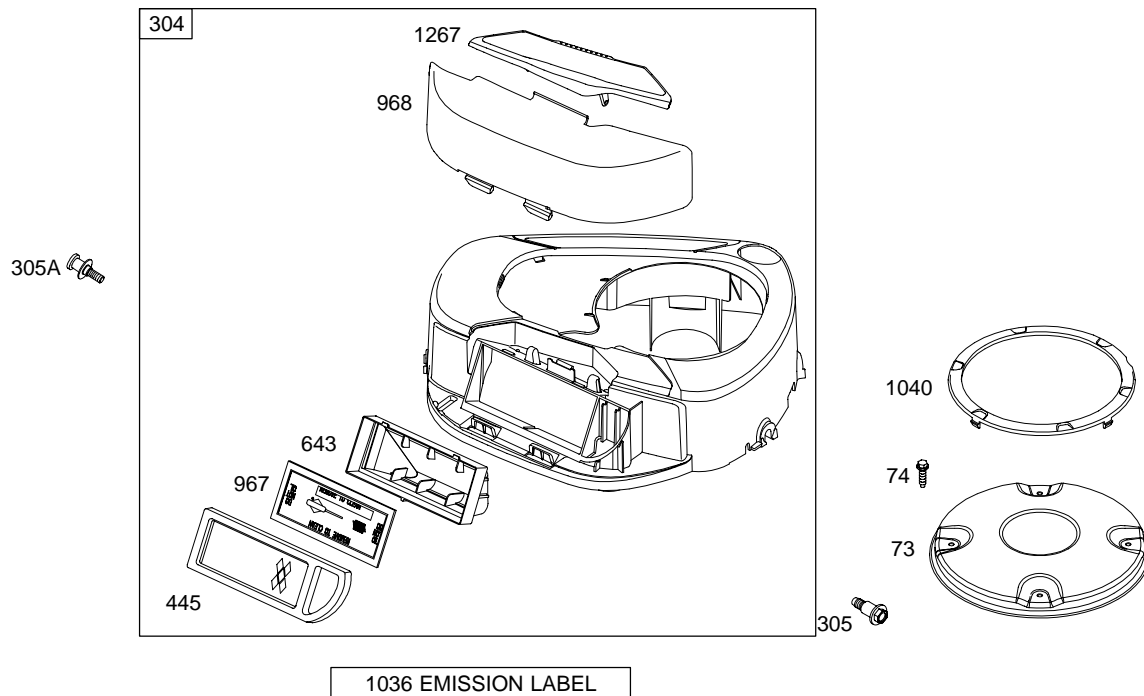










Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5446-5 Assemblies include all parts shown in frames.

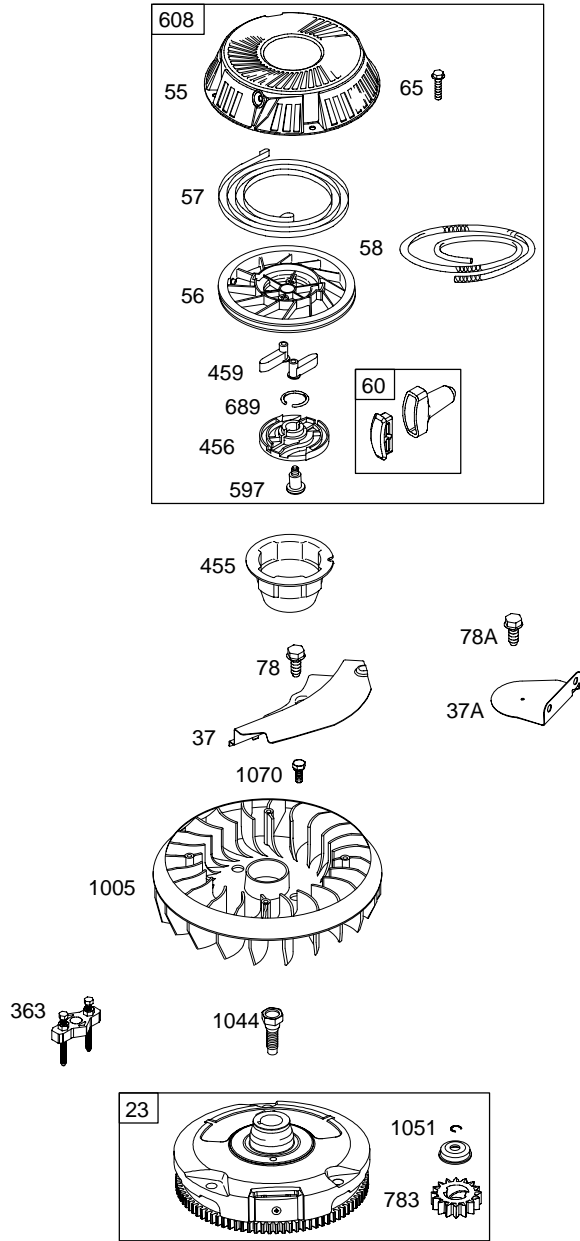

DC ONLY	DUAL CIRCUIT	TRI CIRCUIT
474	474A 1059	474B 1059
877A	877	877B
578	878	878A
		526 501

NOTE: All stators use a No. 1119 mounting screw. 

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

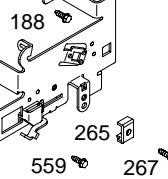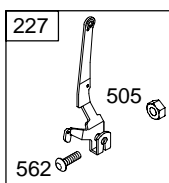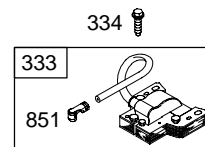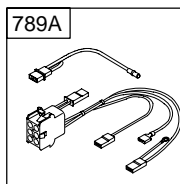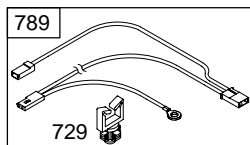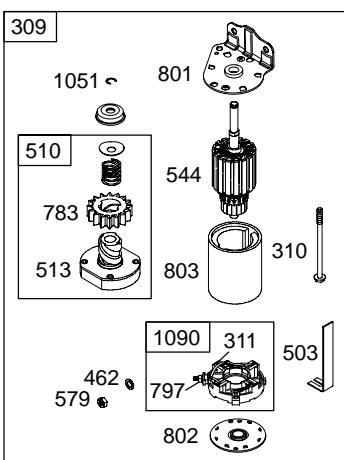

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

280H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697132	Cylinder Assembly	26	698375	Ring Set (Standard)	73	697133	Screen-Rotating
2	399265	Kit-Bushing/Seal (Magneto Side)			Note	74	697897	Screw (Rotating Screen)
3	★391086	Seal-Oil (Magneto Side)			698396	78	691003	Screw (Flywheel Guard)
4	697106	Sump-Engine			(.010" Oversize)	78A	690364	Screw (Flywheel Guard)
5	698148	Head-Cylinder			698397			Used on Type No(s). 0118.
7	★△273280	Gasket-Cylinder Head			(.020" Oversize)			
9	★697109	Gasket-Breather			698398			
10	697157	Screw (Breather Assembly)	27	698469	Lock-Piston Pin	81	691178	Lock-Muffler Screw
11	697113	Tube-Breather	28	697099	Pin-Piston (Standard)	93	690602	Bushing-Throttle Shaft
12	★697110	Gasket-Crankcase	29	697126	Rod-Connecting (Standard)	94	498030	Kit-Idle Mixture
13	690360	Screw (Cylinder Head)	32	692852	Screw (Connecting Rod)	94A	695425	Kit-Idle Mixture
15	690946	Plug-Oil Drain (3/8" Standard)	33	695760	Valve-Exhaust	95	691636	Screw (Throttle Valve)
16	697127	Crankshaft	34	695761	Valve-Intake	95A	690718	Screw (Throttle Valve)
20	★690947	Seal-Oil (PTO Side)	35	691279	Spring-Valve (Intake)	98	495800	Kit-Idle Speed
22	692125	Screw (Crankcase Cover/Sump)	36	691279	Spring-Valve (Exhaust)	98A	695408	Kit-Idle Speed
23	693557	Flywheel Used on Type No(s). 0036, 0117, 0130, 0160, 0185, 0282, 0311, 0385.	37	697352	Guard-Flywheel Used on Type No(s). 0005, 0036, 0111, 0112, 0116, 0117, 0119, 0120, 0121, 0130, 0131, 0160, 0166, 0185, 0311.	104	690525	Pin-Float Hinge
		Note				104A	694918	Pin-Float Hinge
		693556	37A	697626	Guard-Flywheel Used on Type No(s). 0118.	105	231855	Valve-Float Needle
		Used on Type No(s). 0005, 0118, 0119, 0120, 0124, 0166.				105A	696136	Valve-Float Needle
		790835				106	690577	Seat-Inlet (Gravity Feed)
		Used on Type No(s). 0112, 0121, 0131.						Note
		790894						691780
		Used on Type No(s). 0111, 0116, 0123.						Seat-Inlet (Pump Feed)
24	222698	Key-Flywheel	42	499586	Keeper-Valve	108	690464	Valve-Choke (697204)
25	698371	Piston Assembly (Standard)	43	691968	Slinger-Governor/Oil	108A	692344	Valve-Choke (696179, 696181, 697202, 697203)
		Note	45	690564	Tappet-Valve	108B	695419	Valve-Choke
		698393	46	698492	Camshaft	117	694352	Jet-Main (Standard)
		Assembly (.010" Oversize)	50	690193	Manifold-Intake	117A	699457	Jet-Main (Standard)
		698394	51	★△692137	Gasket-Intake	118	697228	Jet-Main (High Altitude)
		Assembly (.020" Oversize)	53	690227	Stud (Carburetor)	118A	699458	Jet-Main (High Altitude)
		698395	54	691148	Screw (Intake Manifold)	121	697241	Kit-Carburetor Overhaul (Walbro)
		Assembly (.030" Oversize)	55	695130	Housing-Rewind Starter	121A	699521	Kit-Carburetor Overhaul (Nikki Carburetor)
			56	695129	Pulley-Starter			Used on Type No(s). 0185.
			57	695131	Spring-Rewind Starter			
			58	695132	Rope-Starter			
			60	494212	Grip-Starter Rope			
			65	695453	Screw (Rewind Starter)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

280H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
125	698445	Carburetor (Walbro) (Gravity Feed)	209	692208	Spring-Governor (Green) Used on Type No(s). 0005, 0036, 0117, 0118, 0120, 0130, 0160, 0166, 0185, 0282, 0385.	268	691025	Casing-Control Wire (Cut To Required Length)		
125A	790418	Carburetor (Nikki)(Gravity Feed)				269	691026	Wire-Control (Cut To Required Length)		
127	695005	Plug-Welch				270	691027	Nut (Control Wire Casing)		
127A	★690727	Plug-Welch				271	691028	Lever-Control		
130	691750	Valve-Throttle			Note	276	692255	Washer-Sealing		
130A	699500	Valve-Throttle			690576	276A	695410	Washer-Sealing		
131	494379	Kit-Throttle Shaft			Spring-Governor (Gold)	300	697349	Muffler Used on Type No(s). 0005, 0036.		
131A	699501	Kit-Throttle Shaft			Used on Type No(s). 0111, 0112.	300A	698356	Muffler Used on Type No(s). 0117, 0118, 0119, 0120, 0124, 0130.		
133	494381	Float-Carburetor			691795	304	698599	Housing-Blower (Black) Used on Type No(s). 0005, 0036, 0112, 0117, 0118, 0119, 0120, 0124, 0130, 0131, 0160, 0166.		
133A	694914	Float-Carburetor			Spring-Governor (Yellow)					
135	698780	Tube-Fuel Transfer			Used on Type No(s). 0116, 0119, 0121, 0123, 0124.					
137	281165	Gasket-Float Bowl			260902					
137A	698781	Gasket-Float Bowl			Spring-Governor (No Color)					
141	495097	Kit-Choke Shaft (697204)			Used on Type No(s). 0131, 0311.					
141A	495931	Kit-Choke Shaft (696179, 696181, 697202, 697203)	216	691840	Link-Choke					
141B	698778	Kit-Choke Shaft	222	694042	Bracket-Control					
142	697140	Nozzle-Carburetor (Standard)	227	691374	Lever-Governor Control			Note		
146	691639	Key-Timing			232	691842	Spring-Governor Link	698402		
186	692317	Connector-Hose (90 Degree)			238	691843	Cap-Valve	Housing-Blower (Red)		
186A	698174	Connector-Hose (Straight)			240	394358	Filter-Fuel (White, 75 Microns) Used on Type No(s). 0005, 0036, 0112, 0116, 0117, 0121, 0123, 0130, 0131, 0160, 0166, 0185, 0282, 0311, 0385.	Used on Type No(s). 0111, 0116, 0121, 0123, 0185, 0282, 0311, 0385.		
187	691050	Line-Fuel (Cut To Required Length)						305	697102	Screw (Blower Housing)
187A	697907	Line-Fuel (Formed)(9-5/8 Inches Long)(Cut To Required Length)						305A	697103	Screw (Blower Housing)
187B	698417	Line-Fuel (Formed)(10-1/4 Inches Long)(Cut to Required Length)	240B	691035	Filter-Fuel (Includes Paper Element With A 40 Micron Rating) Used on Type No(s). 0111, 0119, 0120, 0124.			306	697107	Shield-Cylinder
188	691693	Screw (Control Bracket)						307	691003	Screw (Cylinder Shield)
192	691986	Adjuster-Rocker Arm						309	693551	Motor-Starter Used on Type No(s). 0005, 0036, 0112, 0116, 0117, 0119, 0120, 0121, 0123, 0124, 0130, 0131, 0160, 0166, 0185, 0282, 0311, 0385.
202	691841	Link-Mechanical Governor	265	691024	Clamp-Casing					Note
			267	690804	Screw (Casing Clamp)					693552
					Note					Motor-Starter Used on Type No(s). 0111.
					695134					
					Screw (Casing Clamp) Used on Type No(s). 0160, 0166, 0282, 0385.					

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5446-9

Assemblies include all parts shown in frames.

10/07/2004

280H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
310	690323	Screw (Starter Motor)	474	696578	Alternator (DC Only) Used on Type No(s). 0111, 0117.	526	697088	Screw (Regulator) Used on Type No(s). 0005, 0112, 0119, 0120, 0121, 0124, 0131, 0166.
311	497608	Brush Set	474A	696459	Alternator (Dual Circuit) Used on Type No(s). 0036, 0116, 0123, 0130, 0160, 0185, 0282, 0311.	———— Note ———— 697348 Screw (Regulator) Used on Type No(s). 0118.		
333	492341	Armature—Magneto	474B	696457	Alternator (Tri Circuit) Used on Type No(s). 0005, 0112, 0118, 0119, 0120, 0121, 0124, 0131, 0166.	544	692034	Armature—Starter ———— Note ———— Armature—Starter (Not Serviced Separately, Order Starter Motor 693552) Used on Type No(s). 0111.
334	691061	Screw (Magneto Armature)	501	691188	Regulator Used on Type No(s). 0005, 0112, 0119, 0120, 0121, 0124, 0131, 0166.	552	697144	Bushing—Governor Crank
337	491055	Plug—Spark Used on Type No(s). 0005, 0036, 0117, 0118, 0119, 0120, 0124, 0130, 0185, 0282.	———— Note ———— 698315 Regulator Used on Type No(s). 0118.		559	697561	Screw (Remote Choke Stop)	
344	693675	Screw (Cable Clamp) Used on Type No(s). 0385.	503	691532	Strap—Starter	562	691119	Bolt (Governor Control Lever)
356	697089	Wire—Stop	505	691251	Nut (Governor Control Lever)	578	692306	Wire Assembly
358	697151	Gasket Set—Engine	510	693699	Drive—Starter	579	691029	Nut (Starter Cable)
363	19203	Puller—Flywheel	513	692024	Clutch—Drive	584	697112	Cover—Breather Passage
383	89838	Wrench—Spark Plug	521	690581	Shield—Cable Used on Type No(s). 0160, 0311.	597	691696	Screw (Pawl Friction Plate)
385	694476	Screw (Fuel Pump)	523	699908	Dipstick	601	95162	Clamp—Hose
385A	690297	Screw (Fuel Pump)	524	★691032	Seal—Dipstick Tube	601A	691038	Clamp—Hose
387	697090	Pump—Fuel (Includes Mounting Bracket) Used on Type No(s). 0111, 0119, 0120, 0124.	525	697184	Tube—Dipstick Used on Type No(s). 0005, 0036, 0112, 0116, 0117, 0118, 0121, 0123, 0130, 0131, 0160, 0166, 0185, 0282, 0311.	608	695058	Starter—Rewind
387A	808656	Pump—Fuel Used on Type No(s). 0111, 0119, 0120, 0124.	———— Note ———— 697085 Tube—Dipstick Used on Type No(s). 0111, 0119, 0120, 0124.		613	691416	Screw (Muffler)	
404	691691	Washer (Governor Crank)			613A	690297	Screw (Muffler)	
431	697122	Elbow—Intake			613B	691678	Screw (Muffler)	
445	698083	Filter—Air Cleaner Cartridge (Non Washable)			614	691620	Pin—Cotter	
455	695113	Cup—Flywheel			616	692012	Crank—Governor	
456	695128	Plate—Pawl Friction			617	★692138	Seal—O Ring (Intake Manifold)	
459	281505	Pawl—Ratchet			634	690801	Spring/Seal Assembly (697204)	
462	691261	Washer (Starter Cable)			634A	690802	Spring/Seal Assembly (696179, 696181, 697202, 697203)	
					634B	698779	Spring/Seal Assembly	
					635	691909	Boot—Spark Plug	
					643	698401	Retainer—Air Filter	
					654	690958	Nut (Carburetor)	

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

△ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

280H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
676	393761	Deflector-Muffler	847	790442	Dipstick/Tube Assembly	975	495933	Bowl-Float
677	690661	Screw (Muffler Deflector)			Used on Type No(s). 0005, 0036, 0112, 0116, 0117, 0118, 0121, 0123, 0130, 0131, 0160, 0166, 0185, 0282, 0311, 0385.	975A	699502	Bowl-Float
689	691855	Spring-Friction				977	690192	Gasket Set-Carburetor
691	★692407	Seal-Governor Shaft				987	691326	Seal-Throttle Shaft
692	690572	Spring-Detent				987A	698777	Seal-Throttle Shaft
697	690372	Screw (Drive Cap)				1005	699043	Fan-Flywheel
718	690959	Pin-Locating				1019	699196	Kit-Label
729	691335	Clip-Wire (Wire Saddle)			Note			791044 Kit-Label (14.5 HP INTEK) Used on Type No(s). 0117.
729A	691224	Clip-Wire (Aluminum Coated Steel)			790443 Dipstick/Tube Assembly Used on Type No(s). 0111, 0119, 0120, 0124.			791045 Kit-Label (13.5 HP I/C) Used on Type No(s). 0311.
729B	694123	Clip-Wire (Nylon)	851	692424	Terminal-Spark Plug			
741	697128	Gear-Timing	864	697346	Adapter-Muffler			
757	697607	Link-Counterweight	868	★△690968	Seal-Valve	1022	★△272475	Gasket-Rocker Cover
758	697134	Counterweight	877	393456	Wire/Connector-Alternator (Dual Circuit)	1023	692492	Cover-Rocker
759	697392	Pin-Counterweight	877A	393814	Wire/Connector-Alternator (DC Only)	1026	692003	Rod-Push (Intake)
783	693713	Gear-Pinion						Note
789	692037	Harness-Wiring Used on Type No(s). 0005, 0036, 0116, 0120, 0121, 0130, 0131, 0160, 0166.	877B	393537	Wire/Connector-Alternator (Tri Circuit)			692011 Rod-Push (Exhaust)
789A	698329	Harness-Wiring Used on Type No(s). 0111, 0112, 0117, 0118, 0119, 0123, 0124, 0185, 0282, 0311, 0385.	878	691237	Harness-Alternator	1029	691751	Arm-Rocker
797	693167	Nut (Brush Retainer)	878A	691955	Harness-Alternator	1034	690822	Guide-Push Rod
801	691283	Cap-Drive	883	★692236	Gasket-Exhaust	1036	790464	Label-Emissions (Used After Code Date 04063000)
802	691286	Cap-End	914	691108	Screw (Rocker Cover)			Note
803	693757	Housing-Starter	918	697091	Hose-Vacuum (Formed) Used on Type No(s). 0111, 0119, 0120, 0124.			695700 Label-Emissions (Used Before Code Date 04070100)
		Note	947	694393	Solenoid-Fuel	1040	698368	Plate-Trim
		Housing-Starter (Not Serviced Separately, Order Starter Motor 693552) Used on Type No(s). 0111.	947A	695423	Solenoid-Fuel	1044	698139	Screw (Flywheel)
823	698941	Screw (Muffler Adapter)	950	695407	Screw-Float Bowl	1051	691265	Ring-Retaining
830	691095	Stud-Rocker Arm	958	698183	Valve-Fuel Shut Off (Plastic)	1054	280275	Tie-Cable
842	★691031	Seal-O Ring (Dipstick Tube)	967	697015	Filter-Pre Cleaner	1058	275935	Operator's Manual
			968	698403	Cover-Air Cleaner (Black)	1059	698516	Kit-Screw/Washer
						1070	690372	Screw (Flywheel Fan)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5446-11

Assemblies include all parts shown in frames.

10/07/2004

280H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1090	691293	Retainer-Brush	1267	697419	Latch-Blower Housing	1270	697156	Plug-AVS
1091	691333	Cap-Limiter			Used on Type No(s).			Counterweight
1095	691581	Gasket Set-Valve			0005, 0036, 0112,	1330	272147	Repair Manual
1119	691183	Screw			0117, 0118, 0119,			
		(Alternator)			0120, 0124, 0130,			
1127	695407	Screw			0131, 0160, 0166.			
		(Float Bowl)			Note			
1263	697124	Reed-Breather			697575 Latch-Blower			
1264	697104	Screw			Housing			
		(Breather Reed)			Used on Type No(s).			
1266	★691917	Seal-O Ring			0111, 0116, 0121,			
		(Intake Elbow)			0123, 0185, 0282,			
1266A	697123	Seal-O Ring			0311, 0385.			
		(Intake Elbow)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.