

28BH00

Illustrated Parts List

Model Series

28BH00

TYPE NUMBERS
0101, 0105, 0114



TABLE OF CONTENTS

Alternator	7
Blower Housing/Air Cleaner	5
Camshaft	2
Carburetor	4
Controls	7
Engine Sump	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Flywheel	6
Fuel System	4
Governor Spring	7
Ignition	7
Kit/Gaskets – Carburetor	4
Kit/Gaskets – Engine	2
Kit/Gaskets – Valve	3
Muffler	5
Oil System Components	3
Piston and Rod Group	2
Rewind Starter	6
Valves	3

PRINTED IN U.S.A.





COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

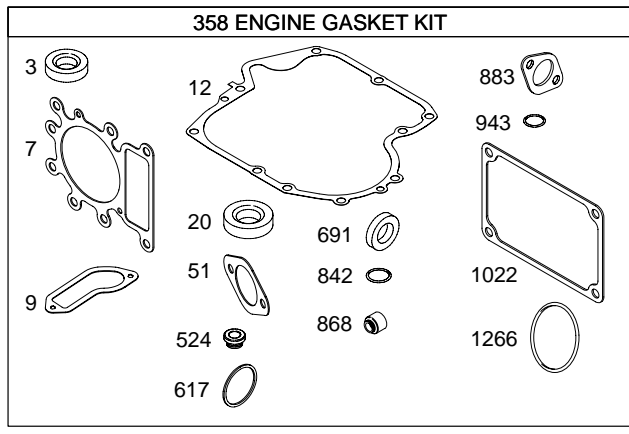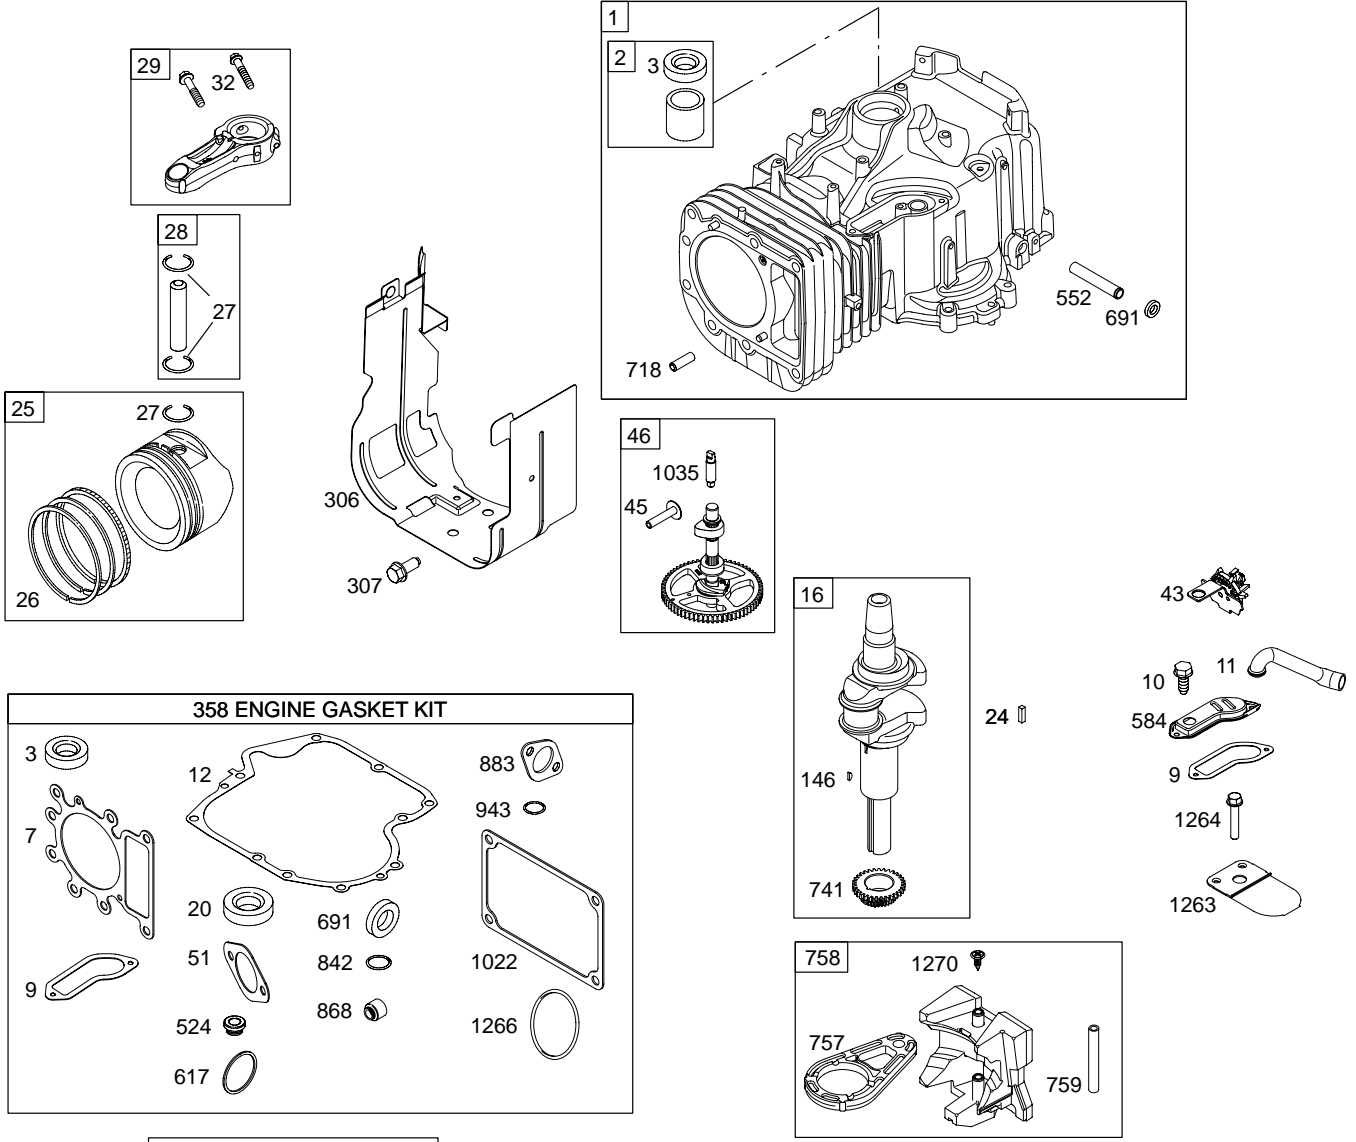

1019 LABEL KIT
1058 OWNER'S MANUAL






1330 REPAIR MANUAL





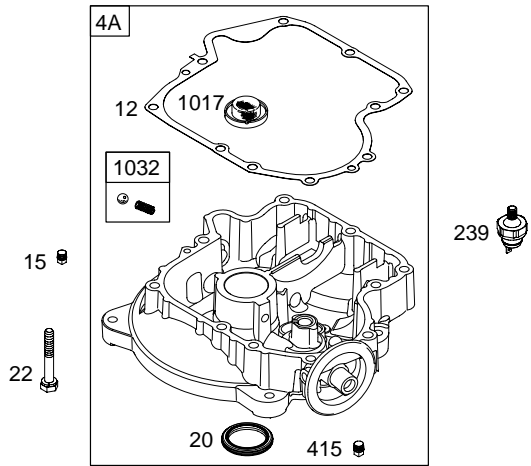


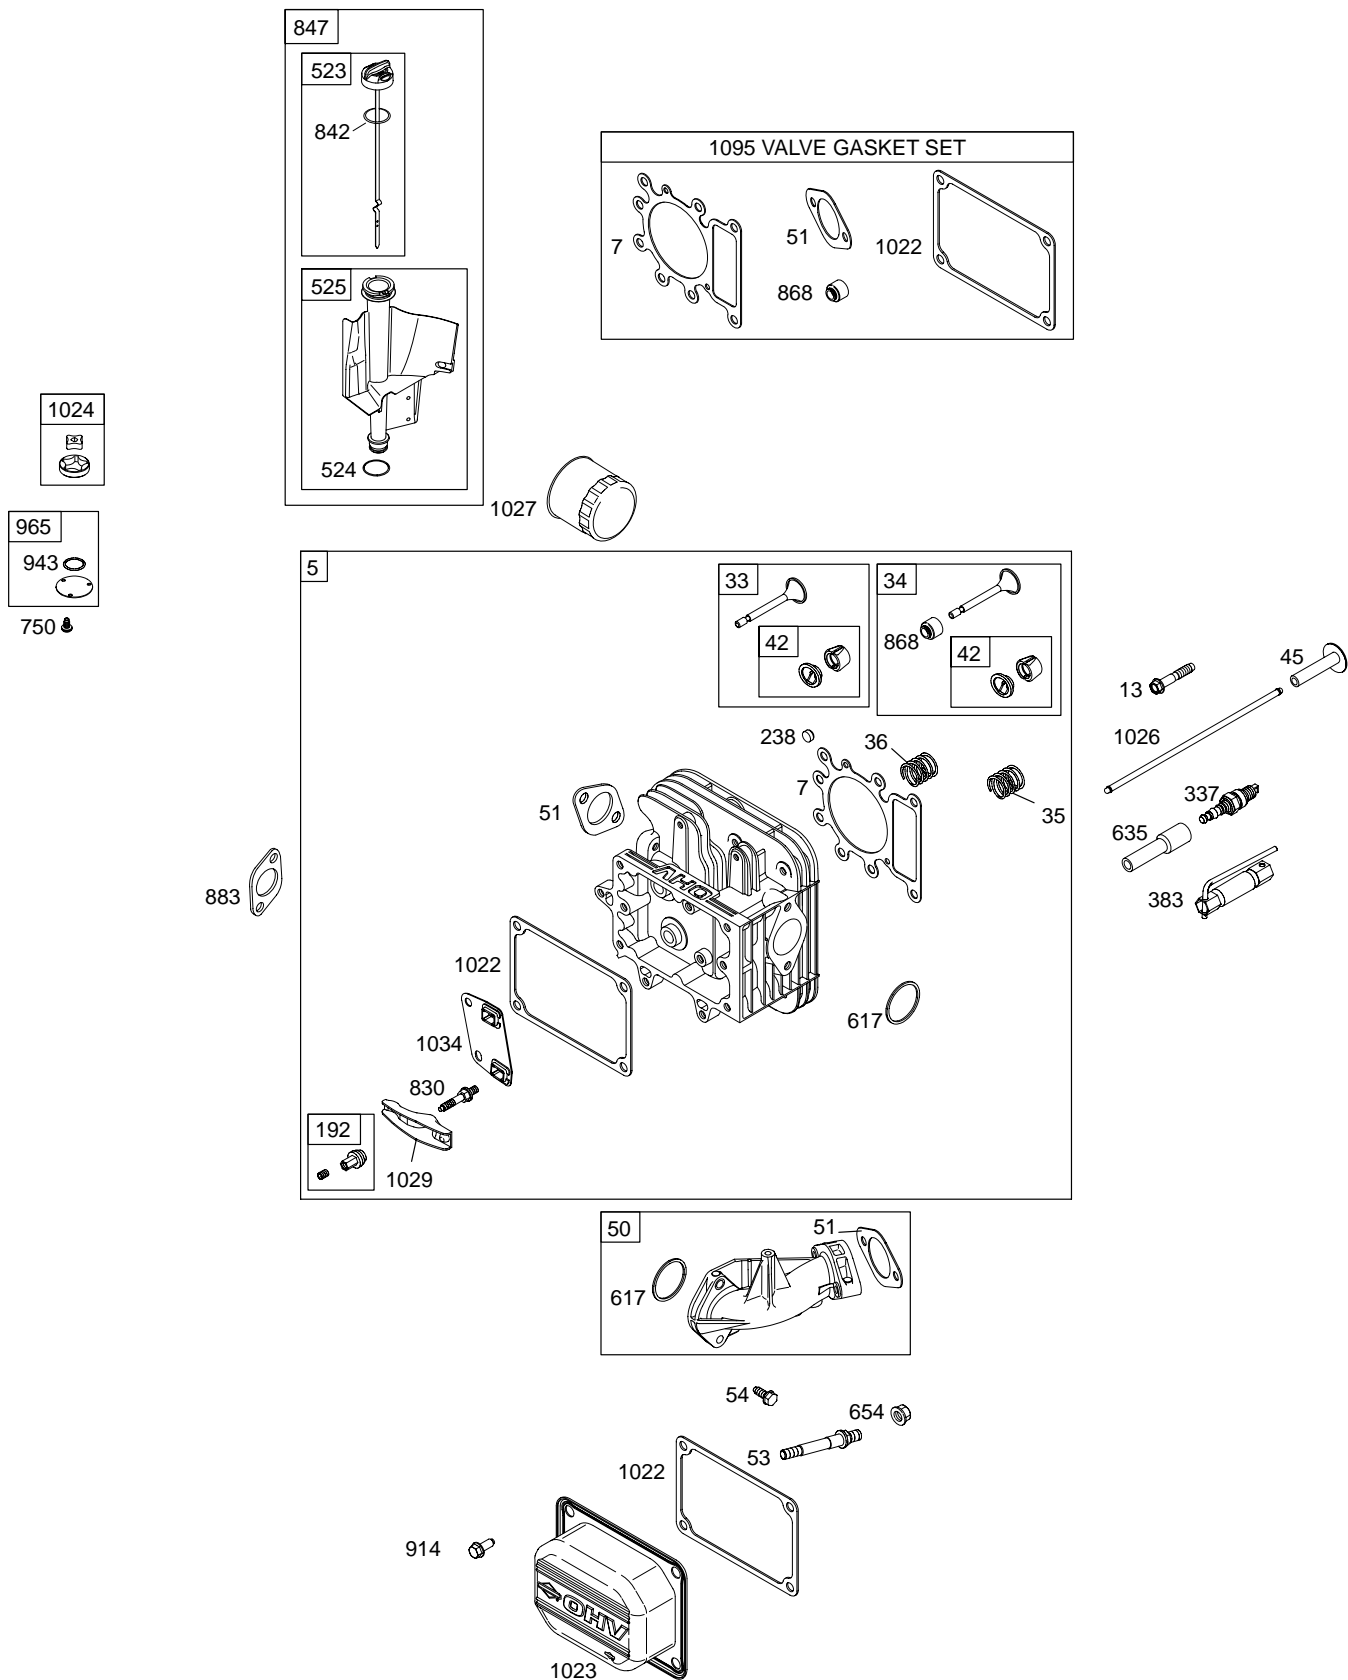




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5329-3 Assemblies include all parts shown in frames. 05/05/2004


28BH00

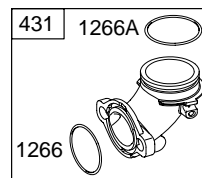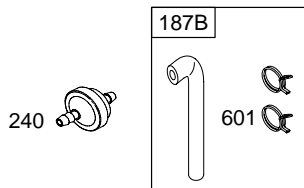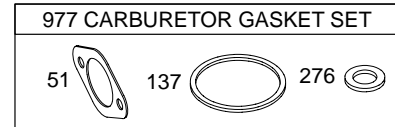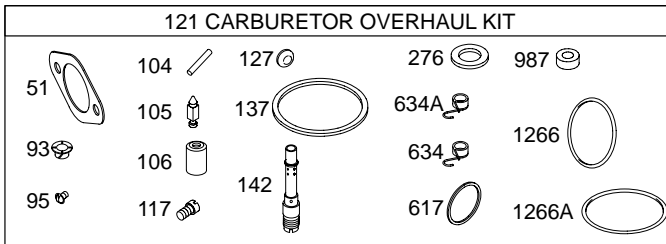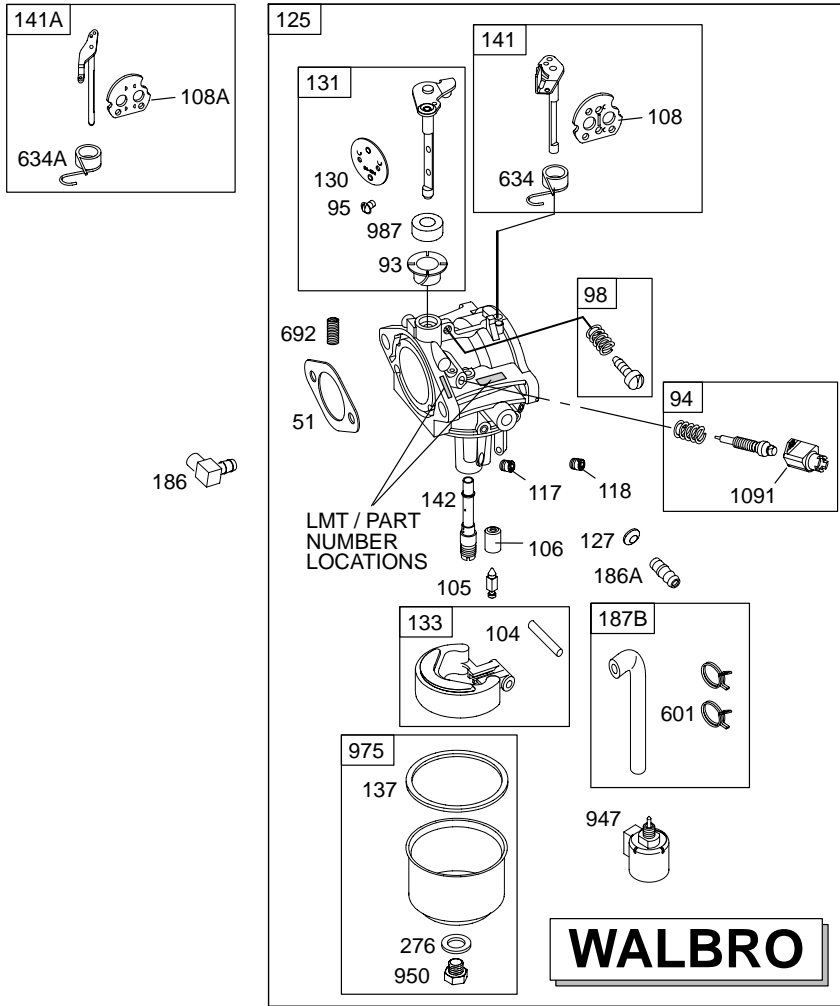


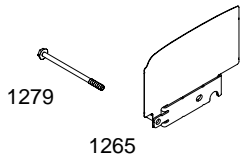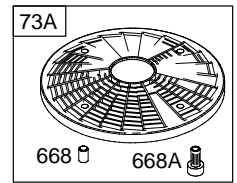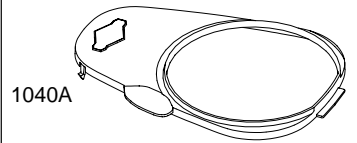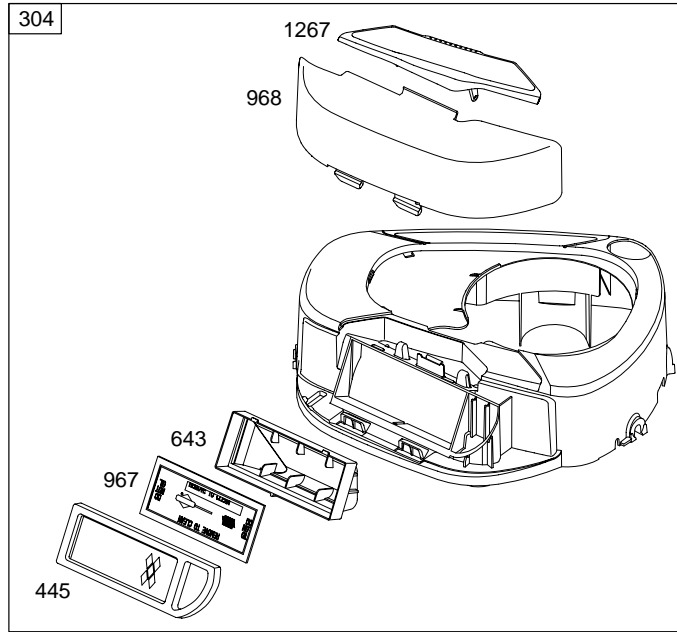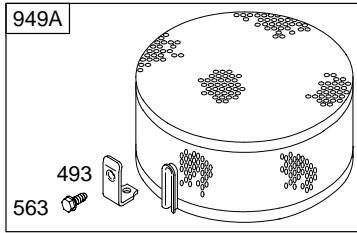

1036 EMISSION LABEL




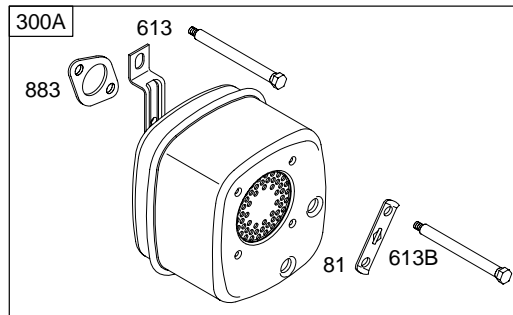
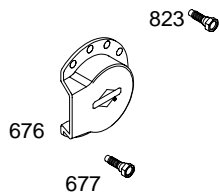
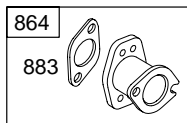


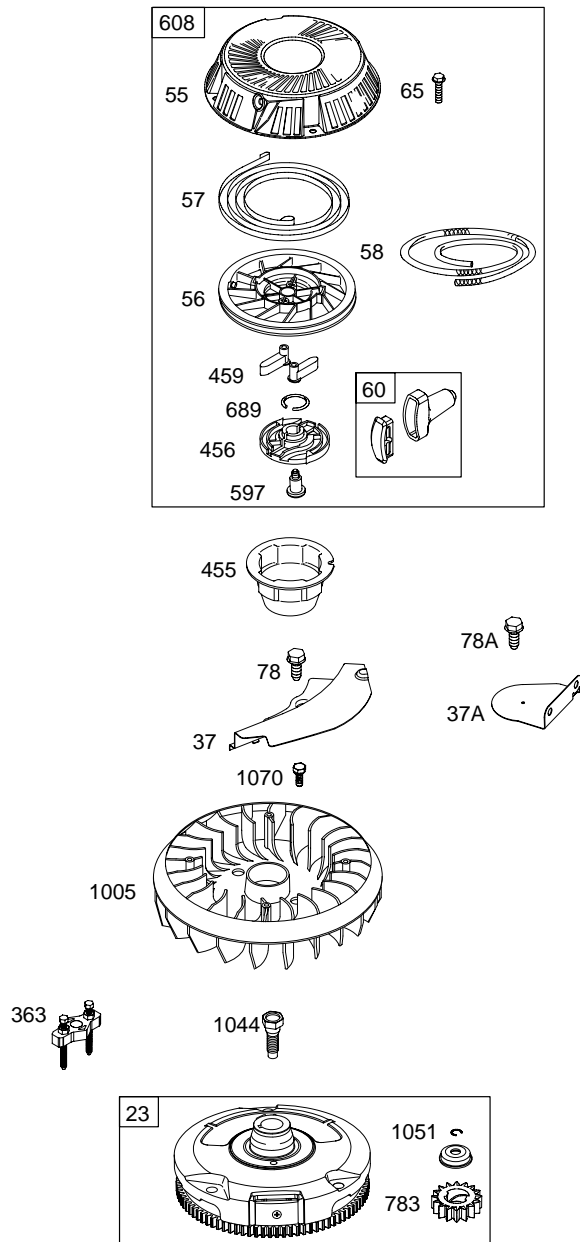

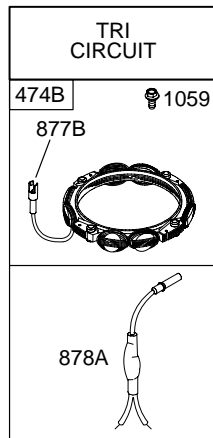

NOTE: All stators use a No. 1119 mounting screw.

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

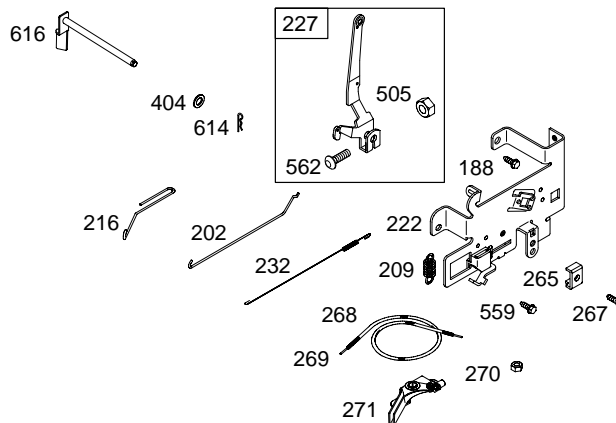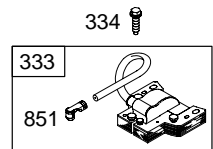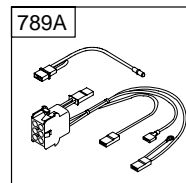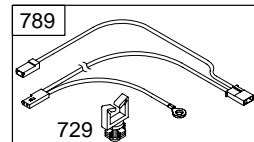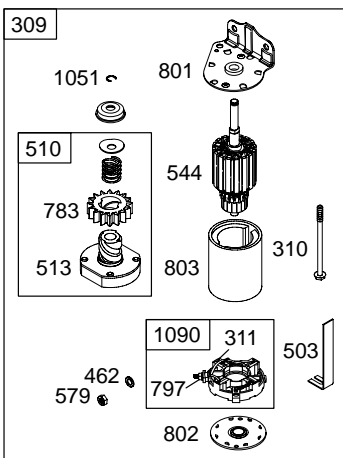

28BH00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697132	Cylinder Assembly	29	697518	Rod-Connecting (Standard)	73A	494439	Screen-Rotating Used on Type No(s). 0101, 0105.
2	399265	Kit-Bushing/Seal (Magneto Side)			Note	74	691674	Screw (Rotating Screen)
3	★391086	Seal-Oil (Magneto Side)			697264 Rod-Connecting (.020" Undersize)	78	691003	Screw (Flywheel Guard) Used on Type No(s). 0101, 0105.
4A	697188	Sump-Engine	32	692852	Screw (Connecting Rod)	78A	690364	Screw (Flywheel Guard) Used on Type No(s). 0114.
5	698404	Head-Cylinder	33	698370	Valve-Exhaust	81	691178	Lock-Muffler Screw
7	★Δ273280	Gasket-Cylinder Head	34	695761	Valve-Intake	93	●690602	Bushing-Throttle Shaft
9	★697109	Gasket-Breather	35	691279	Spring-Valve (Intake)	94	498030	Kit-Idle Mixture
10	697157	Screw (Breather Assembly)	36	691279	Spring-Valve (Exhaust)	95	●691636	Screw (Throttle Valve)
11	697113	Tube-Breather	37	697108	Guard-Flywheel Used on Type No(s). 0101, 0105.	98	495800	Kit-Idle Speed
12	★697110	Gasket-Crankcase	37A	697626	Guard-Flywheel Used on Type No(s). 0114.	104	●690525	Pin-Float Hinge
13	690360	Screw (Cylinder Head)	42	499586	Keeper-Valve	105	●231855	Valve-Float Needle
15	690946	Plug-Oil Drain	43	691968	Slinger-Governor/Oil	106	●690577	Seat-Inlet (Gravity Feed)
16	697516	Crankshaft	45	690564	Tappet-Valve	108	690464	Valve-Choke (LMT 697204)
20	★690947	Seal-Oil (PTO Side)	46	698492	Camshaft	108A	692344	Valve-Choke (LMT 696181, 697203)
22	692125	Screw (Crankcase Cover/Sump)	50	690193	Manifold-Intake	117	●694352	Jet-Main (Standard)
23	693556	Flywheel	51★Δ●◆692137	Gasket-Intake	53	690227	Stud (Carburetor)	
24	222698	Key-Flywheel	54	691148	Screw (Intake Manifold)	118	697228	Jet-Main (High Altitude)
25	698390	Piston Assembly (Standard)	55	695130	Housing-Rewind Starter Used on Type No(s). 0114.	121	697241	Kit-Carburetor Overhaul
		Note	56	695129	Pulley-Starter Used on Type No(s). 0114.	125	698445	Carburetor (Gravity Feed)
		698393 Piston Assembly (.010" Oversize)	57	695131	Spring-Rewind Starter Used on Type No(s). 0114.	127	●695005	Plug-Welch
		698394 Piston Assembly (.020" Oversize)	58	695132	Rope-Starter Used on Type No(s). 0114.	130	691750	Valve-Throttle
		698395 Piston Assembly (.030" Oversize)	60	494212	Grip-Starter Rope Used on Type No(s). 0114.	131	494379	Kit-Throttle Shaft
26	698389	Ring Set (Standard)	65	697725	Screw (Rewind Starter) Used on Type No(s). 0114.	133	494381	Float-Carburetor
		Note				137	●◆281165	Gasket-Float Bowl
		698396 Ring Set (.010" Oversize)				141	495097	Kit-Choke Shaft (LMT 697204)
		698397 Ring Set (.020" Oversize)				141A	495931	Kit-Choke Shaft (LMT 696181, 697203)
		698398 Ring Set (.030" Oversize)				142	●697140	Nozzle-Carburetor (Standard)
27	698469	Lock-Piston Pin				146	691639	Key-Timing
28	697099	Pin-Piston (Standard)				186	692317	Connector-Hose (90 Degree)
						186A	698174	Connector-Hose (Straight)
						187B	698417	Line-Fuel (Formed) (10-1/4 Inches Long) (Cut To Required Length)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

28BH00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188	691693	Screw (Control Bracket)	305	697102	Screw (Blower Housing)	474B	696457	Alternator (Tri Circuit)
192	691986	Adjuster-Rocker Arm	305A	697103	Screw (Blower Housing)	493	695450	Bracket-Mounting Used on Type No(s). 0114.
202	691841	Link-Mechanical Governor	306	697107	Shield-Cylinder	501	691188	Regulator Used on Type No(s). 0101, 0105.
209	692208	Spring-Governor (Green) Used on Type No(s). 0101.	307	691003	Screw (Cylinder Shield)	Note		698315 Regulator Used on Type No(s). 0114.
		Note	309	693551	Motor-Starter	503	691532	Strap-Starter
		691795 Spring-Governor (Yellow) Used on Type No(s). 0105.	310	690323	Screw (Starter Motor)	505	691251	Nut (Governor Control Lever)
		690480 Spring-Governor (Red) Used on Type No(s). 0114.	311	497608	Brush Set	510	693699	Drive-Starter
216	691840	Link-Choke	333	492341	Armature-Magneto	513	692024	Clutch-Drive
222	694042	Bracket-Control	334	691061	Screw (Magneto Armature)	523	699908	Dipstick
227	691374	Lever-Governor Control	337	491055	Plug-Spark Used on Type No(s). 0101, 0114.	524	*691032	Seal-Dipstick Tube
232	691842	Spring-Governor Link			Note	525	697184	Tube-Dipstick
238	691843	Cap-Valve	356	697089	Wire-Stop	526	697088	Screw (Regulator) Used on Type No(s). 0101, 0105.
239	491657	Switch-Oil Pressure	358	697151	Gasket Set-Engine	Note		697348 Screw (Regulator) Used on Type No(s). 0114.
240	394358	Filter-Fuel (White, 75 Microns)	363	19203	Puller-Flywheel	544	692034	Armature-Starter
265	691024	Clamp-Casing	383	89838	Wrench-Spark Plug	552	697144	Bushing-Governor Crank
267	690804	Screw (Casing Clamp)	404	691691	Washer (Governor Crank)	559	697561	Screw (Remote Choke Stop)
268	691025	Casing-Control Wire (Cut To Required Length)	415	690283	Plug (.125-27 NPTF)	562	691119	Bolt (Governor Control Lever)
269	691026	Wire-Control (Cut To Required Length)	431	697122	Elbow-Intake	563	695449	Screw (Debris Screen Guard)
270	691027	Nut (Control Wire Casing)	445	697153	Filter-Air Cleaner Cartridge (Washable) Used on Type No(s). 0101, 0105.	579	691029	Nut (Starter Cable)
271	691028	Lever-Control			Note	584	697112	Cover-Breather Passage
276	◆692255	Washer-Sealing	455	695113	Cup-Flywheel Used on Type No(s). 0114.	597	691696	Screw (Pawl Friction Plate) Used on Type No(s). 0114.
300A	698356	Muffler Used on Type No(s). 0114.	456	695128	Plate-Pawl Friction Used on Type No(s). 0114.	601	95162	Clamp-Hose
304	698420	Housing-Blower (Black) Used on Type No(s). 0101, 0105.	459	281505	Pawl-Ratchet Used on Type No(s). 0114.	608	695058	Starter-Rewind Used on Type No(s). 0114.
		Note	462	691261	Washer (Starter Cable)	613	691416	Screw (Muffler)
		698599 Housing-Blower (Black) Used on Type No(s). 0114.						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5329-9

Assemblies include all parts shown in frames.

05/05/2004

28BH00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
614	691620	Pin-Cotter	801	691283	Cap-Drive	1019	698814	Kit-Label
616	692012	Crank-Governor	802	691286	Cap-End	1022	★△272475	Gasket-Rocker Cover
617	★●692138	Seal-O Ring (Intake Manifold)	803	693757	Housing-Starter	1023	692492	Cover-Rocker
634	●690801	Spring/Seal Assembly (LMT 697204)	823	698941	Screw (Muffler Adapter)	1024	499054	Pump-Oil
634A	●690802	Spring/Seal Assembly (LMT 696181, 697203)	830	691095	Stud-Rocker Arm	1026	692003	Rod-Push (Intake)
635	691909	Boot-Spark Plug	842	★691031	Seal-O Ring (Dipstick Tube)	————— Note —————		
643	698401	Retainer-Air Filter	847	790442	Dipstick/Tube Assembly	1027	696854	Filter-Oil
654	690958	Nut (Carburetor)	851	692424	Terminal-Spark Plug	1029	691751	Arm-Rocker
668	691215	Spacer	864	697346	Adapter-Muffler Used on Type No(s). 0114.	1032	491710	Ball-Oil Pump
668A	691500	Spacer	868	★△690968	Seal-Valve	1034	690822	Guide-Push Rod
676	393761	Deflector-Muffler Used on Type No(s). 0114.	877B	393537	Wire/Connector- Alternator	1035	693784	Shaft-Pump
677	690661	Screw (Muffler Deflector) Used on Type No(s). 0114.	878A	691955	Harness-Alternator	1036	695700	Label-Emissions
689	691855	Spring-Friction Used on Type No(s). 0114.	883	★692236	Gasket-Exhaust	1040A	698470	Plate-Trim Used on Type No(s). 0101, 0105.
691	★692407	Seal-Governor Shaft	914	691108	Screw (Rocker Cover)	1044	698139	Screw (Flywheel)
692	690572	Spring-Detent	943	★690589	Seal-O Ring (Oil Pump Cover)	1051	691265	Ring-Retaining
697	690372	Screw (Drive Cap)	947	694393	Solenoid-Fuel	1054	280275	Tie-Cable
718	690959	Pin-Locating	949A	695448	Guard-Debris Screen Used on Type No(s). 0114.	1058	275935	Manual-Owner's
729	691335	Clip-Wire (Wire Saddle)	950	695407	Screw-Float Bowl (Bottom Of Bowl)	1059	698516	Kit-Screw/Washer
729A	691224	Clip-Wire (Aluminum Coated Steel)	965	499613	Cover-Oil Pump	1070	690372	Screw (Flywheel Fan)
729B	694123	Clip-Wire (Nylon)	967	697015	Filter-Pre Cleaner	1090	691293	Retainer-Brush
741	697128	Gear-Timing	968	697574	Cover-Air Cleaner (Black) Used on Type No(s). 0101, 0105.	1091	691333	Cap-Limiter
750	691033	Screw (Oil Pump Cover)	975	495933	Bowl-Float	1095	691581	Gasket Set-Valve
757	697607	Link-Counterweight	977	690192	Gasket Set-Carburetor	1119	691183	Screw (Alternator)
758	697134	Counterweight	987	●691326	Seal-Throttle Shaft	1263	697124	Reed-Breather
759	697392	Pin-Counterweight	1005	697111	Fan-Flywheel Used on Type No(s). 0101, 0105.	1264	697104	Screw (Breather Reed)
783	693713	Gear-Pinion	————— Note —————		1265	697125	Support-Blower Housing	
789	692037	Harness-Wiring Used on Type No(s). 0101, 0105.	975	495933	Bowl-Float	1266	★●691917	Seal-O Ring (Intake Elbow)
789A	698329	Harness-Wiring Used on Type No(s). 0114.	977	690192	Gasket Set-Carburetor	1266A	●697123	Seal-O Ring (Intake Elbow)
797	693167	Nut (Brush Retainer)	987	●691326	Seal-Throttle Shaft	1267	697575	Latch-Blower Housing Used on Type No(s). 0101, 0105.
			1005	697111	Fan-Flywheel Used on Type No(s). 0101, 0105.	————— Note —————		
					699043	Fan-Flywheel Used on Type No(s). 0114.	697419	Latch-Blower Housing Used on Type No(s). 0114.
			1017	690770	Screen-Oil Pump (Push In)	1270	697156	Plug-AVS Counterweight
						1279	691108	Screw (Blower Housing Support)
						1330	272147	Repair Manual

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.