

313700

Illustrated Parts List

Model Series

313700

TYPE NUMBERS
0112 through 0163.





TABLE OF CONTENTS













Air Cleaner	7
Alternator	9
Blower Housing	6
Cam	3
Carburetor	5
Controls	9
Crankcase Cover/Sump	2
Crankshaft	3
Cylinder	2
Electric Starter	8
Flywheel	8
Fuel	7
Head	4
Ignition	9
Kits/Gaskets – Carburetor	5
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	4
Muffler	7
Oil	3
Piston	3








PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.





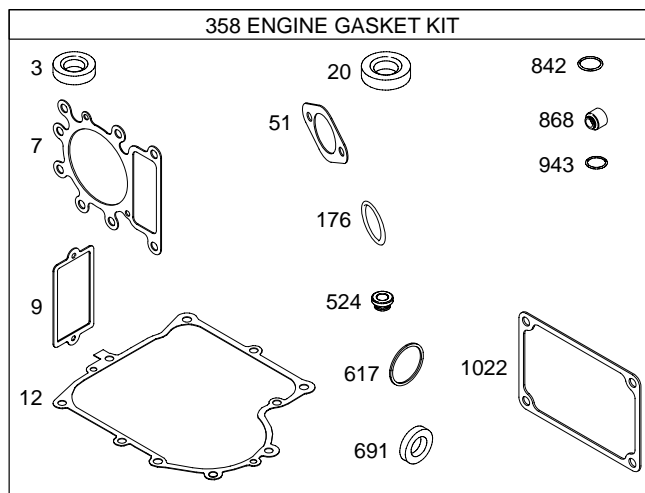
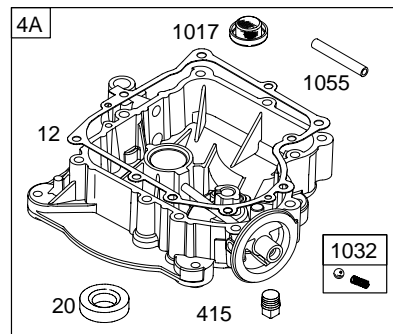
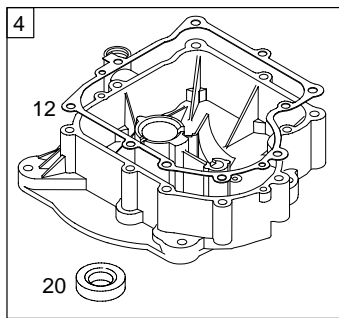
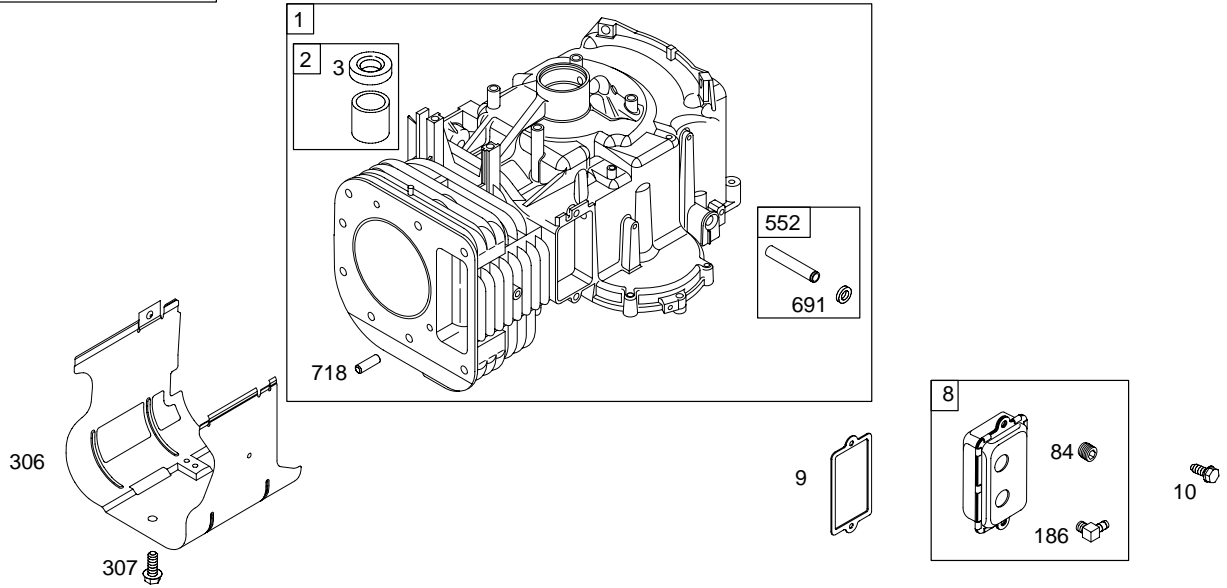


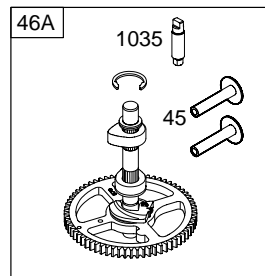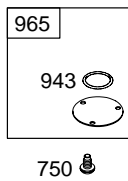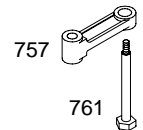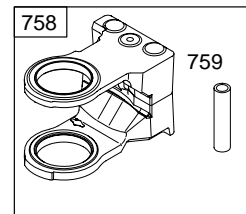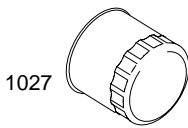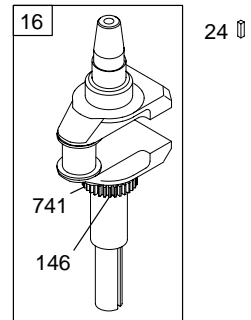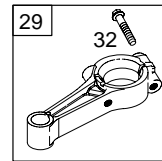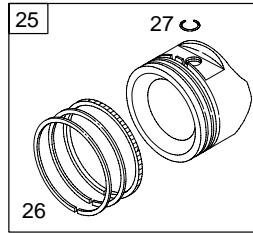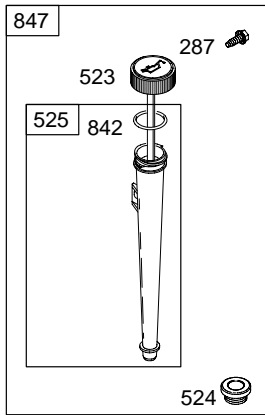

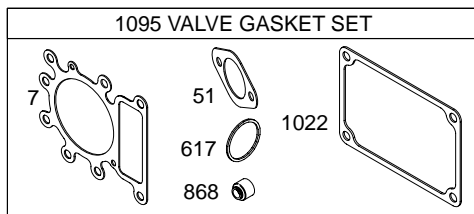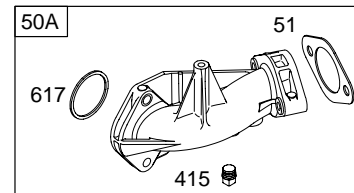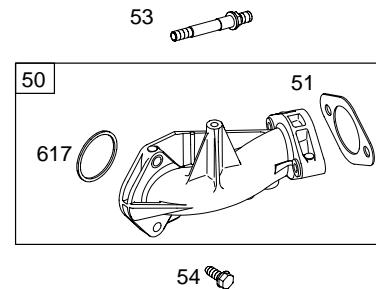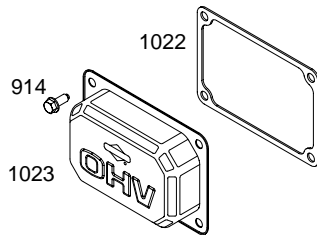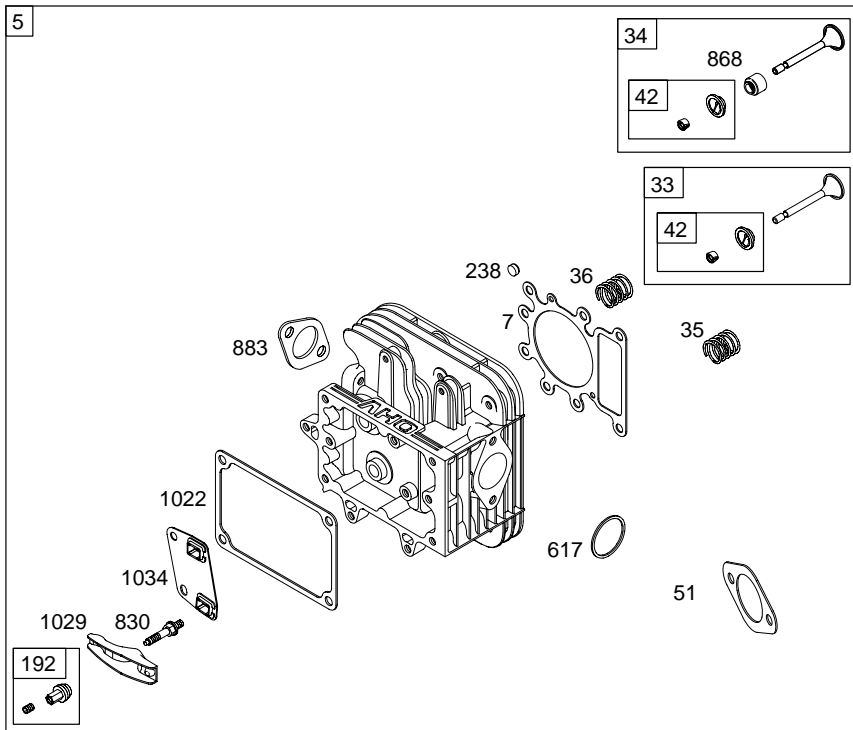

WALBRO




NIKKI

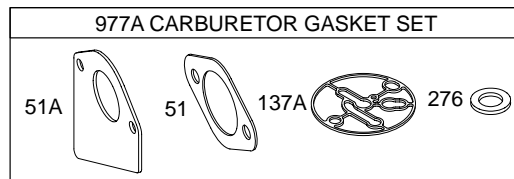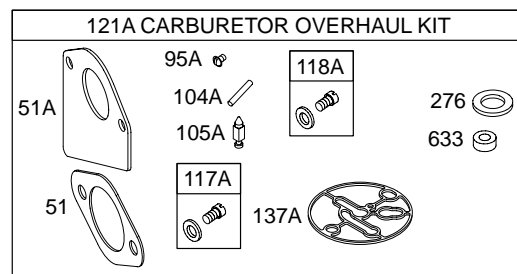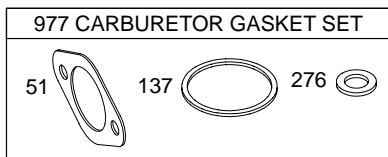
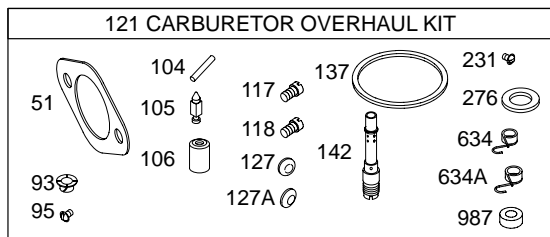

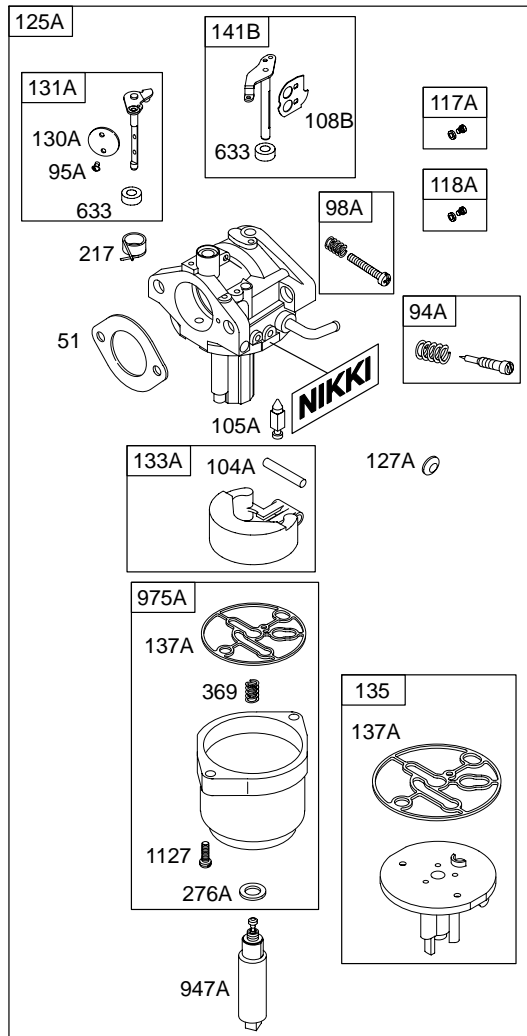
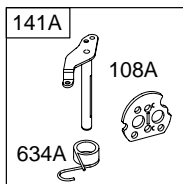
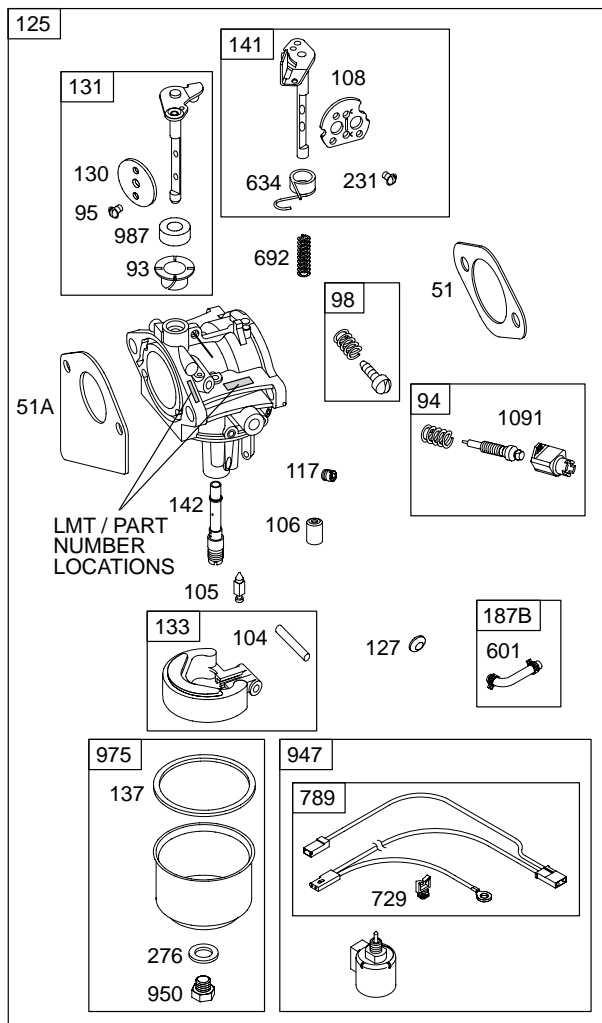






313700


1019 LABEL KIT

1036 EMISSION LABEL

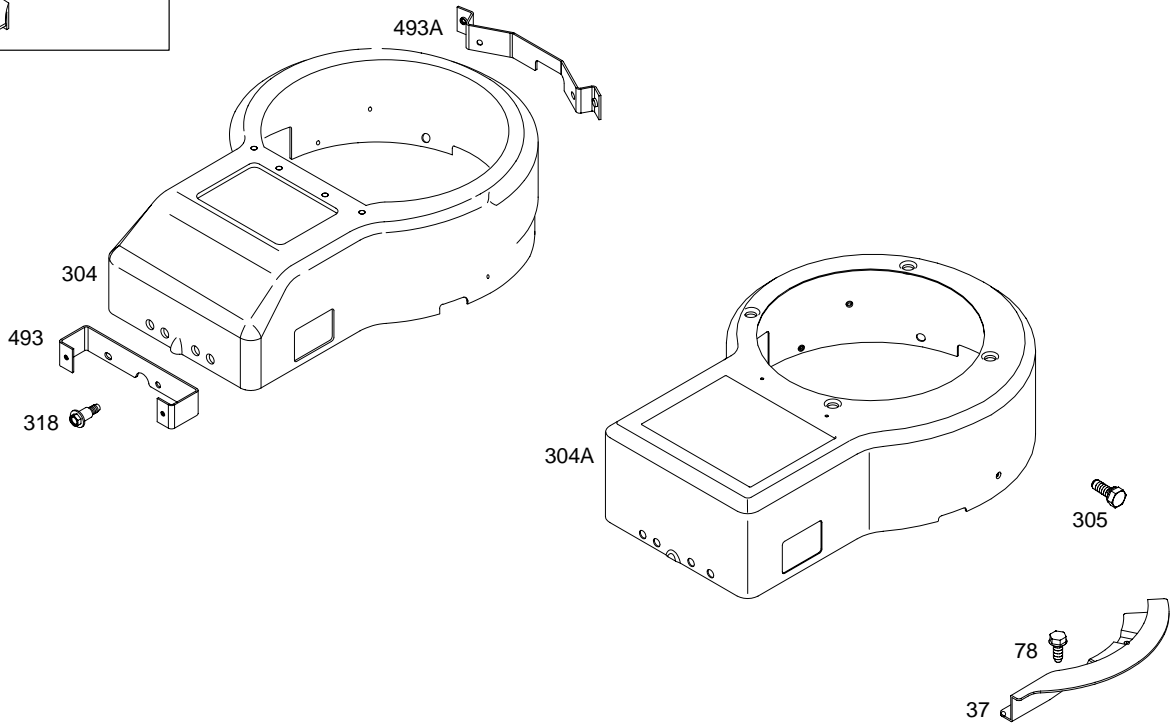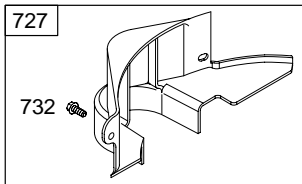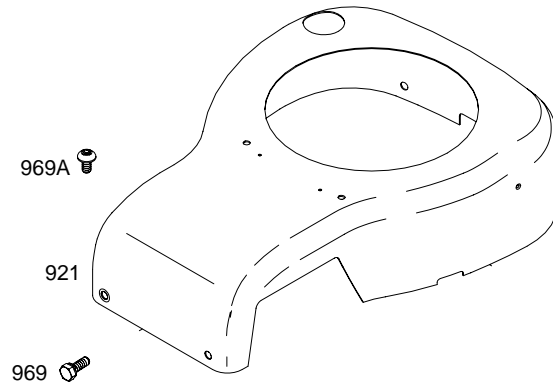

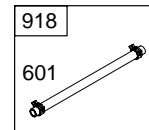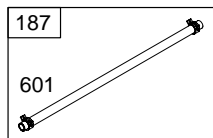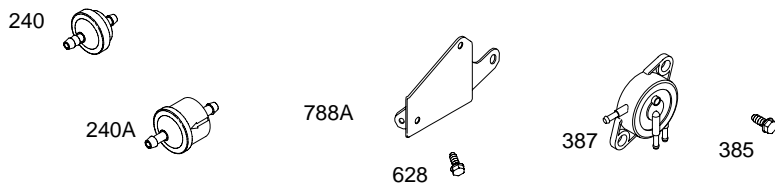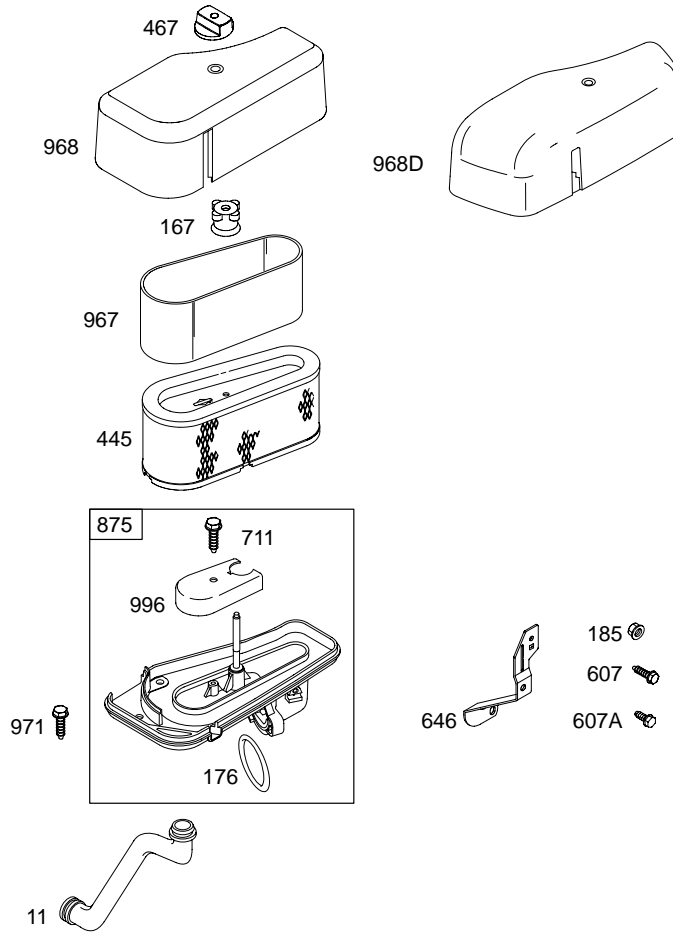


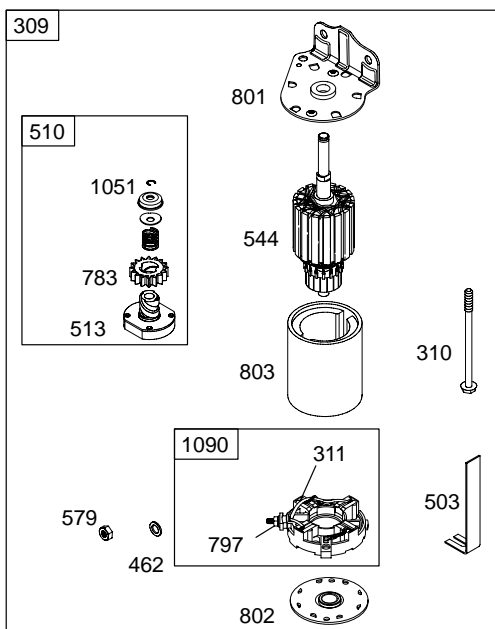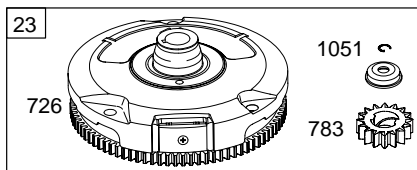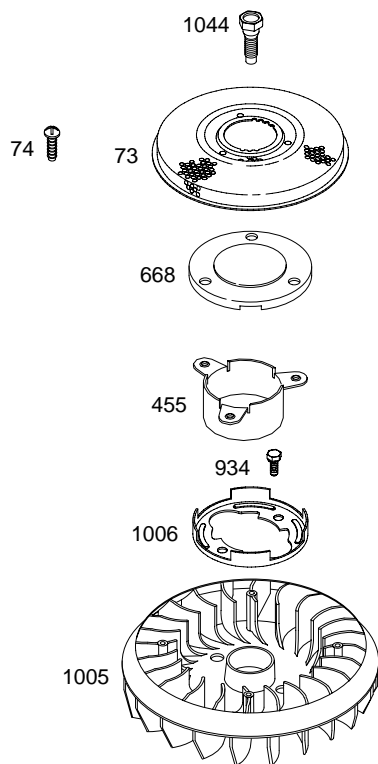

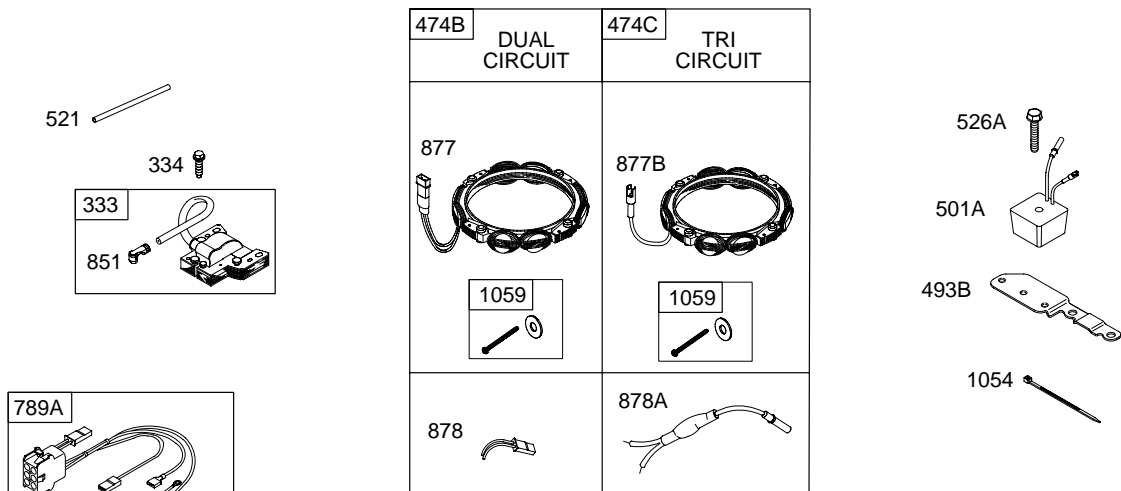

NOTE: All stators use Reference 1119 mounting screw.

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

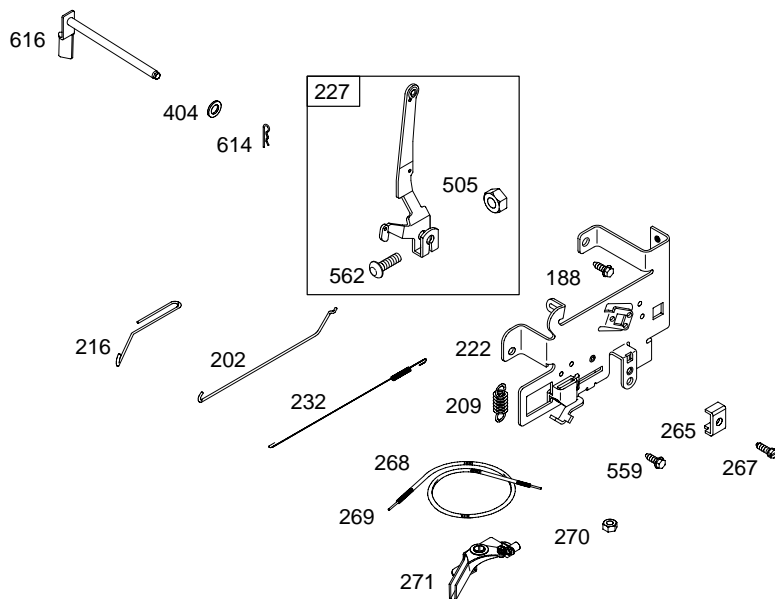

313700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	690156	Cylinder Assembly	25	692271	Piston Assembly (Standard)	51	692137	Gasket-Intake
2	399265	Kit-Bushing/Seal (Magneto Side)			Note	51A	692284	Gasket-Intake
3	★391086	Seal-Oil (Magneto Side)			692273	53	690227	Stud (Carburetor)
4	494238	Sump-Engine Used on Type No(s). 0126, 0132, 0133, 0162.			Assembly (.020" Oversize)	54	691148	Screw (Intake Manifold)
4A	693582	Sump-Engine Used on Type No(s). 0112, 0134, 0135, 0160, 0163.	26	690162	692274 Piston Assembly (.030" Oversize)	73	690492	Screen-Rotating
5	698148	Head-Cylinder			Ring Set (Standard)	74	691655	Screw (Rotating Screen)
7	△★699168	Gasket-Cylinder Head			Note	78	697561	Screw (Flywheel Guard)
8	696126	Breather Assembly			690164	84	690343	Plug-Breather (Breather Assembly)
9	★27803	Gasket-Breather			Ring Set (.010" Oversize)	93	690602	Bushing-Throttle Shaft
10	691666	Screw (Breather Assembly)			690166	94	498030	Kit-Idle Mixture
11	691328	Tube-Breather	27	691299	690168	94A	695425	Kit-Idle Mixture
12	★692226	Gasket-Crankcase (.015" Thick, Standard)			Ring Set (.020" Oversize)	95	691636	Screw (Throttle Valve)
		Note	28	498319	690168	95A	690718	Screw (Throttle Valve)
		★692406			Lock-Piston Pin	98	495800	Kit-Idle Speed
		Gasket-Crankcase (.005" Thick)			Pin-Piston (Standard)	98A	695408	Kit-Idle Speed
		★692405			Note	104	690525	Pin-Float Hinge
		Gasket-Crankcase (.009" Thick)	29	692419	498320	104A	694918	Pin-Float Hinge
13	690360	Screw (Cylinder Head)			Pin-Piston (.005" Oversize)	105	231855	Valve-Float Needle
15	690946	Plug-Oil Drain (Standard)			Rod-Connecting (Standard)	105A	694922	Valve-Float Needle
15A	691680	Plug-Oil Drain Used on Type No(s). 0112, 0132, 0163.			Note	106	690577	Seat-Inlet
16	690136	Crankshaft			692420	108	690464	Valve-Choke (LMT 155, 697482)
20	★291675	Seal-Oil (PTO Side)	32	692852	Rod-Connecting (.020" Undersize)	108A	692344	Valve-Choke (LMT 154, 697481)
22	692125	Screw (Crankcase Cover/Sump)	33	695760	Screw (Connecting Rod)	108B	695419	Valve-Choke
23	693557	Flywheel (Steel Ring Gear)	34	695761	Valve-Exhaust	117	692408	Jet-Main (Standard)
		Note	35	691279	Valve-Intake	117A	695415	Jet-Main (Standard)
		693556	36	691279	Spring-Valve (Intake)	118	692411	Jet-Main (High Altitude)
		Flywheel (Steel Ring Gear) Used on Type No(s). 0160.	37	690456	Spring-Valve (Exhaust)	118A	695416	Jet-Main (High Altitude)
24	222698	Key-Flywheel	42	499586	Guard-Flywheel	121	690191	Kit-Carburetor Overhaul
			43	691968	Keeper-Valve	121A	695427	Kit-Carburetor Overhaul
			44	690564	Slinger-Governor/Oil	125	698620	Carburetor (LMT 154, 155, 697481, 697482)
			45	690564	Tappet-Valve	125A		Carburetor (Nikki Carburetor, Service With Walbro Carburetor)
			46A	698492	Camshaft (Used After Code Date 02111700).	127	695005	Plug-Welch
					Note	127A	690727	Plug-Welch
					790340	130	691750	Valve-Throttle
					Camshaft (Used Before Code Date 02111800).	130A	695418	Valve-Throttle
			50	690193	Manifold-Intake			
			50A	695527	Manifold-Intake Used on Type No(s). 0162, 0163.			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
⊘ Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
131	494379	Kit-Throttle Shaft	216	691840	Link-Choke	310	690323	Bolt (Starter Motor)
131A	695421	Kit-Throttle Shaft	217	695409	Spring-Choke Return	311	497608	Brush Set
133	494381	Float-Carburetor	222	694042	Bracket-Control	318	692127	Screw (Mounting Bracket)
133A	694914	Float-Carburetor	227	691374	Lever-Governor Control	333	492341	Armature-Magneto
135	696142	Tube-Fuel Transfer	231	●691636	Screw (Choke Valve)	334	691061	Screw (Magneto Armature)
137	●281165	Gasket-Float Bowl	232	691842	Spring-Governor Link	337	491055	Plug-Spark
137A	●695426	Gasket-Float Bowl	238	691843	Cap-Valve	————— Note —————		
141	495097	Kit-Choke Shaft (Manual Choke) (LMT 155, 697482)	240	298090	Fuel Filter (Red)	691043	Plug-Spark	Used on Type No(s). 0160.
141A	495931	Kit-Choke Shaft (LMT 154, 697481)	240A	691035	Fuel Filter (Clear)	358	690189	Gasket Set-Engine
141B	695420	Kit-Choke Shaft			Used on Type No(s). 0160.	363	19203	Puller-Flywheel
142	●692412	Nozzle-Carburetor (Standard)	265	691024	Clamp-Casing	369	695422	Spring-Float Bowl
146	691639	Key-Timing	267	690804	Screw (Casing Clamp)	383	89838	Wrench-Spark Plug
167	692297	Seal-Air Cleaner Nut	268	691025	Casing-Control Wire (Cut to Required Length)	385	691108	Screw (Fuel Pump)
176	★691917	Seal-O Ring (Air Cleaner Base)	269	691026	Wire-Control (Cut to Required Length)	387	808656	Pump-Fuel
185	690958	Nut (Air Cleaner Base)	270	691027	Nut (Control Wire Casing)	404	691691	Washer (Governor Crank)
186	691609	Connector-Hose (Breather Assembly)	271	691028	Lever-Control	415	690283	Plug (Used in Engine Sump as Oil Pressure Switch Plug and Intake Manifold as Vacuum Plug)
186A	692317	Connector-Hose (Used Before Code Date 02102900).	276	●692255	Washer-Sealing	445	496894	Filter-Air Cleaner Cartridge
187	296004	Line-Fuel (Cut to Required Length)	276A	●695410	Washer-Sealing	455	691173	Cup-Flywheel
187B	699331	Line-Fuel (Formed) (Cut to Required Length) Used on Type No(s). 0112, 0126, 0132, 0133, 0134, 0135.	287	691002	Screw (Dipstick Tube)	462	691261	Washer (Starter Cable)
187C	697907	Line-Fuel (Formed) (9 Inches Long) Used on Type No(s). 0160.	304	690497	Housing-Blower (Black)	467	691668	Knob-Air Cleaner
188	691693	Screw (Control Bracket)	304A	690844	Housing-Blower (Red) Used on Type No(s). 0126, 0135, 0162, 0163.	474B	696459	Alternator (Dual Circuit)
192	691986	Adjuster-Rocker Arm			————— Note —————	474C	696457	Alternator (Tri-Circuit) Used on Type No(s). 0160.
202	691841	Link-Mechanical Governor	305	691108	Screw (Blower Housing)	493	690493	Bracket-Mounting (Blower Housing Front)
209	692208	Spring-Governor (Green)	306	698454	Shield-Cylinder	493A	690494	Bracket-Mounting (Blower Housing Rear)
		————— Note —————	307	691003	Screw (Cylinder Shield)	493B	694475	Bracket-Mounting (Regulator) Used on Type No(s). 0160.
		691795 Spring-Governor (Yellow) Used on Type No(s). 0160.	309	693551	Motor-Starter			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
∅ Valve Gasket Set-Reference 1095

313700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
501A	691188	Regulator	711	690703	Screw (Carburetor Shield)	878	691237	Harness-Alternator (Dual Circuit)
503	691532	Strap-Starter	718	690959	Pin-Locating	878A	691655	Harness-Alternator (Tri-Circuit)
505	691251	Nut (Governor Control Lever)	726		Gear-Ring (Steel) (Sold In Flywheel Kit, Reference 23, Only)			Used on Type No(s). 0160.
510	693699	Drive-Starter	727	490324	Cover-Starter Drive	883	*692236	Gasket-Exhaust
513	692024	Clutch-Drive	729	691335	Clip-Wire	914	690960	Screw (Rocker Cover)
521	690581	Shield-Cable	729A	691224	Clip-Wire	918	393815	Hose-Vacuum Used on Type No(s). 0160.
523	692014	Dipstick	732	691002	Screw (Starter Drive Cover)	921	692417	Cover-Blower Housing (Red)
524	*281370	Seal-Dipstick Tube	741	691284	Gear-Timing	934	690372	Screw (Fan Retainer)
525	691398	Tube-Dipstick	750	691033	Screw (Oil Pump Cover)	943	*690589	Seal-O Ring (Oil Pump Cover)
526A	694476	Screw (Regulator)	757	691714	Link-Counterweight	947	692734	Solenoid-Fuel
544	692034	Armature-Starter	758	692423	Counterweight	947A	695423	Solenoid-Fuel
552	491986	Bushing-Governor Crank	759	691239	Pin-Counterweight	950	691657	Screw (Float Bowl)
559	693675	Screw (Remote Choke Stop)	761	691096	Screw (Counterweight)	965	499613	Cover-Oil Pump
562	691119	Bolt (Governor Control Lever)	783	693713	Gear-Pinion	967	272403	Filter-Pre Cleaner
579	691029	Nut (Starter Cable)	788A	690458	Bracket-Fuel Pump Used on Type No(s). 0160.	968	691916	Cover-Air Cleaner Used on Type No(s). 0126, 0135, 0160, 0162, 0163.
601	95162	Clamp-Hose	789	692037	Harness-Wiring (Carburetor)	968D	692139	Cover-Air Cleaner Used on Type No(s). 0112, 0132, 0133, 0134.
607	690703	Screw (Air Cleaner Brace)	789A	698329	Harness-Wiring Used on Type No(s). 0160.	969	691108	Screw (Blower Housing Cover)
607A	691693	Screw (Air Cleaner Brace)	797	693167	Nut (Brush Retainer)	969A	690365	Screw (Blower Housing Cover)
614	691620	Pin-Cotter	801	691283	Cap-Drive	971	692129	Screw (Air Cleaner Base To Carburetor)
616	692012	Crank-Governor	802	691286	Cap-End	975	495933	Bowl-Float
617	Δ*692138	Seal-O Ring (Intake Manifold)	803	693757	Housing-Starter	975A	695417	Bowl-Float
628	690661	Screw (Fuel Pump Bracket)	830	691095	Stud-Rocker Arm	977	690192	Gasket Set-Carburetor
633	●695414	Seal-Choke/Throttle Shaft	842	*691870	Seal-O Ring (Dipstick Tube)	977A	695428	Gasket Set-Carburetor
634	●690801	Spring/Seal Assembly (Manual Choke) (LMT 155, 697482)	847	496415	Dipstick/Tube Assembly			
634A	●690802	Spring/Seal Assembly (LMT 154, 697481)	851	692424	Terminal-Spark Plug			
635	691909	Boot-Spark Plug	868	Δ*690968	Seal-Valve			
646	690460	Brace-Air Cleaner	875	696129	Base-Air Cleaner			
668	691323	Spacer (Rotating Screen)	877	393456	Wire/Connector- Alternator (Dual Circuit)			
691	*692407	Seal-Governor Shaft	877B	393537	Wire/Connector- Alternator (Tri-Circuit) Used on Type No(s). 0160.			
692	690572	Spring-Detent						
697	690372	Screw (Drive Cap)						

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
⊘ Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
987	●691326	Seal-Throttle Shaft	1035	693784	Shaft-Pump	1044	698139	Screw (Flywheel)
996	690678	Shield-Carburetor	1036	695700	Label-Emissions (Used After Code Date 00063000).	1051	691265	Ring-Retaining
1005	697853	Fan-Flywheel			Note	1054	280275	Tie-Cable
1006	690452	Retainer-Fan			694997 Label-Emissions	1055	690528	Tube-Oil Pump
1017	690770	Screen-Oil Pump			(Used After Code Date 99093000 and Before Code Date 00070100).	1058	275935	Operator's Manual
1019	690180	Kit-Label			694332 Label-Emissions	1059	698516	Kit-Screw/Washer (Alternator)
1022	Δ*272475	Gasket-Rocker Cover			(Used After Code Date 98123100 and Before Code Date 99100100).	1090	691293	Retainer-Brush
1023	691192	Cover-Rocker			692468 Label-Emissions	1091	691333	Cap-Limiter
1024	499054	Pump-Oil			(Used After Code Date 98123100 and Before Code Date 99100100).	1095	690190	Gasket Set-Valve
1026	692003	Rod-Push (Intake)				1119	691183	Screw (Alternator)
1026A	692011	Rod-Push (Exhaust)				1127	695407	Screw (Float Bowl)
1027	492932	Filter-Oil				1330	272147	Repair Manual
1029	691751	Arm-Rocker						
1032	491710	Ball-Oil Pump						
1034	690822	Guide-Push Rod						

★ Engine Gasket Set-Reference 358
 ● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
 ∅ Valve Gasket Set-Reference 1095