

404500

Illustrated Parts List

Model Series

404500

TYPE NUMBERS
0211 through 0312.

TABLE OF CONTENTS















Air Cleaner	5
Alternators/Ignition	7
Blower Housing/Shrouds	5
Cam/Crankshaft	2
Carburetor	4
Controls	6
Crankcase Cover/Sump	2
Cylinder	2
Electric Starter	6
Flywheel	6
Head/Valves	3
Kit/Gasket Sets	4
Oil	2
Pistons	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

404500

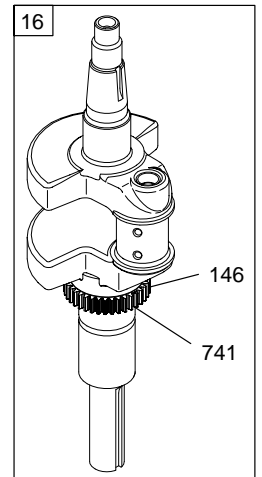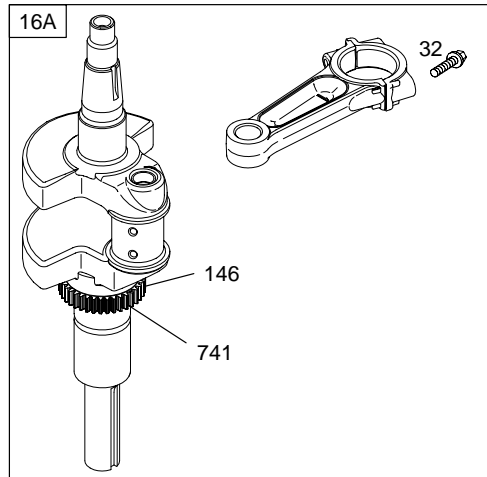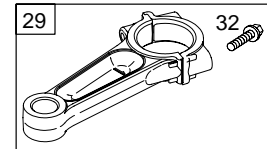
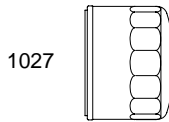
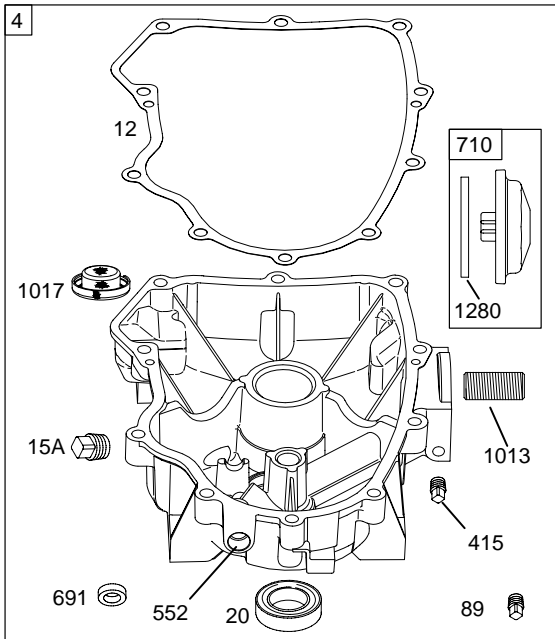
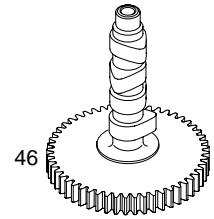
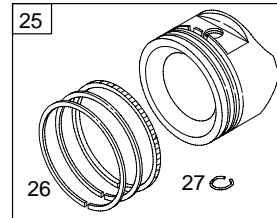
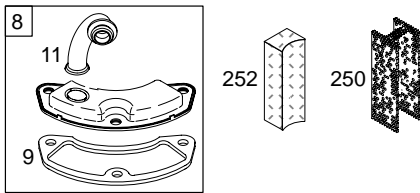
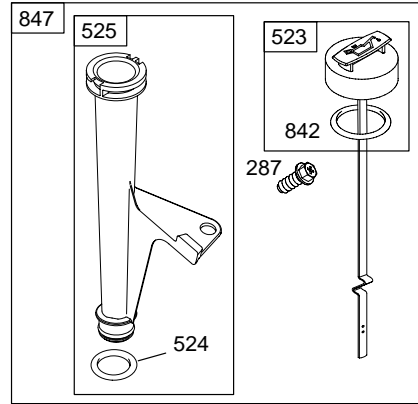
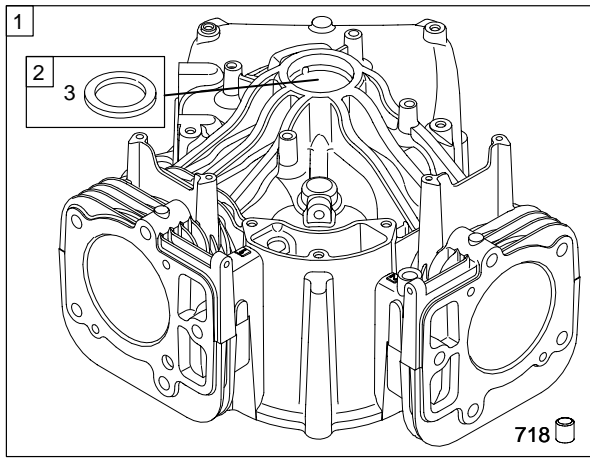


1019 LABEL KIT








1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL







Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5769-2 Assemblies include all parts shown in frames. 06/08/2004

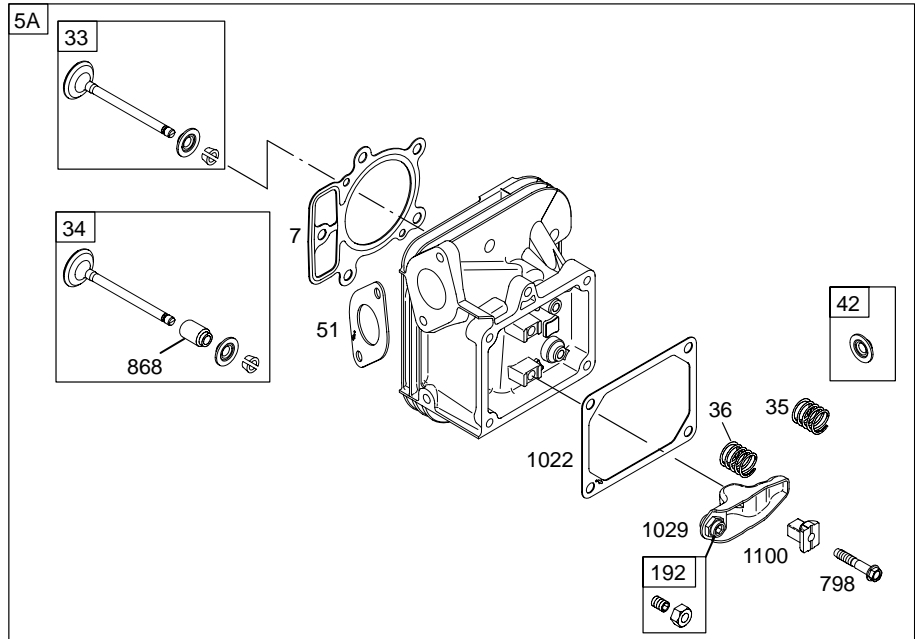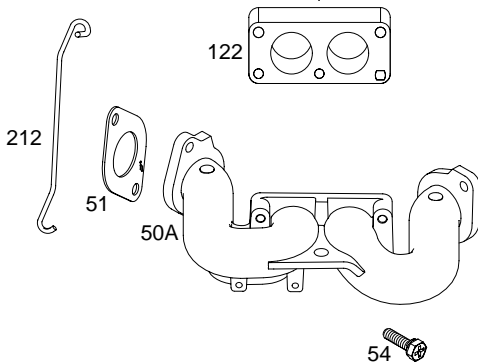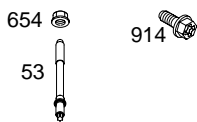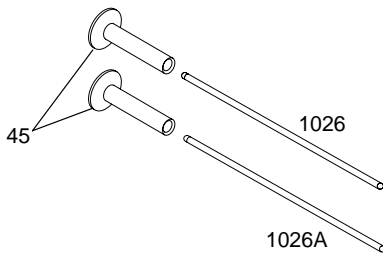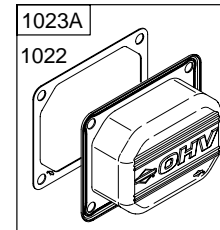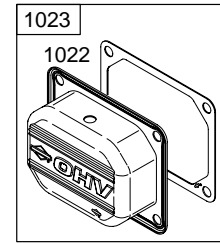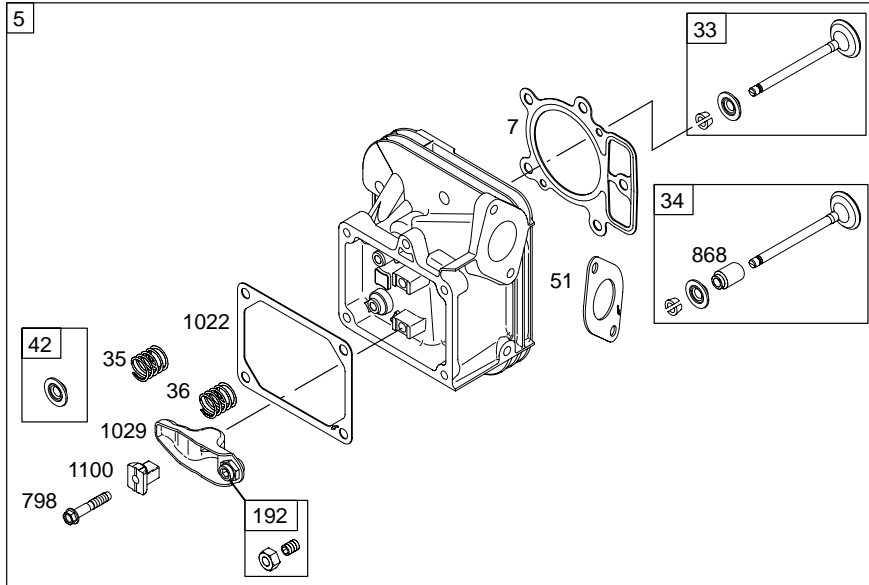



5769-3 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. Assemblies include all parts shown in frames. 06/08/2004

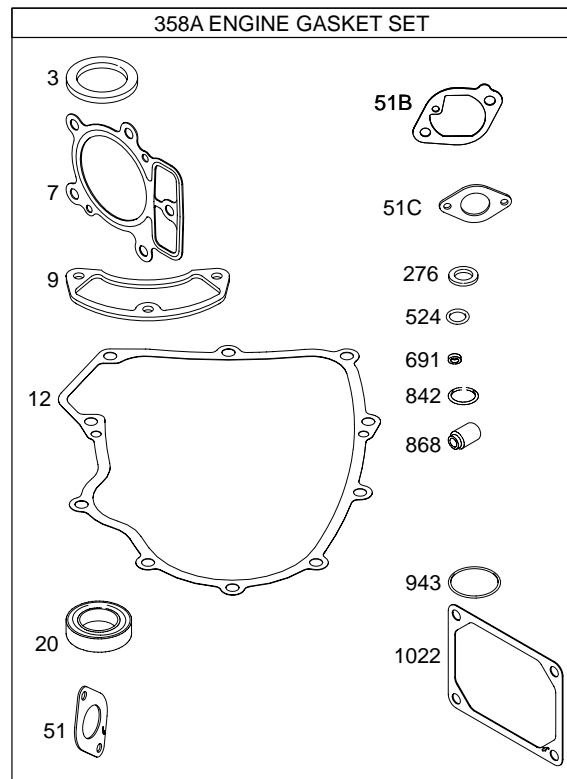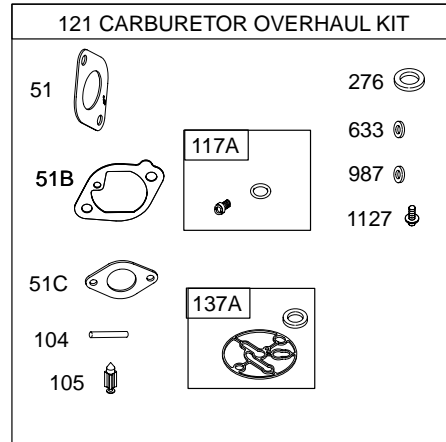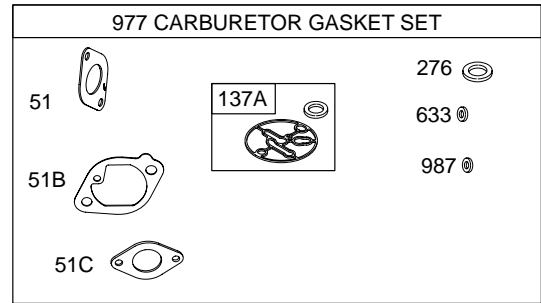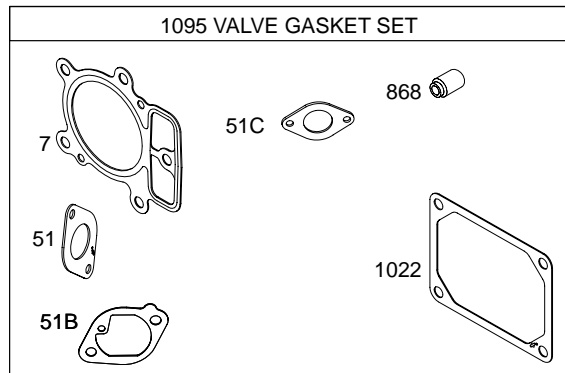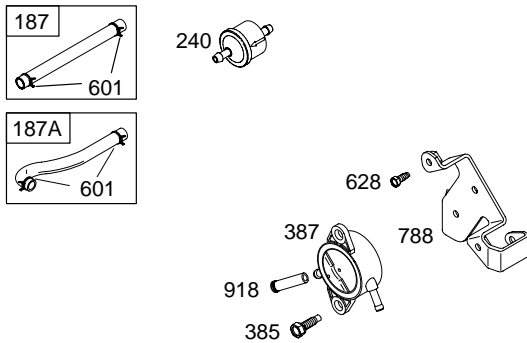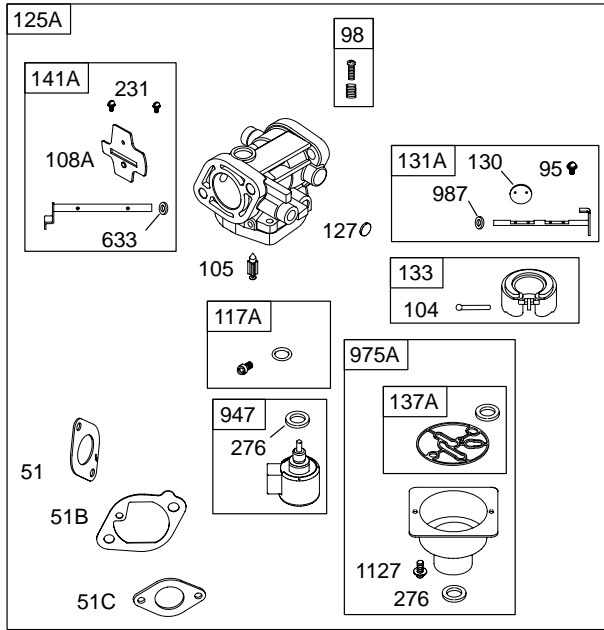


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5769-4 Assemblies include all parts shown in frames. 06/08/2004

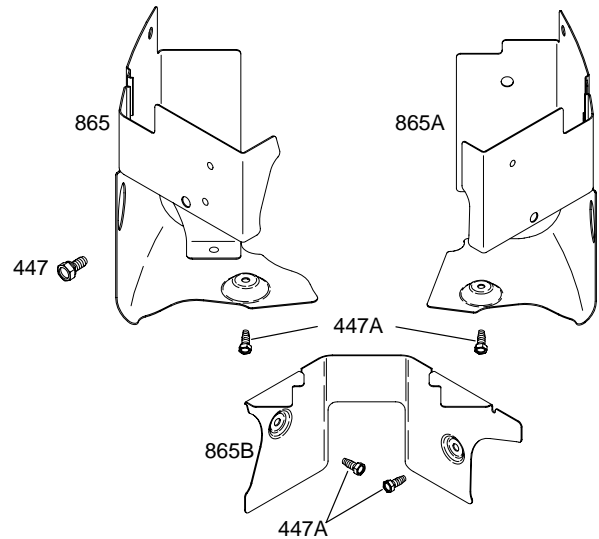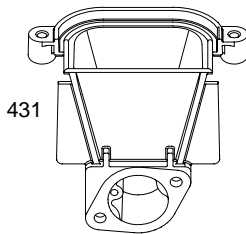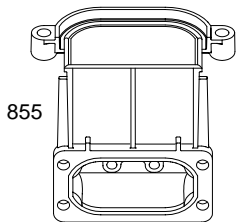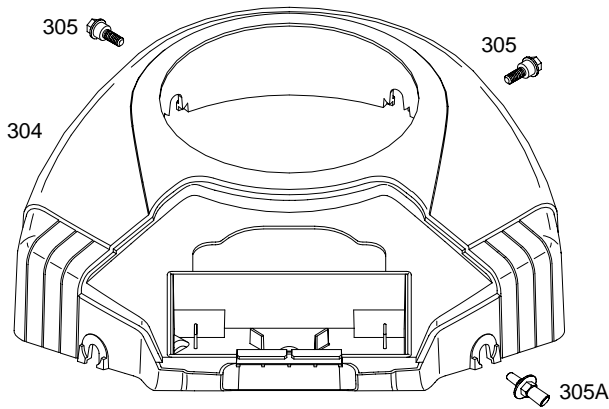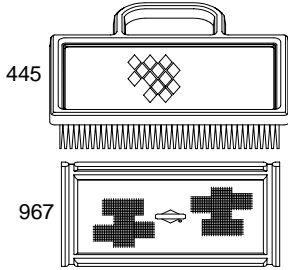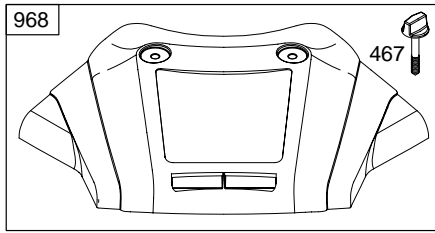


1036 EMISSIONS LABEL

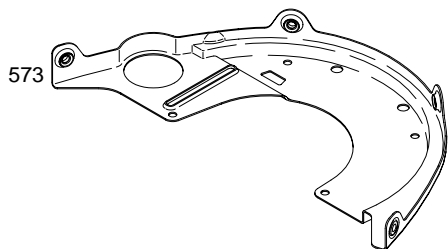


5769-5 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 06/08/2004

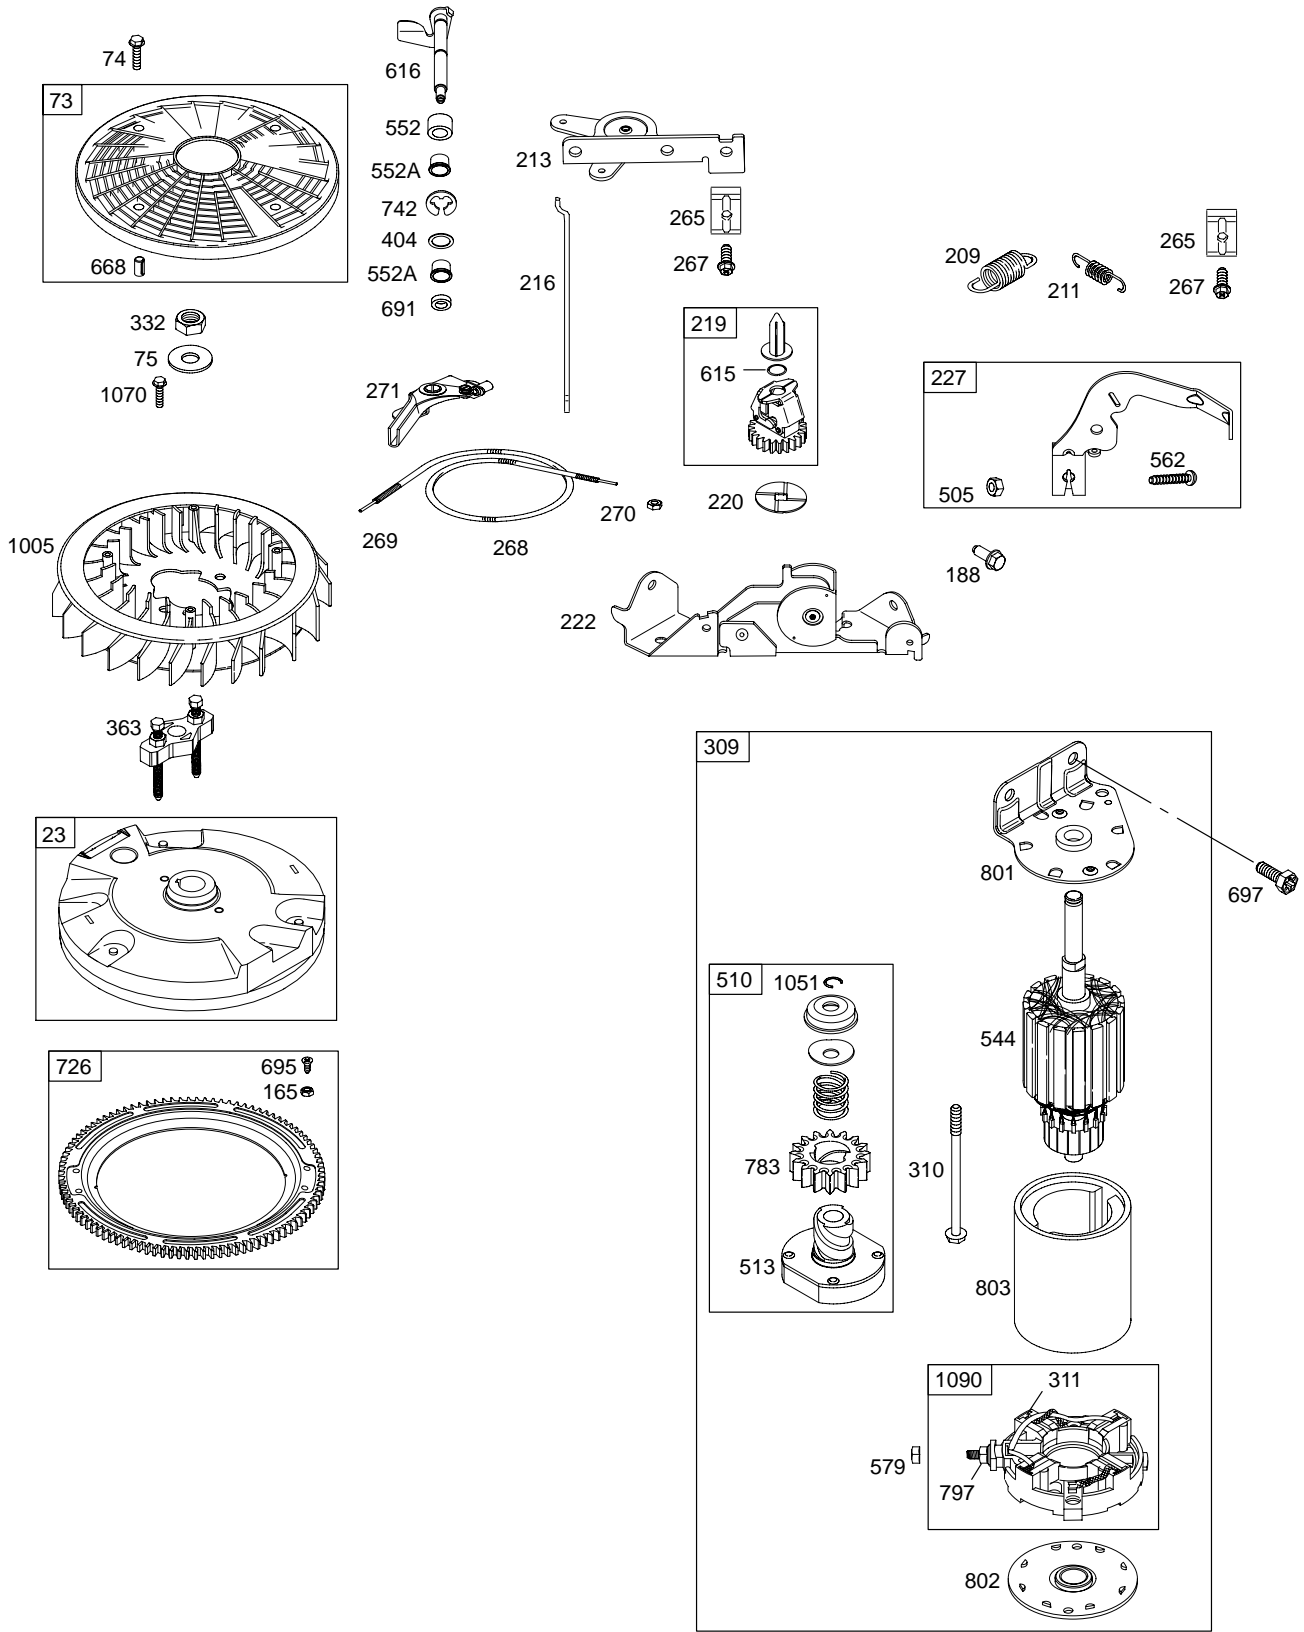




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5769-6 Assemblies include all parts shown in frames. 06/08/2004

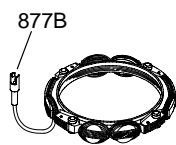

	DUAL CIRCUIT	10 – 16 AMP
	474B 877	474D 877C
		578

NOTE: All stators use a No. 1119 mounting screw. 

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

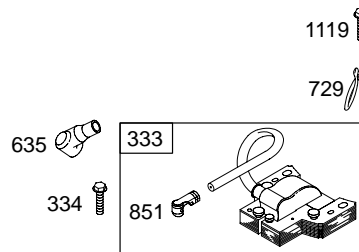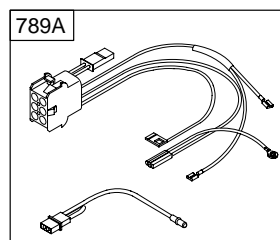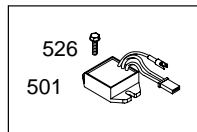

404500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
1	699751	Cylinder Assembly	25	499588	Piston Assembly (Standard)	73	494439	Screen—Rotating		
2	499585	Kit—Bushing/Seal (Magneto Side)			Note	74	698425	Screw (Rotating Screen)		
3	★391086	Seal—Oil (Magneto Side)			499590	75	691056	Washer (Flywheel)		
4	699747	Sump—Engine			Assembly (.020" Oversize)	89	690946	Plug—Oil		
		Note	26	499604	Ring Set (Standard)	98	699721	Kit—Idle Speed		
		699752 Sump—Engine Used on Type No(s). 0211, 0285, 0307, 0312.			Note	104	●694918	Pin—Float Hinge		
5	693998	Head—Cylinder (Cylinder 1)	27	690975	Lock—Piston Pin	105	●698537	Valve—Float Needle		
5A	693999	Head—Cylinder (Cylinder 2)	28	690229	Pin—Piston (Standard)	108	699808	Valve—Choke		
7	★Δ690962	Gasket—Cylinder Head	29	699699	Rod—Connecting (Standard)	117A	●698784	Jet—Main (Standard)		
8	499601	Breather Assembly			(Used After Code Date 03122700)	118	●699820	Jet—Main (High Altitude)		
9	★690937	Gasket—Breather			Note	121	699814	Kit—Carburetor Overhaul		
10	691108	Screw (Breather Assembly)			(For Replacement Connecting Rod, See Reference 16A)	122	699802	Spacer—Carburetor		
11	690942	Tube—Breather			(Used Before Code Date 03122800).	125A	699807	Carburetor		
12	★697227	Gasket—Crankcase			697253 Rod—Connecting (.020" Undersize)	127	699810	Plug—Welch		
13	690360	Screw (Cylinder Head)	32	690976	Screw (Connecting Rod)	130	699809	Valve—Throttle		
15A	690946	Plug—Oil Drain (3/8" Standard)			Valve—Exhaust	131A	699812	Kit—Throttle Shaft		
16	699700	Crankshaft (Used After Code Date 03122700).	33	499596	Valve—Intake	133	694914	Float—Carburetor		
16A	699701	Crankshaft (Includes Connecting Rod) (Used Before Code Date 03122800).	34	697464	Valve—Intake	137A	●◆698781	Gasket—Float Bowl		
20	★690947	Seal—Oil (PTO Side)	35	690963	Spring—Valve (Intake)	141A	699811	Kit—Choke Shaft		
22	694966	Screw (Crankcase Cover/ Sump)	36	690963	Spring—Valve (Exhaust)	146	690979	Key—Timing		
23	691053	Flywheel	42	499586	Keeper—Valve	165	693148	Nut (Ring Gear)		
		Note	45	690977	Tappet—Valve	187	699799	Line—Fuel (Molded)		
		691054 Flywheel Used on Type No(s). 0211, 0286, 0291, 0312.	46	699748	Camshaft	187A	691049	Line—Fuel		
24	222698	Key—Flywheel	50A	699801	Manifold—Intake	188	691003	Screw (Control Bracket)		
			51A◆◆690949	Gasket—Intake				192	690083	Adjuster—Rocker Arm
			51B◆◆699800	Gasket—Intake				209	692909	Spring—Governor (Yellow)
			51C◆◆699803	Gasket—Intake						Note
			53	690951	Stud (Carburetor)					697674 Spring—Governor (Brown)
			54	695240	Screw (Intake Manifold)					Used on Type No(s). 0285, 0286.
			54A	699816	Screw (Intake Manifold)	211	691019	Spring—Governed Idle		
						212	699805	Link—Throttle		
						213	691021	Bracket—Choke Control		
						216	691022	Link—Choke		

★ Included in Engine Gasket Set—Ref. No. 358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

Δ Included in Valve Gasket Set—Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5769-8

Assemblies include all parts shown in frames.

06/08/2004

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
219	698231	Gear—Governor	310	690323	Bolt (Starter Motor)	505	691029	Nut (Governor Control Lever)
220	690412	Washer (Governor Gear)	311	497608	Brush Set	510	696541	Drive—Starter
222	698761	Bracket—Control Note 698757 Bracket— Control Used on Type No(s). 0285, 0286.	332	691059	Nut (Flywheel)	513	692024	Clutch—Drive
227	691048	Lever—Governor Control	333	691060	Armature—Magneto	523	691036	Dipstick
231	690718	Screw (Choke Valve)	334	691061	Screw (Magneto Armature)	524	*691032	Seal—Dipstick Tube
239	491657	Switch—Oil Pressure	337	491055	Plug—Spark Note 691043 Plug—Spark Used on Type No(s). 0285, 0307.	525	691037	Tube—Dipstick
240	691035	Filter—Fuel	358A	699823	Gasket Set—Engine	526	691108	Screw (Regulator) (10 To 16 Amp Regulated) Used on Type No(s). 0285.
250	690957	Retainer—Breather	363	19203	Flywheel Puller	544	692034	Armature—Starter
252	690956	Collector—Oil	383	19374	Wrench—Spark Plug	552	690552	Bushing—Governor Crank
265	691024	Clamp—Casing	385	691108	Screw (Fuel Pump)	552A	690553	Bushing—Governor Crank
267	695134	Screw (Casing Clamp)	387	808656	Pump—Fuel	562	690311	Bolt (Governor Control Lever)
268	691025	Casing—Control Wire (Cut to Required Length)	404	690442	Washer (Governor Crank)	573	790044	Plate—Back
269	691026	Wire—Control (Cut to Required Length)	405A	697820	Screw (Back Plate) (Mounting)	578	691208	Wire Assembly
270	691027	Nut (Control Wire Casing)	415	690283	Plug	579	691029	Nut (Starter Cable)
271	691028	Lever—Control	431	699806	Elbow—Intake	601	691038	Clamp—Hose
276★◆	695410	Washer—Sealing	445	499486	Filter—Air Cleaner Cartridge	615	698290	Shaft—Governor Retainer
287	691108	Screw (Dipstick Tube)	447	691003	Screw (Air Guide Cover)	616	691045	Crank—Governor (Intake Manifold)
304	695277	Housing—Blower (Black)	467	691008	Knob—Air Cleaner	628	691108	Screw (Fuel Pump Bracket)
305	691005	Screw (Blower Housing) Note 698336 Screw (Blower Housing) Used on Type No(s). 0211, 0259, 0264.	447A	691108	Screw (Air Guide Cover)	633◆◆	695414	Seal—Choke/Throttle Shaft
309	497595	Motor—Starter	474B	696459	Alternator (Dual Circuit)	635	66538	Boot—Spark Plug
			474D	696458	Alternator (10 Amp Circuit) Used on Type No(s). 0285, 0259, 0264.	654	690958	Nut (Carburetor)
			501	691185	Regulator (10 To 16 Amp Regulated) Used on Type No(s). 0285.	668	691215	Spacer
						691	*690657	Seal—Governor Shaft
						695	693149	Screw (Ring Gear)
						697	690372	Screw (Drive Cap)

★ Included in Engine Gasket Set—Ref. No. 358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

△ Included in Valve Gasket Set—Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

404500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
703	691010	Clip	868	★△690968	Seal-Valve	1036	695704	Label-Emissions
710	697474	Cover-Oil Filter	914	691127	Screw (Rocker Cover)	1051	691265	Ring-Retaining
718	690959	Pin-Locating	918	694000	Hose-Vacuum	1058	275475	Owner's Manual (Emission)
726	499612	Gear-Ring	943	★690589	Seal-O Ring (Oil Pump Cover)	1070	691058	Screw (Flywheel Fan)
729	694123	Clip-Wire	947	699728	Solenoid-Fuel	1090	691293	Retainer-Brush
741	690980	Gear-Timing	965	499613	Cover-Oil Pump	1095	694013	Gasket Set-Valve
742	690328	Retainer-E Ring	967	273638	Filter-Pre Cleaner	1100	690973	Pivot-Rocker Arm
750	696999	Screw (Oil Pump Cover)	968	790095	Cover-Air Cleaner	1119	691183	Screw (Alternator)
783	695708	Gear-Pinion	975A	699502	Bowl-Float	1127	●695407	Screw (Float Bowl)
788	691039	Bracket-Fuel Pump	977	699815	Gasket Set-Carburetor	1280	697475	Seal-O Ring (Oil Filter Cover)
789A	698330	Harness-Wiring (6 Pin Customer Conversion)	987	◆699813	Seal-Throttle Shaft	1330	273521	Manual-Repair
797	693167	Nut (Brush Retainer)	1005	499603	Fan-Flywheel			
798	697890	Screw (Rocker Arm)	1006	499603	Retainer-Fan			
801	691283	Cap-Drive	1013	690954	Nipple-Oil Filter			
802	691286	Cap-End	1017	690770	Screen-Oil Pump			
803	693757	Housing-Starter	1019	790094	Kit-Label			
842	★691031	Seal-O Ring (Dipstick)	1022	★△690971	Gasket-Rocker Cover			
847	499602	Dipstick/Tube Assembly	1023	499599	Cover-Rocker Arm (Cylinder 1)			
851	493880	Terminal-Spark Plug	1023A	499600	Cover-Rocker Arm (Cylinder 2)			
855	691011	Adapter-Air Cleaner	1024	499054	Pump-Oil			
865	691012	Cover-Air Guide (Cylinder 1)	1026	690981	Rod-Push (Steel)			
865A	691014	Cover-Air Guide (Cylinder 2)	1026A	690982	Rod-Push (Aluminum)			
865B	691015	Cover-Air Guide (Valley)	1027	492932	Filter-Oil			
			1029	690972	Arm-Rocker			
			1032	491710	Ball-Oil Pump			
			1035	691042	Shaft-Pump			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5769-10

Assemblies include all parts shown in frames.

06/08/2004