

# 40H700

## Illustrated Parts List

### Model Series

# 40H700

TYPE NUMBERS  
0026 through 0248.

### TABLE OF CONTENTS












Air Cleaner .....	5
Alternators .....	7
Blower Housing/Shrouds .....	5
Camshaft .....	3
Carburetor .....	4
Controls .....	6
Crankcase Sump .....	2
Crankshaft .....	2
Cylinder .....	2
Cylinder Head .....	3
Electric Starter .....	6
Flywheel .....	6
Governor Spring .....	6
Ignition .....	7
Intake Manifold .....	3
Kit/Gasket Sets .....	4
Lubrication .....	2
Pistons .....	2
Valves .....	3





PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 40H700

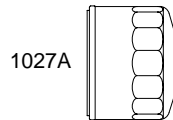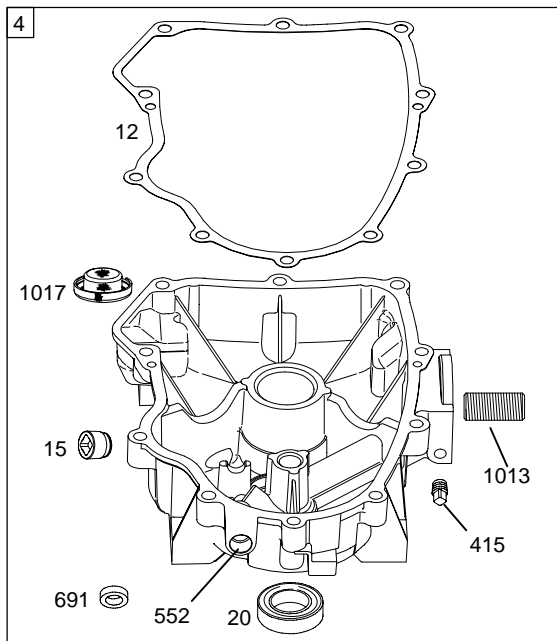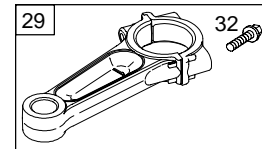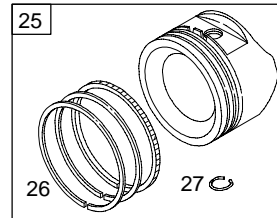
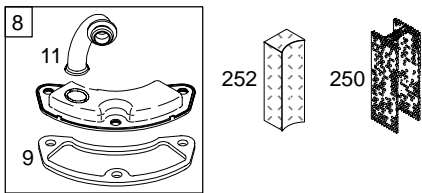
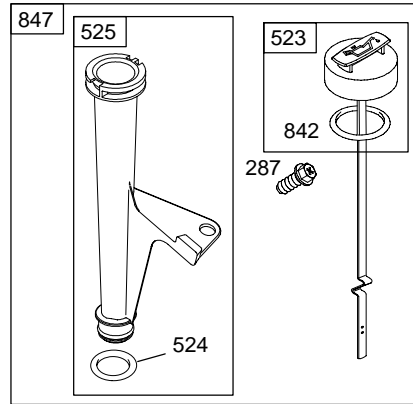
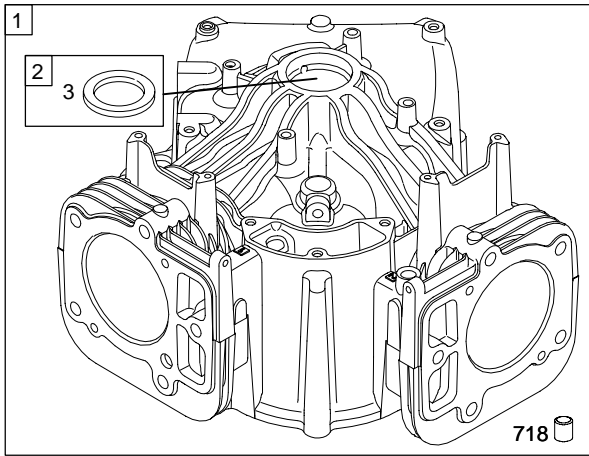


750





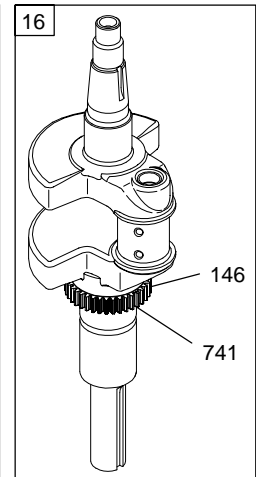
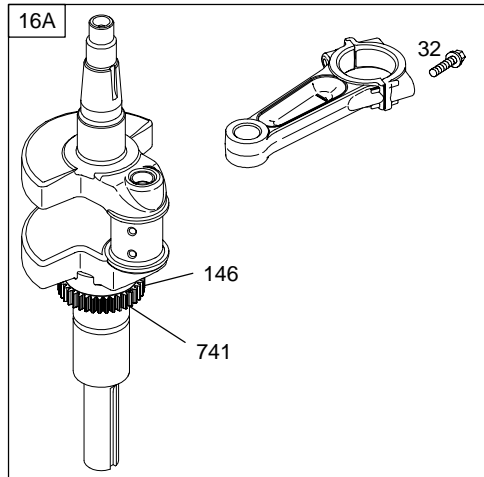













- 1019 LABEL KIT
- 1058 OPERATOR'S MANUAL
- 1330 REPAIR MANUAL

5194-2 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 06/07/2004

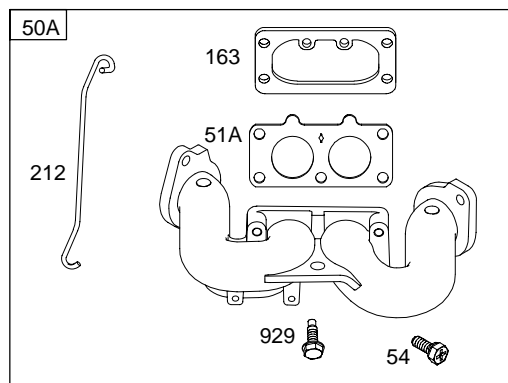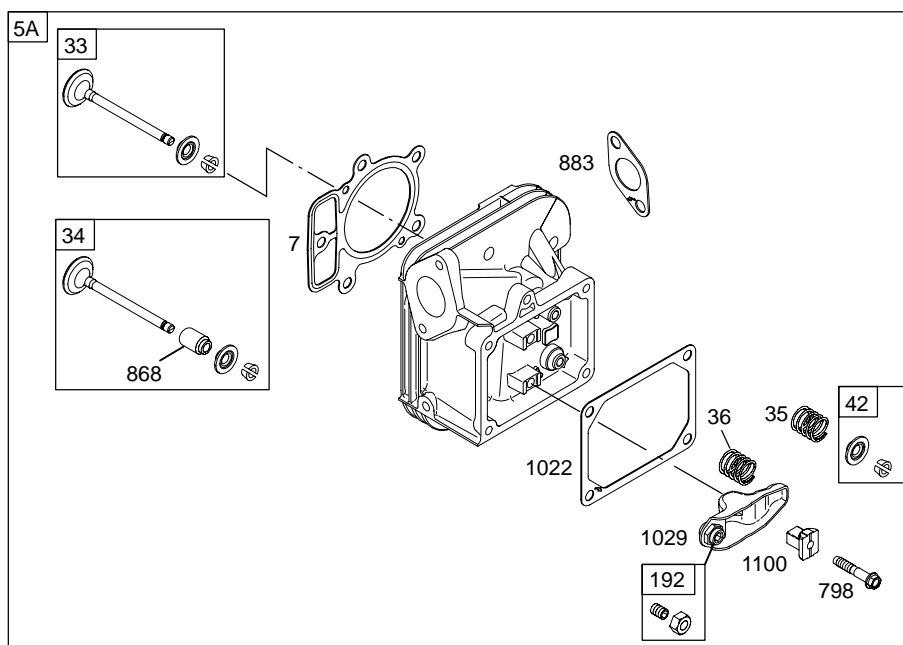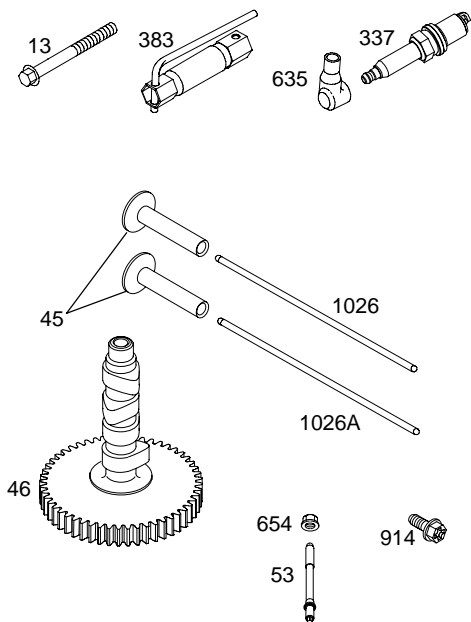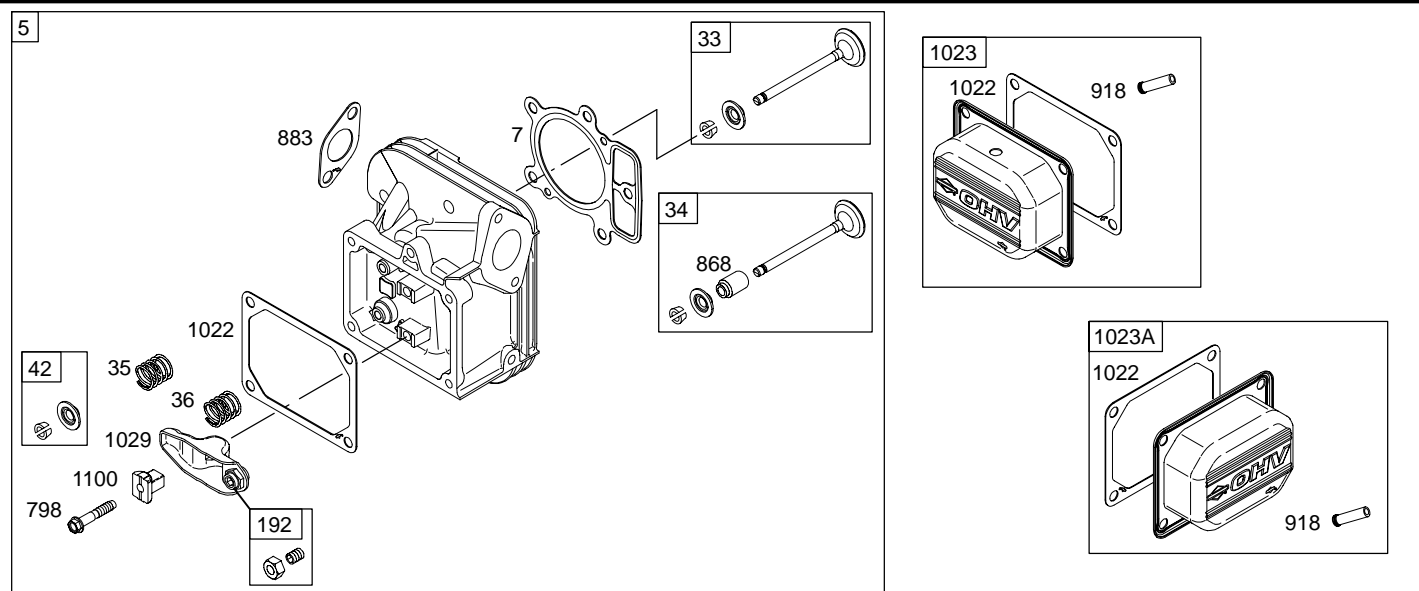


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

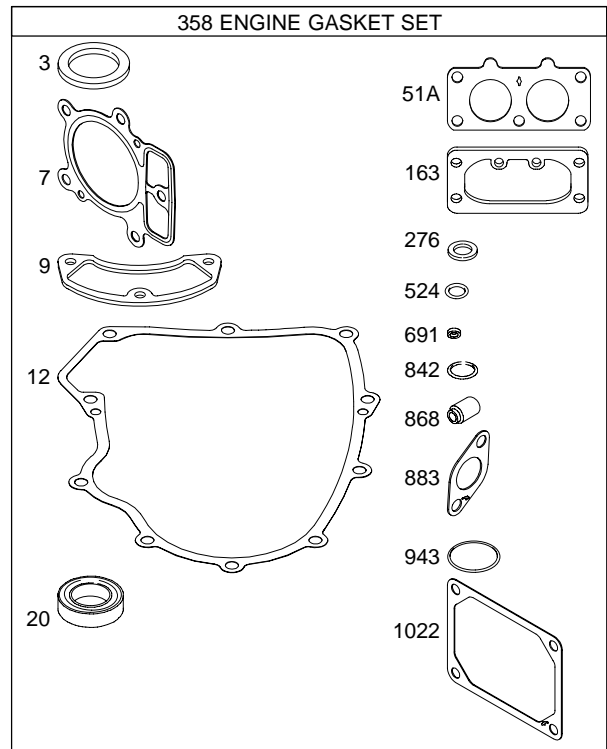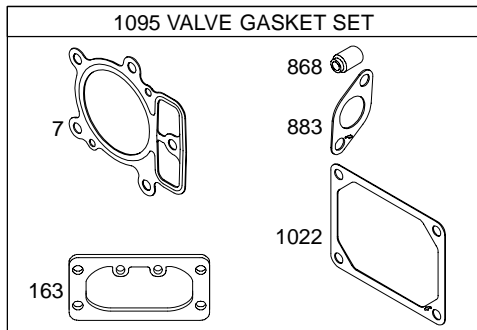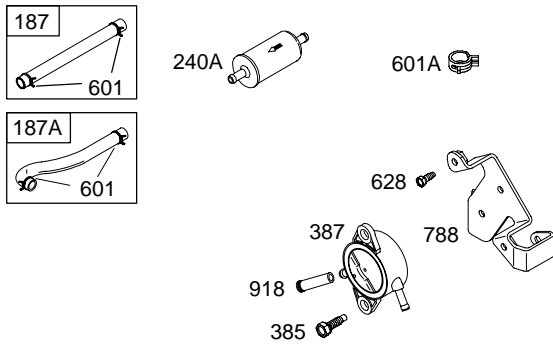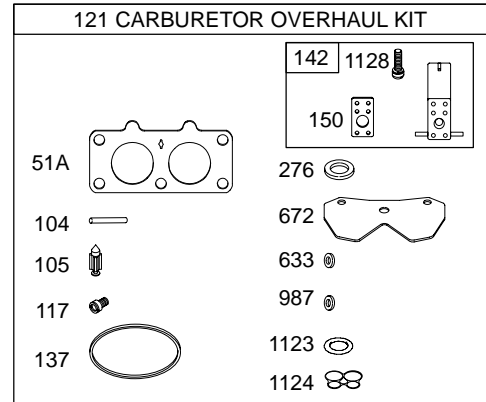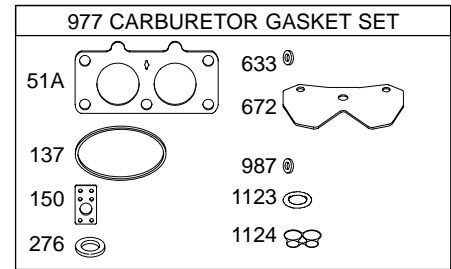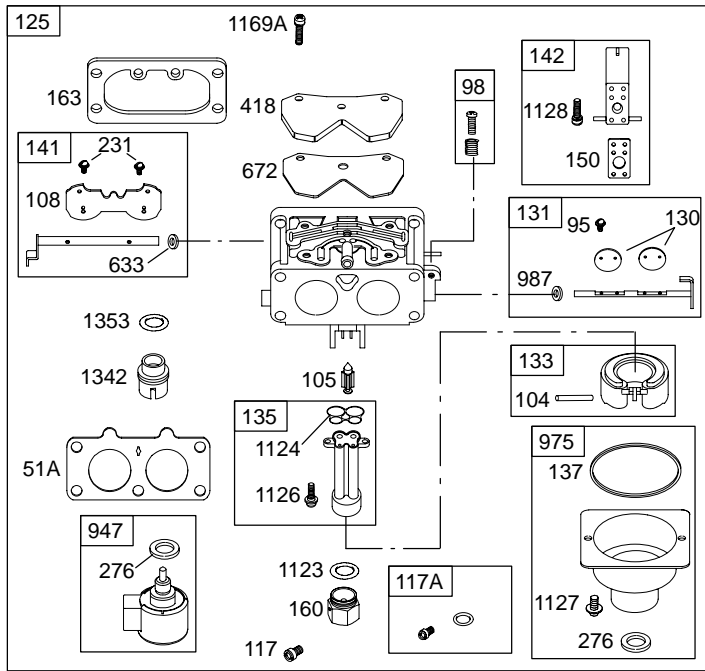


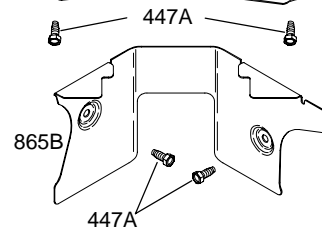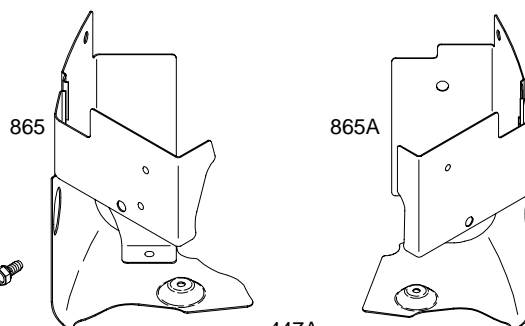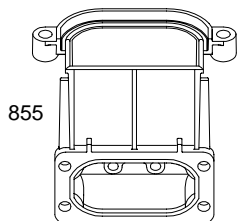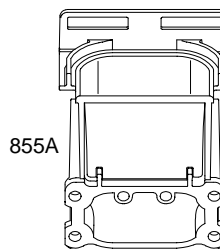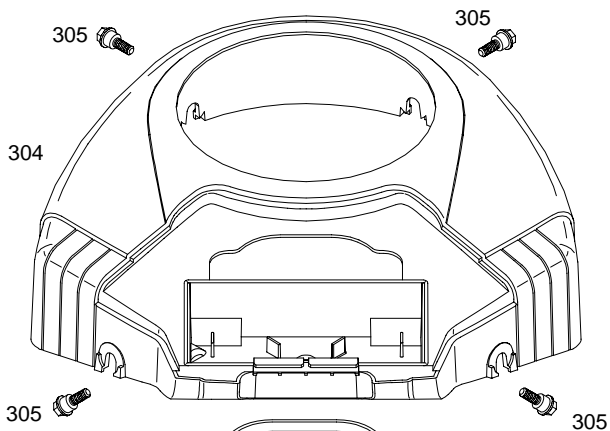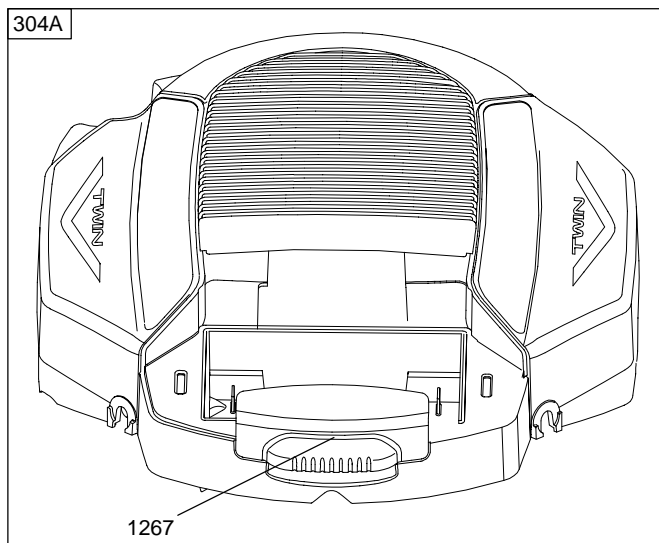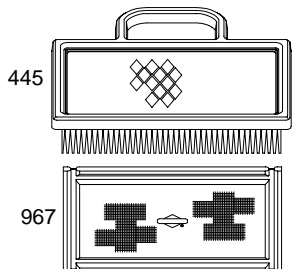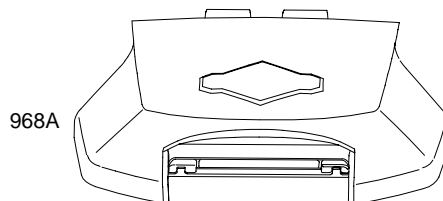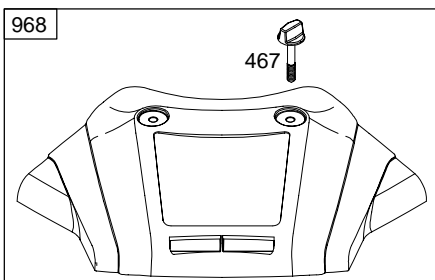



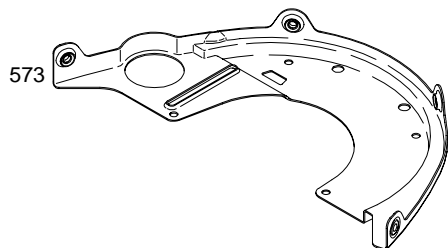



1036 EMISSIONS LABEL



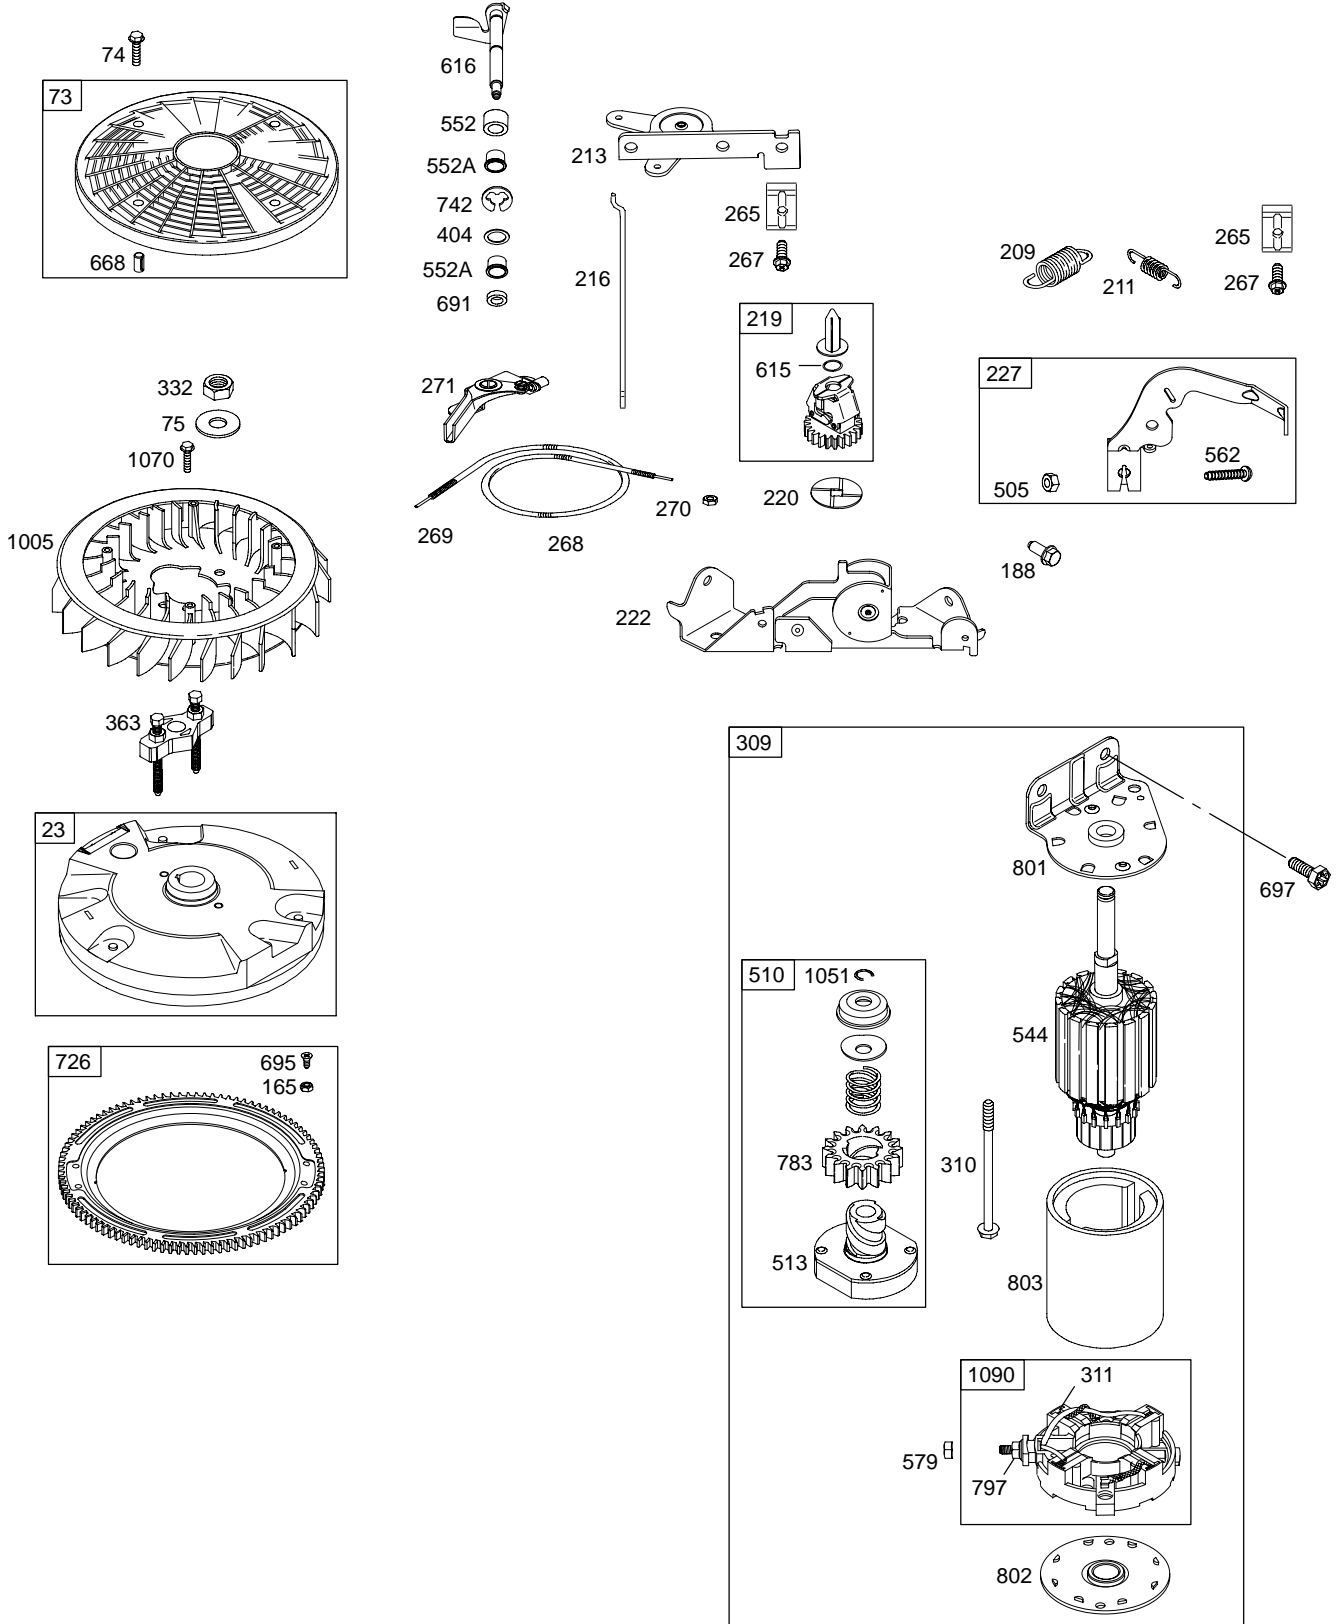


# 40H700



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5194-6 Assemblies include all parts shown in frames. 06/07/2004

DUAL CIRCUIT	10 - 16 AMP
<div data-bbox="699 275 760 296" data-label="Text">474B</div> <div data-bbox="727 310 764 331" data-label="Text">877</div> 	<div data-bbox="894 275 954 296" data-label="Text">474D</div> <div data-bbox="922 310 959 331" data-label="Text">877C</div> <div data-bbox="1019 275 1079 296" data-label="Text">1059</div> 
<div data-bbox="743 535 781 556" data-label="Text">878</div> 	<div data-bbox="943 548 980 569" data-label="Text">578</div> 
<div data-bbox="138 646 860 745" data-label="Text"> <p><b>NOTE:</b> All Stators Use a No. 1119 Mounting Screw. </p> <p><b>NOTE:</b> The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.</p> </div>	
<div data-bbox="922 659 959 680" data-label="Text">526</div> <div data-bbox="922 695 959 716" data-label="Text">501</div> 	

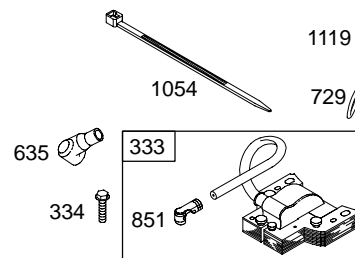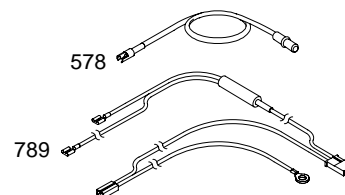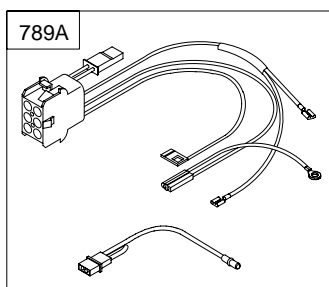

# 40H700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699751	Cylinder Assembly (Used After Code Date 03082800). ----- <b>Note</b> ----- 690231 Cylinder Assembly (Used Before Code Date 03082900).	22	694966	Screw (Crankcase Cover/Sump)	33	499596	Valve - Exhaust
2	499585	Kit - Bushing/Seal (Magneto Side)	23	691053	Flywheel	34	697464	Valve - Intake
3	★391086	Seal - Oil (Magneto Side)	24	222698	Key - Flywheel	35	690963	Spring - Valve (Intake)
4	699747	Sump - Engine (Used After Code Date 03082800). ----- <b>Note</b> ----- 690069 Sump - Engine (Used Before Code Date 03082900).	25	698429	Piston Assembly (Standard) ----- <b>Note</b> ----- 698433 Piston Assembly (.010" Oversize) 698434 Piston Assembly (.020" Oversize) 698435 Piston Assembly (.030" Oversize)	36	690963	Spring - Valve (Exhaust)
5	697580	Head - Cylinder (Cylinder 1)	26	698430	Ring Set (Standard) ----- <b>Note</b> ----- 698436 Ring Set (.010" Oversize) 698437 Ring Set (.020" Oversize) 698438 Ring Set (.030" Oversize)	42	499586	Keeper - Valve
5A	697581	Head - Cylinder (Cylinder 2)	27	690975	Lock - Piston Pin	45	690977	Tappet - Valve
7	★△690962	Gasket - Cylinder Head	28	690229	Pin - Piston (Standard)	46	699748	Camshaft (Used After Code Date 03082800). ----- <b>Note</b> ----- 690978 Camshaft (Used Before Code Date 03082900).
8	499601	Breather Assembly	29	699699	Rod - Connecting (Standard) (Used After Code Date 03122700). ----- <b>Note</b> ----- (For Replacement Connecting Rod, See Reference 16) (Used Before Code Date 03122800). 697253 Rod - Connecting (.020" Undersize)	50A	695241	Manifold - Intake (Plastic)
9	★690937	Gasket - Breather	29	699699	Rod - Connecting (Standard) (Used After Code Date 03122700). ----- <b>Note</b> ----- (For Replacement Connecting Rod, See Reference 16) (Used Before Code Date 03122800). 697253 Rod - Connecting (.020" Undersize)	51A★●	690950	Gasket - Intake
10	691108	Screw (Breather Assembly)	32	690976	Screw (Connecting Rod)	53	690951	Stud (Carburetor)
11	690942	Tube - Breather				54	695240	Screw (Intake Manifold)
12	★697227	Gasket - Crankcase				73	494439	Screen - Rotating
13	690360	Screw (Cylinder Head)				74	698425	Screw (Rotating Screen)
15	691680	Plug - Oil Drain (1/2" Square Flush)				75	691056	Washer (Flywheel)
16	699700	Crankshaft (Used After Code Date 03122700).				95	690718	Screw (Throttle Valve)
16A	699701	Crankshaft (Includes Connecting Rod) (Used Before Code Date 03122800).				98	499802	Kit - Idle Speed
20	★690947	Seal - Oil (PTO Side)				104	●690984	Pin - Float Hinge
						105	●690985	Valve - Float Needle
						108	690986	Valve - Choke
						117	●690232	Jet - Main (Standard)
						117A	699733	Jet - Main (Standard)
						121	499811	Kit - Carburetor Overhaul
						125	499804	Carburetor
						130	690993	Valve - Throttle
						131	499805	Kit - Throttle Shaft
						133	499806	Float - Carburetor

★ Included in Engine Gasket Set - Ref. No. 358.

● Included in Carburetor Overhaul Kit - Ref. No. 121.

◆ Included in Carburetor Gasket Set - Ref. No. 977.

△ Included in Valve Gasket Set - Ref. No. 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**



# 40H700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
135	499803	Tube-Fuel Transfer	227	691048	Lever-Governor Control	357	691483	Key-Drive Pulley
137	◆690994	Gasket-Float Bowl				358	694012	Gasket Set-Engine
141	499807	Kit-Choke Shaft	231	690718	Screw (Choke Valve)	363	19203	Puller-Flywheel
142	◆499808	Nozzle-Carburetor (Standard)	239	491657	Switch-Oil Pressure	383	19374	Wrench-Spark Plug
146	690979	Key-Timing	240A	695666	Filter-Fuel	385	691108	Screw (Fuel Pump)
150	◆690995	Gasket-Nozzle	250	690957	Retainer-Breather	387	808656	Pump-Fuel
160	690996	Retainer-Solenoid	252	690956	Collector-Oil	404	690442	Washer (Governor Crank)
163	★△691001	Gasket-Air Cleaner	265	691024	Clamp-Casing	405A	697820	Screw (Back Plate)(Mounting)
165	693148	Nut (Ring Gear)	267	691044	Screw (Casing Clamp)	415	690283	Plug
187	691050	Line-Fuel (Cut To Required Length)	268	691025	Casing-Control Wire (Hex Head)	418	690999	Plate-Carburetor
187A	691049	Line-Fuel (Molded)	269	691026	Wire-Control (Cut To Required Length)	445	698754	Filter-Air Cleaner Cartridge
188	691108	Screw (Control Bracket)	270	691027	Nut (Control Wire Casing)	447	691003	Screw (Air Guide Cover)
192	690083	Adjuster-Rocker Arm	271	691028	Lever-Control	447A	691108	Screw (Air Guide Cover)
209	697674	Spring-Governor (Brown)	276	★◆690997	Washer-Sealing	467	691008	Knob-Air Cleaner
		----- Note -----	287	691108	Screw (Dipstick Tube)	474B	696459	Alternator (Dual Circuit) Used on Type No(s). 0100.
		698071 Spring-Governor (White) Used on Type No(s). 0112.	304	695277	Housing-Blower (Black)	474D	696458	Alternator (10-16 Amp Regulated)
211	691019	Spring-Governed Idle	304A	698073	Housing-Blower Used on Type No(s). 0112, 0171, 0241, 0242, 0248.	501	691185	Regulator (10-16 Amp Regulated)
212	695238	Link-Throttle (Used With Plastic Intake Manifold)	305	691005	Screw (Blower Housing)	505	691029	Nut (Governor Control Lever)
213	691021	Bracket-Choke Control	309	497401	Motor-Starter	510	696541	Drive-Starter
216	691022	Link-Choke	310	691263	Screw (Starter Motor)	513	692024	Clutch-Drive
219	698231	Gear-Governor	311	497608	Brush Set	523	691036	Dipstick
220	690412	Washer (Governor Gear)	332	691059	Nut (Flywheel)	524	★691032	Seal-Dipstick Tube
222	698761	Bracket-Control	333	691060	Armature-Magneto	525	691037	Tube-Dipstick
		----- Note -----	334	691061	Screw (Magneto Armature)	526	691108	Screw (Regulator)(16 Amp)(5/8" Long)
		698757 Bracket-Control (Used After Code Date 02111900). Used on Type No(s). 0248.	337	491055	Plug-Spark	544		Armature-Starter (Service With 691262 Starter Motor Only)
		697678 Bracket-Control (Used Before Code Date 02112000). Used on Type No(s). 0248.			----- Note -----			
					691043 Plug-Spark Used on Type No(s). 0248.			

★ Included in Engine Gasket Set-Ref. No.358.

◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5194-9

Assemblies include all parts shown in frames.

06/07/2004

# 40H700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
552	690552	Bushing-Governor Crank	783	695708	Gear-Pinion	883	★△690970	Gasket-Exhaust
552A	690553	Bushing-Governor Crank	788	691039	Bracket-Fuel Pump	914	691127	Screw (Rocker Cover)
562	690311	Bolt (Governor Control Lever)	789	691220	Harness-Wiring	918	694000	Hose-Vacuum
573	790444	Plate-Back	797	693167	Nut (Brush Retainer)	929	695239	Screw (Choke Control Bracket)(Used With Plastic Intake Manifold)
578	691208	Wire Assembly	798	697890	Screw (Rocker Arm)	943	★690589	Seal-O Ring (Oil Pump Cover)
579	691029	Nut (Starter Cable)	801	691283	Cap-Drive	947	699728	Solenoid-Fuel (Used After Code Date 04022900).
601	95162	Clamp-Hose	802	691286	Cap-End			----- <b>Note</b> -----
601A	691038	Clamp-Hose (Black)(Spring Steel)	803		Housing-Starter (Service With 691262 Starter Motor Only)	965	499613	Cover-Oil Pump
615	698290	Retainer-Governor Shaft	842	★691031	Seal-O Ring (Dipstick Tube)	967	273638	Filter-Pre Cleaner
616	691045	Crank-Governor	847	499602	Dipstick/Tube Assembly	968	790095	Cover-Air Cleaner (Used After Code Date 03091700).
628	691108	Screw (Fuel Pump Bracket)	851	493880	Terminal-Spark Plug			----- <b>Note</b> -----
633	◆690998	Seal-Choke/Throttle Shaft	855	691011	Adapter-Air Cleaner	968A	698075	Cover-Air Cleaner (Used Before Code Date 03091800).
635	66538	Boot-Spark Plug	855A	698072	Adapter-Air Cleaner Used on Type No(s). 0112, 0171, 0241, 0242, 0248.	975	499810	Bowl-Float
654	690958	Nut (Carburetor)	865	691012	Cover-Air Guide (Cylinder 1)	977	499812	Gasket Set-Carburetor
668	691215	Spacer	865A	691014	Cover-Air Guide (Cylinder 2)	987	◆691000	Seal-Throttle Shaft
672	◆690234	Gasket-Carburetor Plate	865B	691015	Cover-Air Guide (Valley)	1005	499603	Fan-Flywheel
691	★690657	Seal-Governor Shaft	868	★△690968	Seal-Valve	1013	690954	Nipple-Oil Filter
695	693149	Screw (Ring Gear)	877	393456	Wire/Connector-Alternator (Dual Circuit) Used on Type No(s). 0100.	1017	690770	Screen-Oil Pump
697	690372	Screw (Drive Cap)	877C	399916	Wire/Connector-Alternator (10-16 Amp Regulated)	1019	790094	Kit-Label
703	691010	Clip	878	691237	Harness-Alternator (Dual Circuit)	1022	★△690971	Gasket-Rocker Cover
718	690959	Pin-Locating						
726	499612	Gear-Ring						
729	694123	Clip-Wire						
741	690980	Gear-Timing						
742	690328	Retainer-E Ring						
750	691033	Screw (Oil Pump Cover)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 40H700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1023	499599	Cover-Rocker (Cylinder 1)	1059	698516	Kit-Screw/Washer	1128	●690990	Screw (Carburetor Nozzle)
1023A	499600	Cover-Rocker (Cylinder 2)	1070	690372	Screw (Flywheel Fan)	1169A	693140	Screw (Carburetor Cover Plate)
1024	499054	Pump-Oil	1090	691293	Retainer-Brush	1267	698440	Latch-Blower Housing Used on Type No(s). 0112, 0171, 0241, 0242, 0248.
1026	690981	Rod-Push (Steel)	1095	694013	Gasket Set-Valve	1330	273521	Repair Manual
1026A	690982	Rod-Push (Aluminum)	1100	690973	Pivot-Rocker Arm	1342	699731	Extension-Fuel Transfer Tube
1027A	696854	Filter-Oil	1119	691183	Screw (Alternator)	1353	699725	Seal-O Ring (Fuel Transfer Tube Extension)
1029	690972	Arm-Rocker	1123	◆690987	Seal-O Ring (Solenoid Retainer)			
1035	691042	Shaft-Pump	1124	◆690988	Seal-O Ring (Fuel Transfer Tube)			
1036	695704	Label-Emissions	1126	690991	Screw (Fuel Transfer Tube)			
1051	691265	Ring-Retaining	1127	690992	Screw (Float Bowl)			
1054	280275	Tie-Cable						
1058	275475	Operator's Manual (Emission)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5194-11

Assemblies include all parts shown in frames.

06/07/2004