


PARTS LIST



C3A/M TYPE

C3A/M TYPE

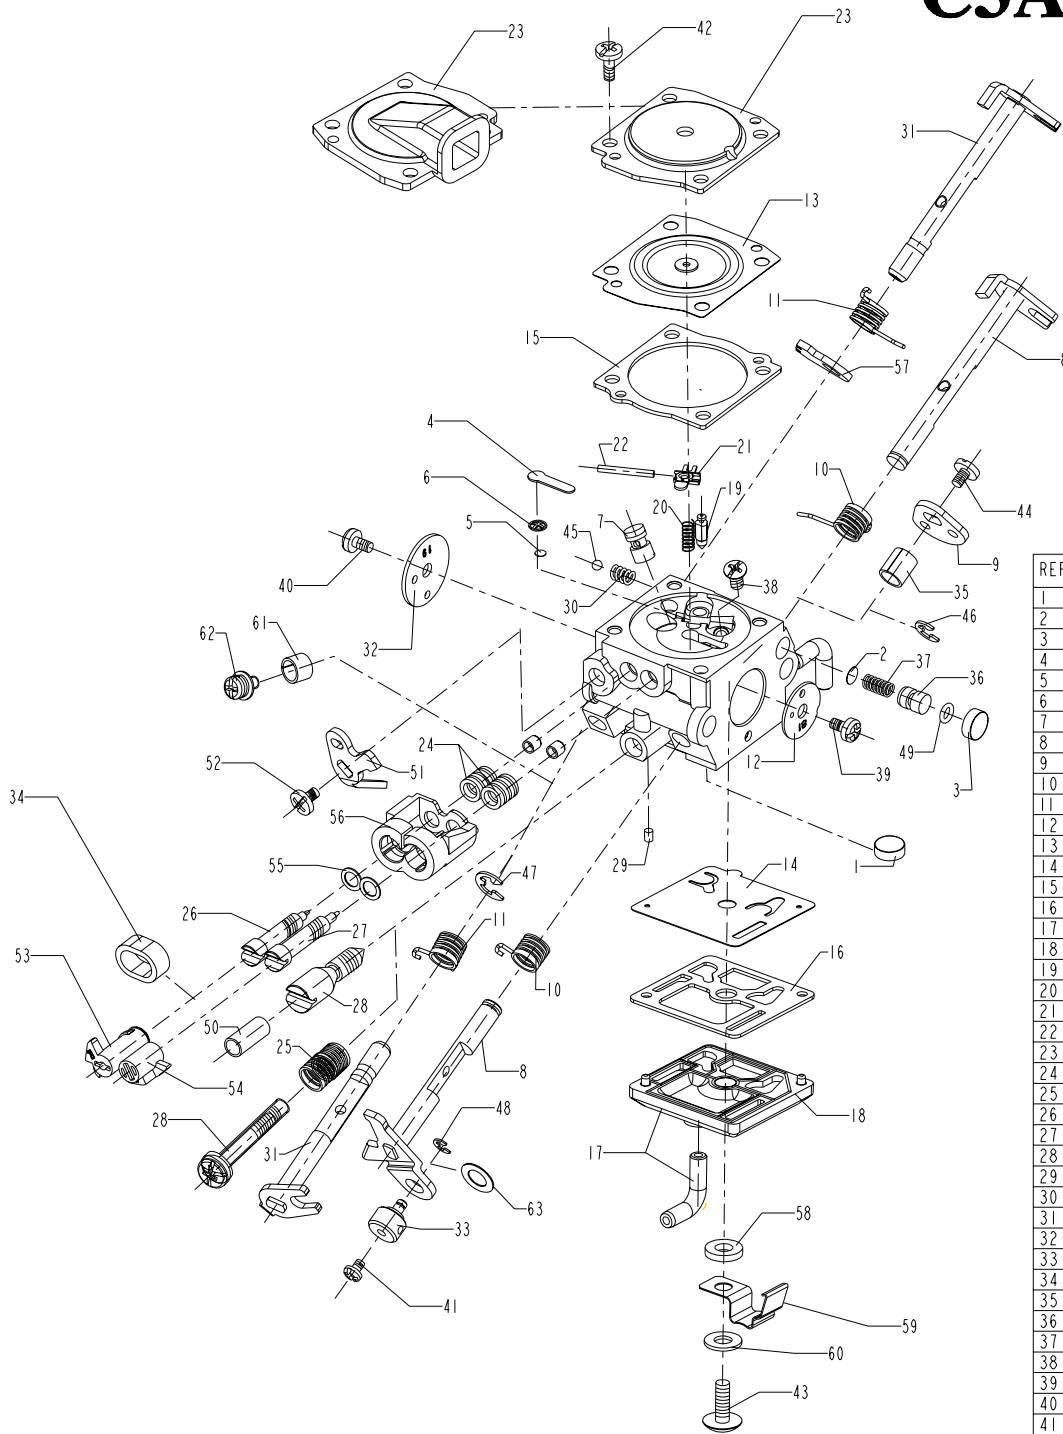

REF. NO.	PART NAME
1	STRAINER
2	STRAINER
3	STRAINER
4	PLUG, WELCH
5	VALVE, CHECK
6	RETAINER,CHECK VALVE
7	NOZZLE ASS'Y, CHECK VALVE
8	SHAFT ASSEMBLY, THROTTLE
9	LEVER, THROTTLE
10	SPRING, THROTTLE RETURN
11	SPRING, CHOKE RETURN
12	VALVE, THROTTLE
13	DIAPHRAGM ASS'Y, METERING
14	DIAPHRAGM, PUMP
15	GASKET, METERING CHAMBER
16	GASKET, PUMP
17	COVER ASSY, PUMP
18	COVER, PUMP
19	VALVE, INLET NEEDLE
20	SPRING, METERING LEVER
21	LEVER, METERING
22	PIN
23	COVER, METERING CHAMBER
24	SPRING, ADJUST SCREW
25	SPRING, ADJUST SCREW
26	SCREW, MAIN MIXTURE
27	SCREW, IDLE MIXTURE
28	SCREW, THROTTLE ADJUST
29	PIECE, FRICTION
30	SPRING, FRICTION
31	SHAFT ASS'Y, CHOKE
32	VALVE, CHOKE
33	POST
34	BOOT
35	COLLAR
36	PLUNGER
37	SPRING (PLUNGER RETURN)
38	SCREW (PIN)
39	SCREW (THROTTLE VALVE)
40	SCREW (CHOKE VALVE)
41	SCREW (POST)
42	SCREW (METERING COVER)
43	SCREW (PUMP COVER)
44	SCREW, THROTTLE LEVER
45	BALL, STEEL
46	E-RING (THROTTLE SHAFT)
47	E-RING (CHOKE SHAFT)
48	E-RING (POST)
49	O-RING (PLUNGER)
50	BOOT (THROTTLE ADJUST)
51	LEVER (THROTTLE ADJUST)
52	SCREW, THROTTLE ADJUST
53	LIMITER, MIXTURE (H)
54	LIMITER, MIXTURE (L)
55	WASHER, (LIMITER)
56	RETAINER, LIMITER
57	LEVER, CHOKE RETURN
58	WASHER (PUMP)
59	RETAINER (THERMOSTAT)
60	WASHER (RETAINER, THERMOSTAT)
61	COLLAR, CHOKE SHAFT
62	SCREW, CHOKE SHAFT
63	WASHER, POST

PARTS LIST

C3A/M TYPE

REF	PART NAME	C3A G1	C3A G1A	C3A H15 - B	C3A S4A - C	C3A S19	C3A S25	C3A S26
	Venturi	13.5 mm	13.5 mm	13.5 mm	15 mm	15 mm	15 mm	15 mm
★	Rebuild Kit	RB-30	RB-30	RB-34	RB-31	RB-31	RB-31	RB-31
●	Gasket & Diaphragm Kit	GND-20	GND-20	GND-23	GND-21	GND-21	GND-21	GND-21
▲	Cover Kit, Pump	*****	*****	*****	*****	*****	*****	*****
1	Strainer	★ 0004009	★ 0004009	★ 0004009	★ 0004011	★ 0004011	★ 0004011	★ 0004011
2	Strainer	*****	*****	*****	*****	*****	*****	*****
3	Strainer	*****	*****	*****	*****	*****	*****	*****
4	Plug, Welch	★ 0005005	★ 0005005	★ 0005005	★ 0005010	★ 0005010	★ 0005010	★ 0005010
5	Valve, Check	*****	*****	0008004	*****	*****	*****	*****
6	Retainer, Check Valve	*****	*****	0009008	*****	*****	*****	*****
7	Nozzle Ass'y, Check Valve	A007030	A007021	A007042	A007028	A007053	A007053	A007053
8	Shaft Ass'y, Throttle	A011046	A011046	A011065	A011036	A011036	A011036	A011036
9	Lever, Throttle	*****	*****	0012069	*****	*****	*****	*****
10	Spring, Throttle Return	0013018	0013029	0013018	0013018	0013018	0013018	0013018
11	Spring, Choke Return	*****	0054010	*****	0013019	0013019	0013019	0013019
12	Valve, Throttle	0014024	0014024	0014004	0014018	0014018	0014018	0014018
13	Diaphragm Ass'y, Metering	★● A015013	★● A015013	★● A015014	★● A015013	★● A015013	★● A015013	★● A015013
14	Diaphragm, Pump	★● 0015046	★● 0015046	★● 0015049	★● 0015049	★● 0015049	★● 0015049	★● 0015049
15	Gasket, Metering Chamber	★● 0016027	★● 0016027	★● 0016027	★● 0016042	★● 0016042	★● 0016042	★● 0016042
16	Gasket, Pump	★● 0016025	★● 0016025	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032
17	Cover Ass'y, Pump	*****	*****	*****	*****	*****	*****	*****
18	Cover, Pump	0017041	0017041	0017041	0017041	0017041	0017050	0017041
19	Valve, Inlet Needle	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004
20	Spring, Metering Lever	★ 0019012	★ 0019012	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019002
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028012	0028012	0028017	0028018	0028018	0028018	0028021
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	*****	*****	*****	*****	*****	*****	*****
26	Screw, Main Mixture	0030029	0030029	0030045	0030026	0030058	0030058	0030058
27	Screw, Idle Mixture	0031026	0031026	0031047	0031032	0031058	0031058	0031058
28	Screw, Throttle Adjust	0035013	0035021	0035022	0035013	0035013	0035013	0035013
29	Piece, Friction	0036001	0036001	0036001	0036001	0036001	0036001	0036001
30	Spring, Friction	0038001	0038001	0038001	*****	*****	*****	*****
31	Shaft Ass'y, Choke	A041014	A041014	A041024	A041011	A041011	A041043	A041011
32	Valve, Choke	0043010	0043010	0043011	0043011	0043011	0043011	0043011
33	Post	*****	*****	*****	*****	*****	*****	*****
34	Boot	*****	*****	*****	*****	*****	*****	*****
35	Collar	*****	*****	0052006	*****	*****	*****	*****
36	Plunger	*****	*****	*****	*****	*****	*****	*****
37	Spring (Plunger Return)	*****	*****	*****	*****	*****	*****	*****
38	Screw (Pin)	14803006	14803006	14803006	14803006	14803006	14803006	14803006
39	Screw (Throttle Valve)	15603004	15603004	15603004	156030055	156030055	156030055	156030055
40	Screw (Choke Valve)	156030045	156030045	156030045	156030045	156030045	156030045	156030045
41	Screw (Post)	*****	*****	*****	*****	*****	*****	*****
42	Screw (Metering Cover)	17103007	17103007	17203006	17103007	17203006	17203006	17103007
43	Screw (Pump Cover)	17004010	17004010	17004010	17004010	17004010	17104012	17004010
44	Screw (Throttle Lever)	*****	*****	17103004	*****	*****	*****	*****
45	Ball, Steel	19290030	19290030	19290030	*****	*****	*****	*****
46	E-Ring (Throttle Shaft)	19500030	19500030	*****	19500030	19500030	19500030	19500030
47	E-Ring (Choke Shaft)	*****	19500025	*****	19500025	19500025	19500024	19500025
48	E-Ring (Post)	*****	*****	*****	*****	*****	*****	*****
49	O-Ring (Plunger)	*****	*****	*****	*****	*****	*****	*****
50	Boot (Throttle Adj. Screw)	*****	*****	*****	*****	*****	*****	*****
51	Lever, Throttle Adjust	*****	*****	*****	*****	*****	*****	*****
52	Screw (Throttle Adj Lever)	*****	*****	*****	*****	*****	*****	*****
53	Limiter, Mixture (H)	*****	*****	*****	*****	*****	*****	*****
54	Limiter, Mixture (L)	*****	*****	*****	*****	*****	*****	*****
55	Washer (Limiter)	*****	*****	*****	*****	*****	*****	*****
56	Retainer (Limiter)	*****	*****	*****	*****	*****	*****	*****
57	Lever, Choke	*****	*****	*****	*****	*****	*****	*****
58	Washer (Pump)	*****	*****	*****	*****	*****	*****	*****
59	Retainer (Thermostat)	*****	*****	*****	*****	*****	*****	*****
60	Washer (Retainer, Thermostat)	*****	*****	*****	*****	*****	*****	*****
61	Collar, Choke Shaft	*****	*****	*****	*****	*****	*****	*****
62	Screw, Collar Choke Shaft	*****	*****	*****	*****	*****	*****	*****
63	Washer, Post	*****	*****	*****	*****	*****	*****	*****

PARTS LIST

C3A/M TYPE

REF	PART NAME	C3A S27B	C3A S27C-D	C3A S31, A	C3A S31B	C3A S31C	C3A S31D-E	C3A S38
	Venturi	15 mm	15 mm	15 mm	15 mm	15 mm	15 mm	15 mm
★	Rebuild Kit	RB-31	RB-31	RB-31	RB-31	RB-31	RB-31	RB-31
●	Gasket & Diaphragm Kit	GND-21	GND-21	GND-21	GND-21	GND-21	GND-21	GND-21
▲	Cover Kit, Pump	*****	*****	*****	*****	*****	*****	*****
1	Strainer	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011
2	Strainer	*****	*****	*****	*****	*****	*****	*****
3	Strainer	*****	*****	*****	*****	*****	*****	*****
4	Plug, Welch	★ 0005010	★ 0005010	★ 0005010	★ 0005010	★ 0005010	★ 0005010	★ 0005010
5	Valve, Check	*****	*****	*****	*****	*****	*****	*****
6	Retainer, Check Valve	*****	*****	*****	*****	*****	*****	*****
7	Nozzle Ass'y, Check Valve	A007110	A007114	A007082	A007110	A007110	A007114	A007110
8	Shaft Ass'y, Throttle	A011036	A011036	A011036	A011036	A011036	A011036	A011036
9	Lever, Throttle	*****	*****	*****	*****	*****	*****	*****
10	Spring, Throttle Return	0013018	0013018	0013018	0013018	0013018	0013018	0013018
11	Spring, Choke Return	0013019	0013019	0013019	0013019	0013019	0013019	0013019
12	Valve, Throttle	0014018	0014018	0014018	0014018	0014018	0014018	0014018
13	Diaphragm Ass'y, Metering	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013
14	Diaphragm, Pump	★● 0015049	★● 0015049	★● 0015049	★● 0015049	★● 0015049	★● 0015049	★● 0015049
15	Gasket, Metering Chamber	★● 0016042	★● 0016042	★● 0016042	★● 0016042	★● 0016042	★● 0016042	★● 0016042
16	Gasket, Pump	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032
17	Cover Ass'y, Pump	*****	*****	*****	*****	*****	*****	*****
18	Cover, Pump	0017050	0017050	0017041	0017041	0017041	0017041	0017041
19	Valve, Inlet Needle	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004
20	Spring, Metering Lever	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019002
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028024	0028024	0028021	0028021	0028021	0028021	0028018
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	*****	*****	*****	*****	*****	*****	*****
26	Screw, Main Mixture	K030146	K030097	K030097	K030146	K030097	K030097	K030146
27	Screw, Idle Mixture	K031141	K031149	K031094	K031141	K031141	K031149	K031141
28	Screw, Throttle Adjust	0035037	0035037	0035037	0035037	0035037	0035037	0035037
29	Piece, Friction	0036001	0036001	0036001	0036001	0036001	0036001	0036001
30	Spring, Friction	*****	*****	*****	*****	*****	*****	*****
31	Shaft Ass'y, Choke	A041043	A041043	A041011	A041011	A041011	A041043	A041011
32	Valve, Choke	0043011	0043011	0043011	0043011	0043011	0043011	0043011
33	Post	*****	*****	*****	*****	*****	*****	*****
34	Boot	*****	*****	*****	*****	*****	*****	*****
35	Collar	*****	*****	*****	*****	*****	*****	*****
36	Plunger	*****	*****	*****	*****	*****	*****	*****
37	Spring (Plunger Return)	*****	*****	*****	*****	*****	*****	*****
38	Screw (Pin)	14803006	14803006	14803006	14803006	14803006	14803006	14803006
39	Screw (Throttle Valve)	156030055	156030055	156030055	156030055	156030055	156030055	156030055
40	Screw (Choke Valve)	156030045	156030045	156030045	156030045	156030045	156030045	156030045
41	Screw (Post)	*****	*****	*****	*****	*****	*****	*****
42	Screw (Metering Cover)	17103007	17103007	17103007	17103007	17103007	17103007	17203006
43	Screw (Pump Cover)	17104012	17104012	17004010	17004010	17004010	17004010	17004010
44	Screw (Throttle Lever)	*****	*****	*****	*****	*****	*****	*****
45	Ball, Steel	*****	*****	*****	*****	*****	*****	*****
46	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	19500030	19500030
47	E-Ring (Choke Shaft)	19500024	19500024	19500025	19500025	19500025	19500024	19500025
48	E-Ring (Post)	*****	*****	*****	*****	*****	*****	*****
49	O-Ring (Plunger)	*****	*****	*****	*****	*****	*****	*****
50	Boot (Throttle Adj. Screw)	*****	*****	*****	*****	*****	*****	*****
51	Lever, Throttle Adjust	*****	*****	*****	*****	*****	*****	*****
52	Screw (Throttle Adj Lever)	*****	*****	*****	*****	*****	*****	*****
53	Limiter, Mixture (H)	*****	*****	*****	*****	*****	*****	*****
54	Limiter, Mixture (L)	*****	*****	*****	*****	*****	*****	*****
55	Washer (Limiter)	*****	*****	*****	*****	*****	*****	*****
56	Retainer (Limiter)	*****	*****	*****	*****	*****	*****	*****
57	Lever, Choke	*****	*****	*****	*****	*****	*****	*****
58	Washer (Pump)	*****	*****	*****	*****	*****	*****	*****
59	Retainer (Thermostat)	*****	*****	*****	*****	*****	*****	*****
60	Washer (Retainer, Thermostat)	*****	*****	*****	*****	*****	*****	*****
61	Collar, Choke Shaft	*****	*****	*****	*****	*****	*****	*****
62	Screw, Collar Choke Shaft	*****	*****	*****	*****	*****	*****	*****
63	Washer, Post	*****	*****	*****	*****	*****	*****	*****

PARTS LIST

C3A/M TYPE

REF	PART NAME	C3A S38A-B	C3A S39-B	C3A S52	C3A S65	C3M DM11	C3M DM11A	C3M DM11B
	Venturi	15 mm	15 mm	15 mm	15 mm	17 mm	17 mm	17 mm
★	Rebuild Kit	RB-31	RB-31	RB-31	RB-31	RB-101	RB-101	RB-101
●	Gasket & Diaphragm Kit	★ GND-21	★ GND-21	★ GND-21	★ GND-21	★ GND-63	★ GND-63	★ GND-63
▲	Cover Kit, Pump	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005010	★ 0005010	★ 0005010	★ 0005010	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Nozzle Ass'y, Check Valve	A007114	A007114	A007114	A007162	A007176	A007176	A007176
8	Shaft Ass'y, Throttle	A011036	A011036	A011036	A011036	A011197	A011197	A011197
9	Lever, Throttle	-----	-----	-----	-----	0012171	0012171	0012171
10	Spring, Throttle Return	0013018	0013018	0013018	0013018	0013020	0013020	0013020
11	Spring, Choke Return	0013019	0013019	0013019	0013019	0013067	0013067	0013067
12	Valve, Throttle	0014018	0014018	0014018	0014018	0014025	0014025	0014025
13	Diaphragm Ass'y, Metering	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013
14	Diaphragm, Pump	★● 0015049	★● 0015049	★● 0015049	★● 0015049	★● 0015040	★● 0015040	★● 0015040
15	Gasket, Metering Chamber	★● 0016042	★● 0016042	★● 0016042	★● 0016042	★● 0016051	★● 0016051	★● 0016051
16	Gasket, Pump	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032
17	Cover Ass'y, Pump	-----	-----	-----	-----	-----	-----	-----
18	Cover, Pump	0017041	0017041	0017050	0017041	0017053	0017053	0017053
19	Valve, Inlet Needle	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004
20	Spring, Metering Lever	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019009	★ 0019009	★ 0019009
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028018	0028021	0028024	0028021	0028033	0028033	0028033
24	Spring, Adjust Screw	0029005	0029031	0029031	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
26	Screw, Main Mixture	K030146	K030147	K030147	K030097	0030061	0030061	0030235
27	Screw, Idle Mixture	K031149	K031147	K031147	K031149	K031109	K031109	K031152
28	Screw, Throttle Adjust	0035037	-----	0035037	0035037	0035036	0035036	0035036
29	Piece, Friction	0036001	0036001	0036001	0036001	0036001	0036001	0036001
30	Spring, Friction	-----	-----	-----	-----	0038001	0038001	0038001
31	Shaft Ass'y, Choke	A041043	A041043	A041043	A041043	A041098	A041101	A041101
32	Valve, Choke	0043011	0043011	0043011	0043011	0043054	0043054	0043054
33	Post	-----	-----	-----	-----	-----	-----	-----
34	Boot	-----	-----	-----	-----	0051006	0051006	0051006
35	Collar	-----	-----	-----	-----	0052004	0052004	0052004
36	Plunger	-----	-----	-----	-----	-----	-----	-----
37	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
38	Screw (Pin)	14803006	14803006	14803006	14803006	14803006	14803006	14803006
39	Screw (Throttle Valve)	156030055	156030055	156030055	156030055	156030055	156030055	156030055
40	Screw (Choke Valve)	156030045	156030045	156030045	156030045	156030045	156030045	156030045
41	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
42	Screw (Metering Cover)	17203006	17103007	17103007	17103007	17203006	17203006	17203006
43	Screw (Pump Cover)	17004010	17004010	17004012	17004010	17004010	17004010	17004010
44	Screw (Throttle Lever)	-----	-----	-----	-----	17103004	17103004	17103004
45	Ball, Steel	-----	-----	-----	-----	19290030	19290030	19290030
46	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	-----	-----	-----
47	E-Ring (Choke Shaft)	19500024	19500024	19500024	19500024	-----	-----	-----
48	E-Ring (Post)	-----	-----	-----	-----	-----	-----	-----
49	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
50	Boot (Throttle Adj. Screw)	-----	-----	-----	-----	-----	-----	-----
51	Lever, Throttle Adjust	-----	-----	-----	-----	-----	-----	-----
52	Screw (Throttle Adj Lever)	-----	0035037	-----	-----	-----	-----	-----
53	Limiter, Mixture (H)	-----	0061030	0061030	-----	-----	-----	0061067
54	Limiter, Mixture (L)	-----	0061029	0061029	-----	-----	-----	0061067
55	Washer (Limiter)	-----	0026006	0026006	-----	-----	-----	0026014
56	Retainer (Limiter)	-----	0009034	0009034	-----	-----	-----	-----
57	Lever, Choke	-----	-----	-----	-----	0042097	0042097	0042097
58	Washer (Pump)	-----	-----	0026009	-----	-----	-----	-----
59	Retainer (Thermostat)	-----	-----	0009022	-----	-----	-----	-----
60	Washer (Retainer, Thermostat)	-----	-----	0026010	-----	-----	-----	-----
61	Collar, Choke Shaft	-----	-----	-----	-----	-----	0052001	0052001
62	Screw, Collar Choke Shaft	-----	-----	-----	-----	-----	16403006	16403006
63	Washer, Post	-----	-----	-----	-----	-----	-----	-----

PARTS LIST

C3A/M TYPE

REF	PART NAME	C3M DM12	C3M DM12A	C3M EL2A	C3M EL2B	C3M EL2C	C3M EL8	C3M EL8A
	Venturi	17 mm	17 mm	17 mm	17 mm	17 mm	17 mm	17 mm
★	Rebuild Kit	RB-101	RB-101	RB-60	RB-60	RB-60	RB-60	RB-60
●	Gasket & Diaphragm Kit	★ GND-63	★ GND-63	★ GND-24	★ GND-24	★ GND-24	★ GND-24	★ GND-24
▲	Cover Kit, Pump	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Nozzle Ass'y, Check Valve	A007176	A007176	A007080	A007120	A007120	A007112	A007121
8	Shaft Ass'y, Throttle	A011197	A011197	A011111	A011111	A011111	A011111	A011111
9	Lever, Throttle	0012171	0012171	0012135	0012135	0012135	0012135	0012135
10	Spring, Throttle Return	0013020	0013020	0013044	0013044	0013044	0013044	0013044
11	Spring, Choke Return	0013067	0013067	0013041	0013067	0013067	0013041	0013067
12	Valve, Throttle	0014025	0014025	0014025	0014025	0014025	0014025	0014025
13	Diaphragm Ass'y, Metering	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013
14	Diaphragm, Pump	★● 0015040	★● 0015040	★● 0015040	★● 0015040	★● 0015040	★● 0015040	★● 0015040
15	Gasket, Metering Chamber	★● 0016051	★● 0016051	★● 0016051	★● 0016051	★● 0016051	★● 0016051	★● 0016051
16	Gasket, Pump	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032
17	Cover Ass'y, Pump	-----	-----	-----	-----	-----	-----	-----
18	Cover, Pump	0017053	0017053	0017053	0017053	0017053	0017053	0017053
19	Valve, Inlet Needle	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004
20	Spring, Metering Lever	★ 0019009	★ 0019009	★ 0019015	★ 0019015	★ 0019015	★ 0019015	★ 0019015
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028033	0028033	0028012	0028033	0028033	0028033	0028033
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
26	Screw, Main Mixture	0030191	0030191	0030115	0030115	0030061	0030151	0030164
27	Screw, Idle Mixture	K031145	K031145	K031109	K031109	K031109	K031145	K031145
28	Screw, Throttle Adjust	0035036	0035036	0035036	0035036	0035036	0035036	0035036
29	Piece, Friction	0036001	0036001	0036001	0036001	0036001	0036001	0036001
30	Spring, Friction	0038001	0038001	-----	-----	-----	-----	-----
31	Shaft Ass'y, Choke	A041098	A041101	A041077	A041077	A041077	A041077	A041077
32	Valve, Choke	0043054	0043054	0043022	0043012	0043012	0043022	0043013
33	Post	-----	-----	-----	-----	-----	-----	-----
34	Boot	-----	-----	0051006	0051006	0051006	-----	-----
35	Collar	0052004	0052004	0052004	0052004	0052004	0052004	0052004
36	Plunger	-----	-----	-----	-----	-----	-----	-----
37	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
38	Screw (Pin)	14803006	14803006	14803006	14803006	14803006	14803006	14803006
39	Screw (Throttle Valve)	156030055	156030055	156030055	156030055	156030055	156030055	156030055
40	Screw (Choke Valve)	156030045	156030045	156030045	156030045	156030045	156030045	156030045
41	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
42	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	17203006
43	Screw (Pump Cover)	17004010	17004010	17004010	17004010	17004010	17004010	17004010
44	Screw (Throttle Lever)	17103004	17103004	17103004	17103004	17103004	17103004	17103004
45	Ball, Steel	19290030	19290030	-----	-----	-----	-----	-----
46	E-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
47	E-Ring (Choke Shaft)	-----	-----	19500025	19500025	19500025	19500025	19500025
48	E-Ring (Post)	-----	-----	-----	-----	-----	-----	-----
49	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
50	Boot (Throttle Adj. Screw)	-----	-----	-----	-----	-----	-----	-----
51	Lever, Throttle Adjust	-----	-----	-----	-----	-----	-----	-----
52	Screw (Throttle Adj Lever)	-----	-----	-----	-----	-----	-----	-----
53	Limiter, Mixture (H)	0061027	0061027	-----	-----	-----	0061027	0061027
54	Limiter, Mixture (L)	-----	-----	-----	-----	-----	-----	-----
55	Washer (Limiter)	0026006	0026006	-----	-----	-----	0026006	0026006
56	Retainer (Limiter)	0009031	0009031	-----	-----	-----	0009031	0009031
57	Lever, Choke	0042097	0042097	-----	-----	0042113	0042113	0042113
58	Washer (Pump)	-----	-----	-----	-----	-----	-----	-----
59	Retainer (Thermostat)	-----	-----	-----	-----	-----	-----	-----
60	Washer (Retainer, Thermostat)	-----	-----	-----	-----	-----	-----	-----
61	Collar, Choke Shaft	-----	0052001	-----	-----	-----	-----	-----
62	Screw, Collar Choke Shaft	-----	16403006	-----	-----	-----	-----	-----
63	Washer, Post	-----	-----	-----	-----	-----	-----	-----

PARTS LIST

C3A/M TYPE

REF	PART NAME	C3M EL8B	C3M FJ1, A	C3M FJ2, A	C3M FJ3 - C	C3M FJ4	C3M FJ5, A	C3M K33
	Venturi	17 mm	17.5 mm	17.5 mm	17.5 mm	17.5 mm	17.5 mm	15 mm
★	Rebuild Kit	RB-60	RB-35	RB-35	RB-35	RB-35	RB-35	RB-53
●	Gasket & Diaphragm Kit	★ GND-24	★ GND-24	★ GND-24	★ GND-24	★ GND-24	★ GND-24	★ GND-26
▲	Cover Kit, Pump	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004009
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005005	★ 0005005	★ 0005005	★ 0005005	★ 0005005	★ 0005005
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Nozzle Ass'y, Check Valve	A007121	A007028	A007028	A007028	A007028	A007028	A007021
8	Shaft Ass'y, Throttle	A011111	A011079	A011079	A011096	A011079	A011096	A011087
9	Lever, Throttle	0012135	0012039	0012039	-----	-----	-----	-----
10	Spring, Throttle Return	0013044	-----	-----	0013020	-----	0013020	0013040
11	Spring, Choke Return	0013067	-----	-----	-----	-----	-----	-----
12	Valve, Throttle	0014025	0014030	0014030	0014030	0014030	0014030	0014030
13	Diaphragm Ass'y, Metering	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013
14	Diaphragm, Pump	★● 0015040	★● 0015048	★● 0015048	★● 0015048	★● 0015048	★● 0015048	★● 0015046
15	Gasket, Metering Chamber	★● 0016051	★● 0016027	★● 0016027	★● 0016027	★● 0016027	★● 0016027	★● 0016042
16	Gasket, Pump	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016025
17	Cover Ass'y, Pump	-----	A017012	A017014	A017014	A017014	A017014	A017016
18	Cover, Pump	0017053	-----	-----	-----	-----	-----	-----
19	Valve, Inlet Needle	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004
20	Spring, Metering Lever	★ 0019015	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019014
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028033	0028012	0028012	0028012	0028012	0028012	0028012
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	-----	-----	-----	0029005	0029005	0029005	0038001
26	Screw, Main Mixture	0030176	0030044	0030044	0030044	0030044	0030044	0030063
27	Screw, Idle Mixture	K031145	0031046	0031046	0031046	0031046	0031046	0031062
28	Screw, Throttle Adjust	0035036	0035016	0035016	16104024	0035016	16104024	0035026
29	Piece, Friction	0036001	0036001	0036001	0036001	0036001	0036001	0036001
30	Spring, Friction	-----	0038001	0038001	0038001	0038001	0038001	-----
31	Shaft Ass'y, Choke	A041077	A041023	A041031	A041031	A041031	A041031	A041036
32	Valve, Choke	0043013	0043021	0043021	0043021	0043021	0043021	0043009
33	Post	-----	-----	-----	0045002	-----	0045012	0045004
34	Boot	-----	-----	-----	-----	-----	-----	0051005
35	Collar	0052004	-----	-----	-----	-----	-----	-----
36	Plunger	-----	-----	-----	-----	-----	-----	-----
37	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
38	Screw (Pin)	14803006	14803006	14803006	14803006	14803006	14803006	14803006
39	Screw (Throttle Valve)	156030055	156030045	156030045	156030045	156030045	156030045	156030045
40	Screw (Choke Valve)	156030045	156030045	156030045	156030045	156030045	156030045	156030045
41	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
42	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	17203006
43	Screw (Pump Cover)	17004010	17004010	17004010	17004010	17004010	17004010	17004010
44	Screw (Throttle Lever)	17103004	17502604	17502604	-----	17502604	-----	-----
45	Ball, Steel	-----	19290030	19290030	19290030	19290030	19290030	19290030
46	E-Ring (Throttle Shaft)	-----	0009017	0009017	19500040	-----	19500040	19500030
47	E-Ring (Choke Shaft)	19500025	-----	-----	-----	-----	-----	-----
48	E-Ring (Post)	-----	-----	-----	19500040	-----	19500040	19500040
49	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
50	Boot (Throttle Adj. Screw)	-----	-----	-----	-----	0009017	-----	0051004
51	Lever, Throttle Adjust	-----	-----	-----	0012092	0012039	0012092	-----
52	Screw (Throttle Adj Lever)	-----	-----	-----	16105006	17103004	16105006	-----
53	Limiter, Mixture (H)	0061027	0061001	0061001	0061001	0061001	0061001	-----
54	Limiter, Mixture (L)	-----	0061002	0061002	0061002	0061002	0061002	-----
55	Washer (Limiter)	0026006	0026006	0026014	0026014	0026014	0026014	-----
56	Retainer (Limiter)	0009031	-----	-----	-----	-----	-----	-----
57	Lever, Choke	0042113	-----	-----	-----	-----	-----	-----
58	Washer (Pump)	-----	-----	-----	-----	-----	-----	-----
59	Retainer (Thermostat)	-----	-----	-----	-----	-----	-----	-----
60	Washer (Retainer, Thermostat)	-----	-----	-----	-----	-----	-----	-----
61	Collar, Choke Shaft	-----	-----	-----	-----	-----	-----	-----
62	Screw, Collar Choke Shaft	-----	-----	-----	-----	-----	-----	-----
63	Washer, Post	-----	-----	-----	-----	-----	-----	-----

PARTS LIST

C3A/M TYPE

REF	PART NAME	C3M K33A	C3M K33B-C	C3M K33D	C3M K74	C3M K80	C3M S5	C3M S5A - C
	Venturi	15 mm	15 mm	15 mm	15 mm	15 mm	17 mm	17 mm
★	Rebuild Kit	RB-53	RB-53	RB-53	RB-116	RB-116	RB-37	RB-37
●	Gasket & Diaphragm Kit	GND-26	GND-26	GND-26	GND-62	GND-62	GND-26	GND-26
▲	Cover Kit, Pump	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004009	★ 0004009	★ 0004009	★ 0004009	★ 0004009	★ 0004011	★ 0004011
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005005	★ 0005005	★ 0005005	★ 0005004	★ 0005004	★ 0005005	★ 0005005
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Nozzle Ass'y, Check Valve	A007021	A007129	A007129	A007197	A007197	A007027	A007027
8	Shaft Ass'y, Throttle	A011087	A011087	A011203	A011203	A011203	A011037	A011037
9	Lever, Throttle	-----	-----	-----	-----	-----	-----	-----
10	Spring, Throttle Return	0013040	0013040	0013040	0013040	0013040	0013020	0013020
11	Spring, Choke Return	-----	-----	0013086	0013086	0013086	0013021	0013021
12	Valve, Throttle	0014030	0014030	0014030	0014030	0014030	0014019	0014025
13	Diaphragm Ass'y, Metering	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013
14	Diaphragm, Pump	★● 0015048	★● 0015048	★● 0015048	★● 0015040	★● 0015040	★● 0015046	★● 0015046
15	Gasket, Metering Chamber	★● 0016042	★● 0016042	★● 0016042	★● 0016042	★● 0016042	★● 0016042	★● 0016042
16	Gasket, Pump	★● 0016025	★● 0016025	★● 0016025	★● 0016032	★● 0016032	★● 0016025	★● 0016025
17	Cover Ass'y, Pump	A017016	A017016	A017016	A017016	A017016	A017008	A017008
18	Cover, Pump	-----	-----	-----	-----	-----	-----	-----
19	Valve, Inlet Needle	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004
20	Spring, Metering Lever	★ 0019014	★ 0019014	★ 0019014	★ 0019009	★ 0019009	★ 0019012	★ 0019012
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028012	0028012	0028012	0028012	0028044	0028012	0028012
24	Spring, Adjust Screw	0029005	0029001	0029001	0029035	0029032	0029005	0029005
25	Spring, Adjust Screw	0038001	-----	-----	-----	-----	-----	-----
26	Screw, Main Mixture	0030063	0030063	0030063	0030207	0030207	0030027	0030026
27	Screw, Idle Mixture	0031062	0031062	0031062	0031210	0031210	0031027	0031032
28	Screw, Throttle Adjust	0035026	0035026	0035026	0035075	0035075	0035014	0035014
29	Piece, Friction	0036001	0036001	0036001	0036001	0036001	0036002	0036002
30	Spring, Friction	-----	0038001	0038001	0038001	0038001	-----	-----
31	Shaft Ass'y, Choke	A041036	A041036	A041096	A041096	A041096	A041012	A041012
32	Valve, Choke	0043009	0043009	0043009	0043009	0043009	0043012	0043012
33	Post	0045004	0045004	0045043	0045043	0045043	-----	-----
34	Boot	0051005	0051005	0051005	-----	-----	-----	-----
35	Collar	-----	-----	-----	-----	-----	-----	-----
36	Plunger	-----	-----	-----	-----	-----	-----	-----
37	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
38	Screw (Pin)	14803006	14803006	14803006	14803006	14803006	14803006	14803006
39	Screw (Throttle Valve)	156030045	156030045	156030045	156030045	156030045	156030055	156030055
40	Screw (Choke Valve)	156030045	-----	-----	-----	-----	156030045	156030045
41	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
42	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17103007	17103007
43	Screw (Pump Cover)	17004010	17004010	17004010	17004010	17004010	17004010	17004010
44	Screw (Throttle Lever)	-----	-----	-----	-----	-----	-----	-----
45	Ball, Steel	19290030	19290030	19290030	19290030	19290030	-----	-----
46	E-Ring (Throttle Shaft)	19500030	-----	-----	19500030	19500030	19500030	19500030
47	E-Ring (Choke Shaft)	-----	19500030	19500030	-----	-----	19500025	19500025
48	E-Ring (Post)	19500040	19500040	19500040	19500040	19500040	-----	-----
49	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
50	Boot (Throttle Adj. Screw)	0051004	0051004	0051004	0051027	0051027	-----	-----
51	Lever, Throttle Adjust	-----	-----	-----	-----	-----	-----	-----
52	Screw (Throttle Adj Lever)	-----	-----	-----	-----	-----	-----	-----
53	Limiter, Mixture (H)	-----	-----	-----	0061025	0061025	-----	-----
54	Limiter, Mixture (L)	-----	-----	-----	0061026	0061026	-----	-----
55	Washer (Limiter)	-----	-----	-----	-----	-----	-----	-----
56	Retainer (Limiter)	-----	-----	-----	0009028	0009028	-----	-----
57	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
58	Washer (Pump)	-----	-----	-----	0026014	0026014	-----	-----
59	Retainer (Thermostat)	-----	-----	-----	-----	-----	-----	-----
60	Washer (Retainer, Thermostat)	-----	-----	-----	-----	-----	-----	-----
61	Collar, Choke Shaft	-----	-----	-----	-----	-----	-----	-----
62	Screw, Collar Choke Shaft	-----	-----	-----	-----	-----	-----	-----
63	Washer, Post	-----	-----	0026037	0026037	0026037	-----	-----

PARTS LIST

C3A/M TYPE

REF	PART NAME	C3M S5D, E	C3M S5G	C3M S12A	C3M S12B	C3M S20	C3M S21	C3M S22
	Venturi	17 mm	17 mm	17 mm	17 mm	17 mm	17 mm	17 mm
★	Rebuild Kit	RB-36	RB-36	RB-36	RB-36	RB-36	RB-36	RB-36
●	Gasket & Diaphragm Kit	GND-25	GND-25	GND-25	GND-25	GND-25	GND-25	GND-25
▲	Cover Kit, Pump	*****	*****	*****	*****	*****	*****	*****
1	Strainer	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011
2	Strainer	*****	*****	*****	*****	*****	*****	*****
3	Strainer	*****	*****	*****	*****	*****	*****	*****
4	Plug, Welch	★ 0005005	★ 0005005	★ 0005005	★ 0005005	★ 0005005	★ 0005005	★ 0005005
5	Valve, Check	*****	*****	*****	*****	*****	*****	*****
6	Retainer, Check Valve	*****	*****	*****	*****	*****	*****	*****
7	Nozzle Ass'y, Check Valve	A007027	A007027	A007027	A007027	A007056	A007056	A007056
8	Shaft Ass'y, Throttle	A011037	A011037	A011062	A011062	A011084	A011085	A011084
9	Lever, Throttle	*****	*****	*****	*****	*****	*****	*****
10	Spring, Throttle Return	0013020	0013020	0013037	0013031	0013020	0013031	0013020
11	Spring, Choke Return	0013021	0013021	0013032	0013032	0013021	0013037	0013021
12	Valve, Throttle	0014025	0014025	0014025	0014025	0014025	0014025	0014025
13	Diaphragm Ass'y, Metering	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013	★● A015013
14	Diaphragm, Pump	★● 0015048	★● 0015048	★● 0015048	★● 0015048	★● 0015048	★● 0015048	★● 0015048
15	Gasket, Metering Chamber	★● 0016042	★● 0016042	★● 0016042	★● 0016042	★● 0016042	★● 0016042	★● 0016042
16	Gasket, Pump	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032
17	Cover Ass'y, Pump	A017008	A017008	A017008	A017008	A017008	A017008	A017015
18	Cover, Pump	*****	*****	*****	*****	*****	*****	*****
19	Valve, Inlet Needle	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004	★ 0018004
20	Spring, Metering Lever	★ 0019012	★ 0019012	★ 0019012	★ 0019012	★ 0019012	★ 0019012	★ 0019012
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028018	0028019	0028018	0028019	0028019	0028019	0028019
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	*****	*****	*****	*****	*****	*****	*****
26	Screw, Main Mixture	0030026	0030026	0030026	0030026	0030058	0030058	0030058
27	Screw, Idle Mixture	0031032	0031032	0031032	0031032	0031061	0031061	0031061
28	Screw, Throttle Adjust	0035014	0035014	0035014	0035014	0035014	0035014	0035014
29	Piece, Friction	0036001	0036001	0036001	0036002	0036001	0036001	0036001
30	Spring, Friction	*****	*****	*****	*****	*****	*****	*****
31	Shaft Ass'y, Choke	*****	*****	A041022	A041022	*****	A041035	*****
32	Valve, Choke	0043022	0043022	0043022	0043022	0043022	0043022	0043022
33	Post	*****	*****	*****	*****	*****	*****	*****
34	Boot	*****	*****	*****	*****	*****	*****	*****
35	Collar	*****	*****	*****	*****	*****	*****	*****
36	Plunger	*****	*****	*****	*****	*****	*****	*****
37	Spring (Plunger Return)	*****	*****	*****	*****	*****	*****	*****
38	Screw (Pin)	14803006	14803006	14803006	14803006	14803006	14803006	14803006
39	Screw (Throttle Valve)	156030055	156030055	156030055	156030055	156030045	156030045	156030045
40	Screw (Choke Valve)	156030045	156030045	156030045	156030045	156030045	156030045	156030045
41	Screw (Post)	*****	*****	*****	*****	*****	*****	*****
42	Screw (Metering Cover)	17103007	17103007	17103007	17103007	17103007	17103007	17103007
43	Screw (Pump Cover)	17004010	17004010	17004010	17004010	17004010	17004010	17104012
44	Screw (Throttle Lever)	*****	*****	*****	*****	*****	*****	*****
45	Ball, Steel	*****	*****	*****	*****	*****	*****	*****
46	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	19500030	19500030
47	E-Ring (Choke Shaft)	19500024	19500024	19500025	19500024	19500024	19500024	19500024
48	E-Ring (Post)	*****	*****	*****	*****	*****	*****	*****
49	O-Ring (Plunger)	*****	*****	*****	*****	*****	*****	*****
50	Boot (Throttle Adj. Screw)	*****	*****	*****	*****	*****	*****	*****
51	Lever, Throttle Adjust	*****	*****	*****	*****	*****	*****	*****
52	Screw (Throttle Adj Lever)	*****	*****	*****	*****	*****	*****	*****
53	Limiter, Mixture (H)	*****	*****	*****	*****	*****	*****	*****
54	Limiter, Mixture (L)	*****	*****	*****	*****	*****	*****	*****
55	Washer (Limiter)	*****	*****	*****	*****	*****	*****	*****
56	Retainer (Limiter)	*****	*****	*****	*****	*****	*****	*****
57	Lever, Choke	*****	*****	*****	*****	*****	*****	*****
58	Washer (Pump)	*****	*****	*****	*****	*****	*****	*****
59	Retainer (Thermostat)	*****	*****	*****	*****	*****	*****	*****
60	Washer (Retainer, Thermostat)	*****	*****	*****	*****	*****	*****	*****
61	Collar, Choke Shaft	*****	*****	*****	*****	*****	*****	*****
62	Screw, Collar Choke Shaft	*****	*****	*****	*****	*****	*****	*****
63	Washer, Post	*****	*****	*****	*****	*****	*****	*****

PARTS LIST

C3A/M TYPE

REF	PART NAME		C3M S23		C3M S24														
	Venturi		17 mm		17 mm														
★	Rebuild Kit		RB-36		RB-36														
●	Gasket & Diaphragm Kit	★	GND-25	★	GND-25														
▲	Cover Kit, Pump		-----		-----														
1	Strainer	★	0004011	★	0004011														
2	Strainer		-----		-----														
3	Strainer		-----		-----														
4	Plug, Welch	★	0005005	★	0005005														
5	Valve, Check		-----		-----														
6	Retainer, Check Valve		-----		-----														
7	Nozzle Ass'y, Check Valve		A007027		A007027														
8	Shaft Ass'y, Throttle		A011037		A011037														
9	Lever, Throttle		-----		-----														
10	Spring, Throttle Return		0013020		0013020														
11	Spring, Choke Return		0013021		0013021														
12	Valve, Throttle		0014025		0014025														
13	Diaphragm Ass'y, Metering	●●	A015013	●●	A015013														
14	Diaphragm, Pump	●●	0015048	●●	0015048														
15	Gasket, Metering Chamber	●●	0016042	●●	0016042														
16	Gasket, Pump	●●	0016032	●●	0016032														
17	Cover Ass'y, Pump		A017015		A017015														
18	Cover, Pump		-----		-----														
19	Valve, Inlet Needle	★	0018004	★	0018004														
20	Spring, Metering Lever	★	0019012	★	0019012														
21	Lever, Metering	★	0020012	★	0020012														
22	Pin	★	0021001	★	0021001														
23	Cover, Metering Chamber		0028019		0028019														
24	Spring, Adjust Screw		0029005		0029005														
25	Spring, Adjust Screw		-----		-----														
26	Screw, Main Mixture		0030026		0030026														
27	Screw, Idle Mixture		0031032		0031032														
28	Screw, Throttle Adjust		0035014		0035014														
29	Piece, Friction		0036001		0036001														
30	Spring, Friction		-----		-----														
31	Shaft Ass'y, Choke		-----		-----														
32	Valve, Choke		0043022		0043022														
33	Post		-----		-----														
34	Boot		-----		-----														
35	Collar		-----		-----														
36	Plunger		-----		-----														
37	Spring (Plunger Return)		-----		-----														
38	Screw (Pin)		14803006		14803006														
39	Screw (Throttle Valve)		156030055		156030055														
40	Screw (Choke Valve)		156030045		156030045														
41	Screw (Post)		-----		-----														
42	Screw (Metering Cover)		17103007		17103007														
43	Screw (Pump Cover)		17104012		17104012														
44	Screw (Throttle Lever)		-----		-----														
45	Ball, Steel		-----		-----														
46	E-Ring (Throttle Shaft)		19500030		19500030														
47	E-Ring (Choke Shaft)		19500024		19500024														
48	E-Ring (Post)		-----		-----														
49	O-Ring (Plunger)		-----		-----														
50	Boot (Throttle Adj. Screw)		-----		-----														
51	Lever, Throttle Adjust		-----		-----														
52	Screw (Throttle Adj Lever)		-----		-----														
53	Limiter, Mixture (H)		-----		-----														
54	Limiter, Mixture (L)		-----		-----														
55	Washer (Limiter)		-----		-----														
56	Retainer (Limiter)		-----		-----														
57	Lever, Choke		-----		-----														
58	Washer (Pump)		-----		-----														
59	Retainer (Thermostat)		-----		-----														
60	Washer (Retainer, Thermostat)		-----		-----														
61	Collar, Choke Shaft		-----		-----														
62	Screw, Collar Choke Shaft		-----		-----														
63	Washer, Post		-----		-----														